

YASKAWA AC Drive

GA700

High Performance Type 200 V Class, 0.4 to 110 kW 400 V Class, 0.4 to 630 kW



Limitless Possibilities

World-class high-performance drive

With the customer's interest always in mind, Yaskawa Electric Corporation leads the industry in developing drives that meet demand with uncompromising quality.

Based on the concepts of versatility, ease of use, and stability, the GA700 new drive series was created to provide the industry's leading and most advanced motor control and ensure continual operation of customer machinery and equipment.

Backed by outstanding performance and total cost reduction, the GA700 helps to improve the added value of our customers' machinery and equipment.

High-performance Motor Control for All Motors

Reduce System Costs
by Incorporating Peripheral Devices

Continuous Operation of Machinery and Equipment with the Predictive Failure Detection Function in Real-Time

Improve Efficiency of Production Management with Sensing Technology and IoT Support



Contents

GA700 provides the best value for your application, whether it is development, design, production technology or after-sales service.

Development/

Design Maximize the Performance P.6-7 of Your Machines **Reduce System Costs** by Incorporating Peripheral P.8-9 Devices Features of GA700 **Continuous Operation** P.10-11 of Machinery and Equipment **Improve Production** EASY P.12-13 Management with IoT **Reduce Machinery and** P.14-15 **Control Panel Footprint Easy Maintenance** P.16-17 DriveWizard P.20 Support from Machinery and Equipment Startup to Maintenance Support Tools DriveWorksEZ P.21 Customize the Drive to Suit Your Needs YASKAWA Drive Cloud **DriveWizard Mobile** P.22-23 Use your smartphone to control everything, from drive startup to monitoring

Production Technology	Maintenance
P.22 Bluetooth LCD Keypad	Improved operability and maintenance
Note: Bluetooth is a trademark of Bluetooth SIG, Inc.	

Features	6
Product Lineup	24
Model Number / Catalog Code	25
Basic Instructions	26
Model Selection	29
Standard Specifications	30
Standard Connection Diagram	34
Terminal Specifications	38
Dimensions	44
Fully-Enclosed Design and Drive Watt Loss Data	50
Peripheral Devices and Options	52
Application Notes	76
Warranty	84
Global Service Network	87

Maximize the Performance of Your Machines

Yaskawa has succeeded in creating a compact motor incorporating its many years of experience in the development of motor control technology. Our products can deliver a performance that exceeds all expectations.


The Industry's Leading and




Stable Drive for High-impact Loads

Equipped with high-performance Open Loop Vector control, the GA700 can achieve a control performance that is almost equivalent to that of an encoder.

■ GA700 (Advanced Open Loop Vector control) ■ Conventional model (Closed Loop Vector control)

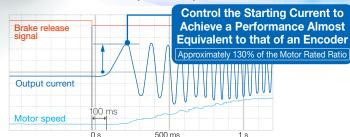

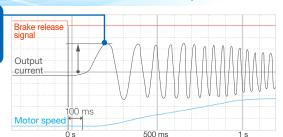



Crane

 Achieve longer service life by controlling the starting current when the brake is released




Vacuum Pump

 Stable drive even during atmospheric release

Speed response with an encoder has been significantly improved to 250 Hz, which is five times that of the conventional model, to achieve even more stable operation.

 Response of PM Closed Loop Vector control and actual rotation speed change with a high-impact load



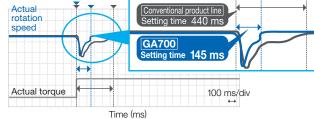



Compressor (Freezer)

- · Stable drive even with residual pressure
- · Startup possible with any refrigerants



Test Equipment


 Achieved high-response and highprecision torque control



590 Hz! Highest of the Industry*1

Achieving high-speed operation with a maximum output frequency of 590Hz*2 with induction motors and PM motors, machines can be made more compact and efficient as gears and belts do not need to be used with motors.



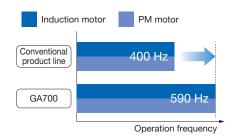



General Processing Machinery

- High precision drive matched with workpieces
- · Reduced number of encoders, gears, and belts
- *1: According to Yaskawa's research (as of September 2018)
- *2: Output frequency is 590 Hz after review of Export Control Order.

Drives All Motors

The GA700 can drive both induction motors and PM motors (IMP/SPM motors) with high performance.

Able to Drive Synchronous Reluctance Motor


With EZ Open Loop Vector control, it is possible to drive a reluctance motor with high energy savings.

A synchronous reluctance motor uses a magnet-less structure to create a low-cost, highly-efficient motor that does not generate secondary current loss.

Maximize Motor Efficiency


Motor efficiency can be improved with new functions that monitor and control power consumption so that it can be reduced as much as possible.

Overall efficiency of the AC drive and motor

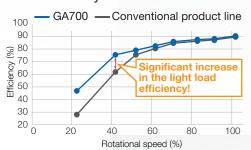

Reduce System Costs by Incorporating Peripheral Devices

To minimize initial investment, the functions of the peripheral devices are incorporated into the GA700. This eliminates the need for these devices, and saves space, wiring, and labor.

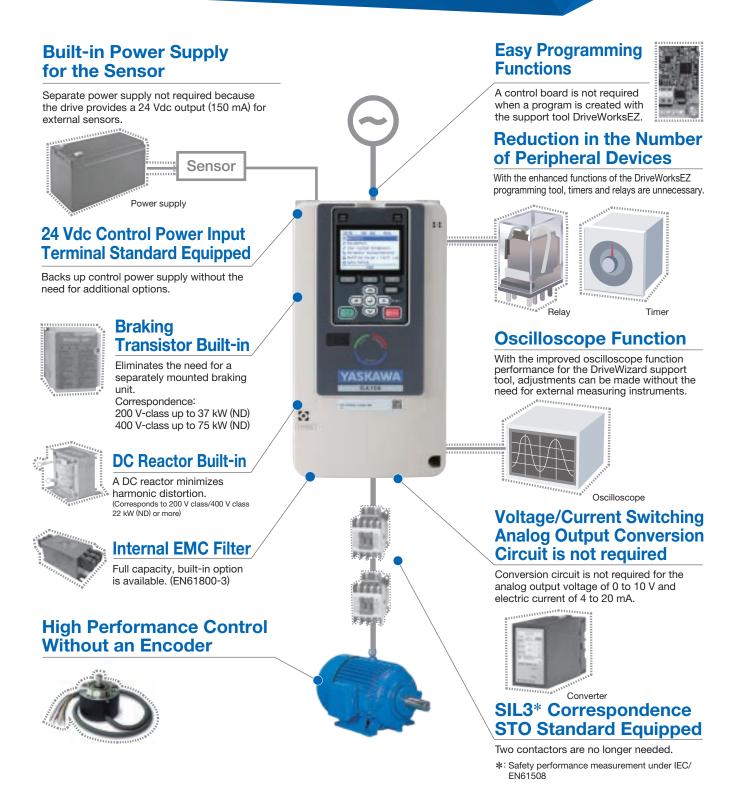

Peripheral Device Functions Incorporated into the Drive

Peripheral device functions are incorporated into the drive to minimize work-hours and the installation area of the control panel.

Note: Refer to page 14 for more information.









Sensing Machinery Operation with the Drive


The operation of machinery and equipment can be easily detected by customizing the drive. Note: The drive must be customized with the visual programming tool DriveWorksEZ.

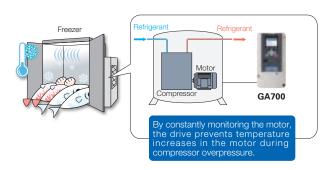

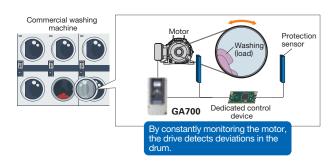

Control Multiple Drives with a Single Communication Option Card

The network protocol for industrial use has been converted to RS-485 to enable control of up to five drives from a single communication option (gateway connection method). We recommend this system for fans, pumps, and compressors that must control multiple drives and do not require fast communication speeds.

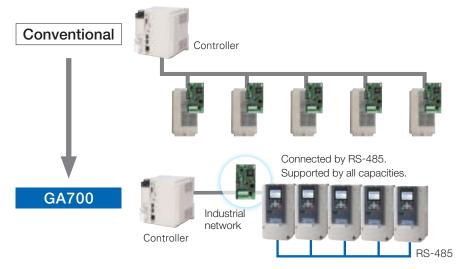


Continuous Operation of Machinery and Equipment

Yaskawa drives contribute to the stable operation and improvement of operating rates with a predictive failure detection by detecting the deterioration of machinery and equipment, as well as a new function that extends service life.

Predictive Failure Detection in Real-Time Using Drives*

The GA700 helps users build machinery and production lines to ensure continuous operation. The drive detects and informs users about unusual operations in machinery and equipment in real-time.

*: Refer to "Predictive Failure Detection with YASKAWA AC Drives (CHEP C710617 38)" for details.

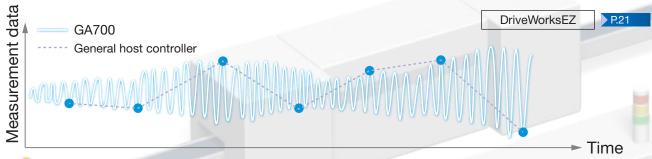



Transport Conveyor

- Belt break
- Drive chain break
- Roller bearing deterioration





Chiller Compressor

Liquid return detection, etc.




−an

- Filter clogging
- Wing damage
- Loose pulley belt



Pump

- Motor bearings
- **Deterioration** of bearings

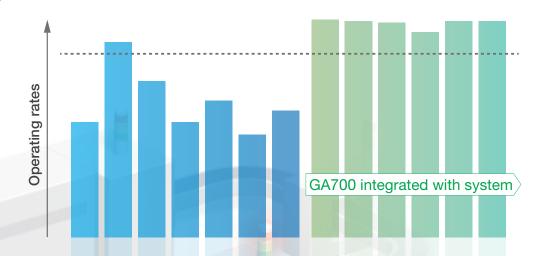


Achieves Stable Operation and Improvement of Operating Rates

Predict Drive Service Life*

The GA700 monitors deterioration of built-in, limited lifetime service parts in real time and notifies users about replacement timing.

*: Refer to "Predictive Failure Detection with YASKAWA AC Drives (CHEP C710617 38)" for details.

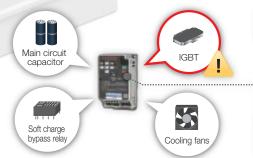

	Predicted service life of component	Replacement					
	Cooling fan	Replacement of cooling fan (By user)					
	Main circuit capacitor	Replacement of components (Please send inquiries to a					
	Soft charge bypass relay	Yaskawa distributor or sales rep.					
	IGBT (Power module)	Drive replacement (Please send inquiries to a Yaskawa distributor or sales rep.)					

Predicts deterioration of essential parts of drives!

Longer Motor Service Life

The GA700 prevents the phenomenon of a reduction in the magnetic force (irreversible demagnetization), which requires replacement with a PM motor, and helps reduce downtime.





Improve Production Management with IoT

Yaskawa drives do more than just drive motors—they also extract data from machines in real time to monitor conditions. They utilize the extracted data to predict potential failures and also connect to the host controllers to share the data so that it improves the efficiency of production management.



Prevent Major Problems Before They Occur

Yaskawa drives can monitor the status of machinery and equipment via the motor.

In addition to sending monitored data to the host, predictive failure detection can be enabled to detect unusual conditions inside the drive.

DriveWorksEZ

P.21





Extracted Data

- · Motor speed, Frequency
- · Power consumption
- · Load current

- ·Torque
- · Motor voltage

etc.



Power consumption

Torque

Access Complete Data on Machinery

Monitored data (current, power consumption, torque, etc.) stored in the drive can be collected and analyzed to enhance the efficiency of production management.

Edge computer (YASKAWA Cockpit*)

*: Software that collects, stores, and analyzes data on facilities and equipment at production sites in real time.

Power consumption

Torque



Connect to Various Host Controllers

The GA700 supports a variety of industrial networks in Japan and around the world, including MECHATROLINK, for connectivity to various host controllers.



Controller













Note: Option card is required.

Communication Options



High-speed Scanning to Analyze Detailed Behavior

Monitored data (current, power consumption, torque, etc.) from the drive can be stored to a microSD card at high speed to be used in for detailed data analysis and investigation of factors when a problem occurs.

DriveWizard


P.20




Reduce Machinery and Control Panel Footprint

The world's top class drive, the GA700, minimizes the installation area of the control panel. By incorporating the functions of peripheral devices, the GA700 achieves the most outstanding results in space savings.

Smaller Control Panel with Integrated Peripheral Device Functions

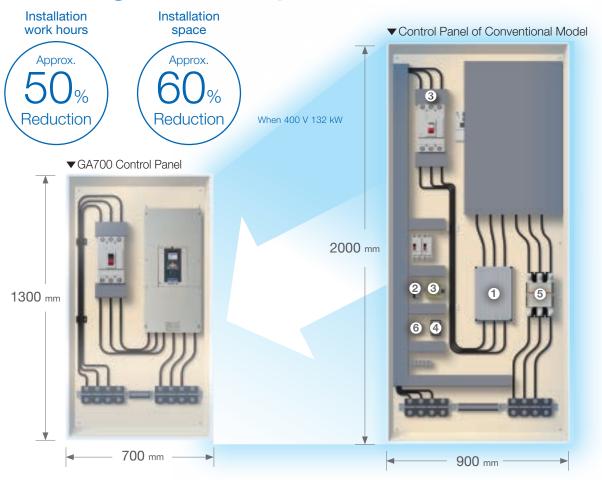

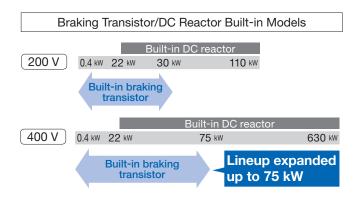

- 1 EMC Filter
- 2 24Vdc Power Supply
- 3 24Vdc Power Supply (150mA)
- 4 Analog output conversion circuit (voltage to current)
- **5** Safety circuit for safety standard (SIL3)
- **6** Timer, relay

Reduced Installation Space

45% reduction in comparison with conventional drives.

You can design a compact control panel.

(ex. 400 V class 110 kW)

Note: The size of the reduced installation space will vary depending on capacity.





IP55* Compatibility Removes Need for Control Panel

Can be installed as a single unit because the protective structure is IP55 compatible.

IP55: The IP Code in JIS must be "dust/jet-proof".

*: Factory option (under development)

Higher Degree of Freedom in Designing Control Panels

External Heatsink


The drive heatsink can be installed outside of the panel, and the control panel can be minimized.

Side-by-Side Installation

Multiple drives can be installed in close proximity (side-by-side installation). The control panel can be designed compactly.



Note: Depending on the capacity, an attachment may be needed Refer to page 51 for more information.

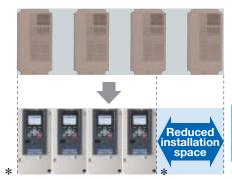

Compatible Models: GA70A2004 to 2082 (200 V

class 0.4 to 18.5 kW (HD)) GA70A4002 to 4044 (400 V class 0.4 to 18.5 kW (HD))

(ex. 200 V class 0.4 kW)


*: At least 30 mm of space is needed if installed near a wall Note: Derating must be considered.

Horizontal Placement

The drive can be installed either vertically or horizontally. The type of installation can be selected depending on the situation, which helps reduce space.

(Applicable up to 18.5 kW (HD) for 200-V class and 30 kW (HD) for 400-V class. Technical documentation is available. Contact a Yaskawa distributor or sales representative for more information.)


Compressor Installation Example

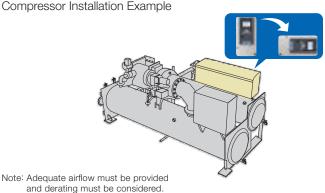

Increase the Degree of I/O Freedom

The DI-A3 input terminal, which is conventionally used as a digital frequency reference card, can also be used as a MFDI terminal. PG option cards and I/O option cards for the 1000 series can also be used.

(Applicable up to 75 kW (HD) for 200 V Class/400 V Class)

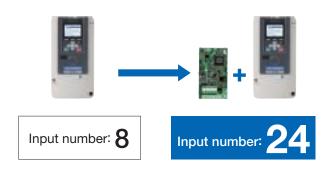

Easy Maintenance

This product lineup comes with a variety of functions to help minimize the time and cost of operations from drive selection to troubleshooting.



Significantly Raise Work **Efficiency with Support Tools**

Setup time can be substantially reduced by connecting the drive to smart phone or PC.


- Write/Read/Manage parameters without main power supply
- Auto-Tuning
- Monitor check (current, torque, etc.)


DriveWizard Mobile P.22-23 DriveWizard




Tuning Possible with Machinery Installed

Easy tuning can be performed even on motors manufactured overseas and motors without information on performance or status with connected machinery to ensure high-performance driving.

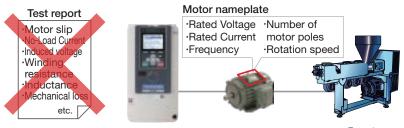

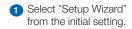

- Select the item you want to set. Follow the instructions on the keypad.
- 3 Check the modified parameters and select 'Next".
- 4 Select "Yes" and settings are complete.

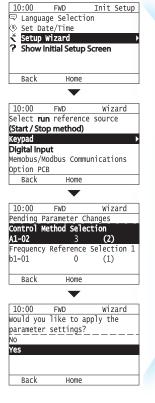



Simply Answer Questions to Set **Parameters**

The GA700 has been equipped with a Setup Wizard. Even first-time users can easily complete initial settings just by answer the questions displayed on the keypad.

Signicant Reduction in Wiring

Easily Switch between Voltage and Current

Parameters Set using the Setup Wizard

Frequency reference source

Acceleration/deceleration time etc.

Run command source

Maximum frequency Stopping method

Input signal level

Function


Motor class


Duty rating Control mode Input/output setting

Analog input (A): 0 to 10V,

4 to 20mA, 0 to 20mA

Analog output (B): 0 to 10V

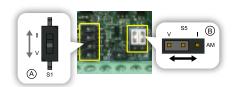

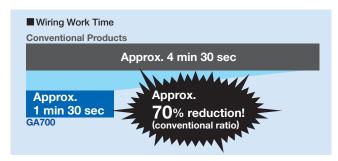

Controllers with 24-V Common **Method Supported**

You can switch between the Sinking mode (NPN) and Sourcing mode (PNP) on the multifunction digital input terminals and between internal and external power supply.

Wiring Reduction

Virtual I/O function can reduce external wiring. This function virtually wires the I/O terminal of the drive internally without actual wires.

European Terminals

Crimp terminals and crimping operation are no longer required, significantly reducing work hours.

Compatible Models:

GA70A2004 to 2211 (200 V class 45 kW (HD))

GA70A4002 to 4168 (400 V class 75 kW (HD))

Note: For use of the tools, see page 39.

Easy Maintenance

This product lineup comes with a variety of functions to help minimize the time and cost of operations from drive selection to troubleshooting.



Closed-Door Operations and Monitoring*1

By installing an LCD keypad on the surface of the control panel, you can operate and monitor the drive installed inside the panel without having to open a door.

★1: Requires compact Keypad Panel Mounting Kit (optional)

- Intuitive operation keys
- Status display visible from a distance




Monitor Performance Life

▼Limited lifetime service parts of drive

Main circuit capacitors | Soft charge bypass relays |

Cooling fans

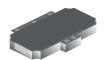








Highly-Reliable Design

- Varnish-Coated Printed Circuit Board (IEC60721-3-3:3C2.3S2)
- Design life of 10 years
- Environment-resistant design (option)
- Resolver Compatible Note: Option card is required.



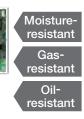

Simple Identification of Faults

The drive operating status (current, frequency, torque, etc.) can be recorded like a dash com. The oscilloscope function of the DriveWizard in the support tool reproduces the recorded data as a waveform and eliminates the need for measuring instruments. This function allows users to check the waveforms before and after a fault occurs and helps analyze causes of failures.



DriveWizard

Quick Response

You can perform recovery work and confirm malfunctions without applying main circuit power.

DriveWizard Mobile P.22-23

Method 1: Supply power from 24Vdc external power supply



Method 2: Supply power from a computer or a smartphone via USB cable*2



*2: A commercially-available USB cable can be used.

Less Downtime

There is no need to reprogram and rewire the replacement drive in the event of failure. Simply replace the control board to instantly and securely replace the drive. You can select various parameter backup methods.

- Standard LCD keypad: Stores the parameters of up to four drives and is equipped with a built-in automatic parameter backup function.
- · Easy replacement just by switching with a removable control circuit terminal block



Support from Machinery and Equipment Startup to Maintenance

Support Tool DriveWizard

Simply connect the drive to a computer with a USB cable to centrally manage the parameters. You can use the oscilloscope function to monitor operations and assist with maintenance.


Simple Connection

- · Connect using a commercially-available **USB** cable (Mini B to Type A)
- Connect even when no power is supplied to the drive

Simple Adjustment

- Read/write drive parameters
- Auto-Tuning
- Visual monitor that is easy to understand at a glance



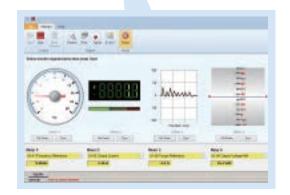


Easy Maintenance

- Use the drive monitor to confirm the status of the machinery
 - · Output frequency (Motor Rotation Speed)
 - · Load Current
 - · Output voltage
 - · Power consumption
 - · Torque
 - · Hours of operation
 - · Maintenance period

Easy Fault Analysis


- Displays the saved data on a microSD card as a waveform
- Displays the drive monitor data as a graph
- Displays the I/O terminal status
- Displays the fault history

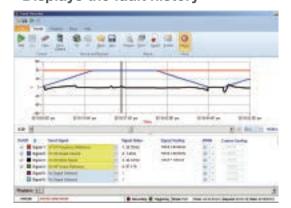

Customize the Drive to Suit Your Needs

Programming Tool DriveWorksEZ

By combining the sensor signal, drive command, and internal monitor input signal with the arithmetic functions (function block) of the drive, the added value can be improved since costs are reduced as a result of adding a predictive failure detection function and integrating peripheral devices.

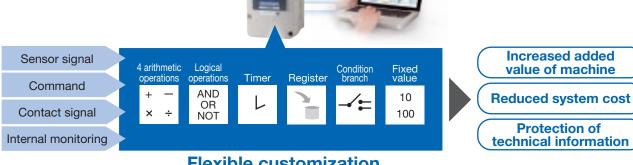


Flexible customization

Other Features

- · Easy program copying: Use the LCD keypad to copy the program and write data to another GA700.
- · Simulation function: Check program operations even without using a drive.

Application Examples

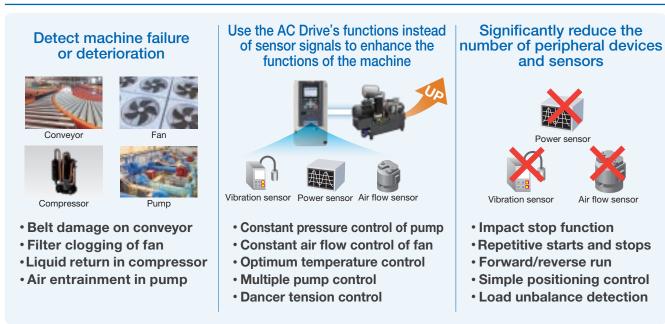

Contact Yaskawa for details on other solutions.

Use a Smartphone to Adjust the Drive and Perform Maintenance

Smartphone App DriveWizard Mobile

Wireless Access with a Smartphone

By installing a Bluetooth integrated keypad (option) to the panel surface, you can remotely access the drive with a smartphone.

Edit parameters, perform operations and check monitored data in real-time.

- Monitor the operation status
- Stop operation and perform tuning
- Check fault history and parameter settings




Web Product Management Service YASKAWA Drive Cloud

Efficient Production Management via the Cloud

By registering the machinery and equipment data or the parameters to a dedicated customer page, you can efficiently perform maintenance of machinery and equipment.



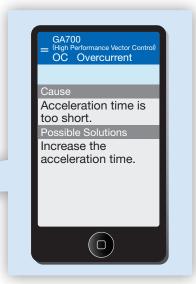

Troubleshooting Screen When an Error Occurs

Users can check details on errors and information on troubleshooting on the screen and quickly recover the drive without using a manual.









Download DriveWizard Mobile for free from the App Store or Google Play. You can also use hyper-links on Yaskawa's product and technical information website (http://www.e-mechatronics.com) to access the App Store and Google Play.

Note: Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries.

App Store is a service mark of Apple Inc.

Google Play and the Google Play logo are trademarks of Google LLC. The "iOS" trademark is used based on the license from Cisco Systems, Inc., USA. QR Code is a registered trademark of DENSO WAVE INCORPORATED. Bluetooth is a registered trademark of Bluetooth SIG, Inc.


Product Lineup

	l	Th	e 2	200 V Class	Three-Phase 400 V Class							
Motor Capacity		Heavy Du	ty	T	Normal Du	uty		Heavy Du	ıty	Ī	Normal Du	uty
kW		Catalog Code GA70A:::	Rated Output		Catalog Code GA70A:::	Rated Output		Catalog Code GA70A:::	Rated Output		Catalog Code GA70A::::	Rated Output
0.4		2004	3.2 A	+				4002	1.8 A			
0.75		2006	5 A	+	2004	3.5 A	H	4004	3.4 A	+	4002	2.1 A
1.1		2008	6.9 A	+	2006	6 A						
1.5		2010	8 A	+	2008	8 A		4005	4.8 A		4004	4.1 A
2.2		2012	11 A	+	2010	9.6 A	+	4007	5.5 A	+	4005	5.4 A
3	H	2018	14 A	+	2012	12.2 A	ł	4009	7.2 A		4007	7.1 A
3.7	H	2021	17.5 A	+	2018	17.5 A	+	4012	9.2 A		4009	8.9 A
5.5	H	2030	25 A	+	2021	21 A	+	4018	14.8 A	+	4012	11.9 A
7.5		2042	33 A	+	2030	30 A		4023	18 A		4018	17.5 A
11		2056	47 A		2042	42 A	+	4031	24 A	_	4023	23.4 A
15		2070	60 A	+	2056	56 A	+	4038	31 A	+	4031	31 A
18.5	H	2082	75 A	+	2070	70 A	+	4044	39 A	+	4038	38 A
22		2110	88 A		2082	82 A	-	4060	45 A	_	4044	44 A
30	H	2138	115 A	+	2110	110 A	+	4075	60 A	+	4060	59.6 A
37	H	2169	145 A	+	2138	138 A	+	4089	75 A	+	4075	74.9 A
45	H	2211	180 A	+	2169	169 A		4103	91 A	-	4089	89.2 A
55	+	2257	215 A	+	2211	211 A		4140	112 A	+	4103	103 A
75		2313	283 A	+	2257	257 A		4168	150 A	+	4140	140 A
90	H	2360	346 A	+	2313	313 A		4208	180 A	-	4168	168 A
110	+	2415	415 A	+	2360	360 A		4250	216 A	+	4208	208 A
132	H			+			+	4296	260 A	+	4250	250 A
160				+			+	4371	304 A	-	4296	296 A
200				+				4389	371 A	-	4371	371 A
220				+				4453	414 A	+	4389	389 A
250				+			+	4568	453 A	-	4453	453 A
315				+			+	4675	605 A	+	4568	568 A
355				+				4726	642 A	+	4675	675 A
400				+				4810	726 A		4726	726 A
450				-				4930	810 A		4810	810 A
500				+							4930	930 A
560				+				4H12	1090 A			
630				+							4H12	1200 A

Note: The GA70A 4726 to GA70A 4H12 are under development.

Model Number

Drives can be customized according to your specifications.

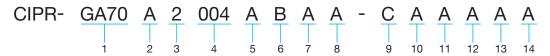

	No.										
No	Description										
1	Product series GA700 series										
2	Region code - A: Japan										
3	Input power supply voltage • 2: 3-Phase AC 200 V Class • 4: 3-Phase AC 400 V Class										
4	Output Current*1										
5	EMC noise filter A: No internal EMC filter (Standard) B: Internal category C3 EMC filter C: Internal category C2 EMC filter*2										
6	Protection Design • B: IP20/UL Open Type • F: IP20/UL Type 1										
7	Environmental specification A: Standard K: Gas-resistant M: Humidity-resistant and dust-resistant P: Humidity-resistant R: Gas-resistant R: Gas-resistant and vibration-resistant T: Oil-resistant T: Oil-resistant and vibration-resistant Note: Drives with these specifications do not guarantee complete protection for the environmental conditions indicated.										
8	Design revision order										
9	Control circuit terminal board										
* 1' Inc	licates the rated output current of the Normal Duty rating rounded off to										

10	Option card (connector CN5-A) A: No option card (Standard) D: Al-A3 (Analog Input) E: DI-A3 (Digital Input) F: SI-C3 (CC-Link) G: SI-ET3 (MECHATROLINK-III) H: SI-N3 (DeviceNet) J: SI-P3 (PROFIBUS-DP) K: SI-T3 (MECHATROLINK-II) M: SI-S3 (CANopen) N: SI-ES3 (EtherCAT) P: SI-EM3 (Modbus TCP/IP) R: SI-EN3 (EtherNet/IP) S: SI-EN3 (PROFINET)
11	Option card (connector CN5-B) · A: No option card (Standard) · B: AO-A3 (Analog Monitor) · C: DO-A3 (Digital Output)
12	Option card (connector CN5-C) A: No option card (Standard) U: PG-B3 (Complementary Type PG) V: PG-X3 (Motor PG Feedback Line Driver Interface) W: PG-F3 (encoder interface (for Endat and HIPERFACE)) Y: PG-RT3 (Motor Feedback Resolver TS2640N321E64 Interface)
13	Keypad A: LCD keypad (Standard)*3 B: LCD keypad (numidity-resistant and dust-resistant)*3 D: Bluetooth LCD Keypad*3 E: Bluetooth LCD Keypad (humidity-resistant and dust-resistant)*3 F: LED keypad*3 G: LED keypad (humidity-resistant and dust-resistant)*3
	Special applications

· A: Standard


· B: High frequency

Ontion card (connector CN5-A)

Description

- *1: Indicates the rated output current of the Normal Duty rating rounded off to the nearest whole number. Refer to Rated Output Current column on page 24 for detailed values.
- *2: Under development
- *3: A separate cable must be purchased to connect the drive and the keypad. Refer to Keypad Extension Cable on page 72 for more details.
 *4: This model is subject to export regulations. Contact Yaskawa for more

Catalog Code

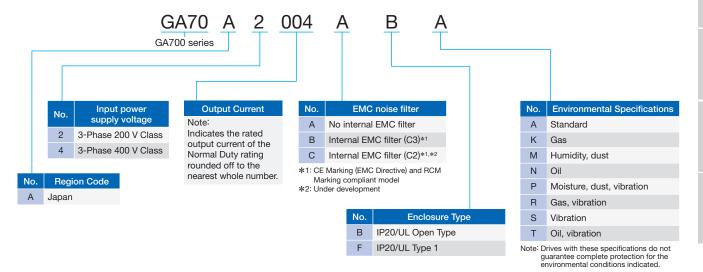

Basic Instructions

Outstanding operability and quick setup

Keypad Names and Functions

1)RUN LED

Lit while the drive is operating the motor.

5ALM LED

The drive lights up if a fault is detected.

Flashes when minor faults, tuning errors and operational errors occur.

⑦LO/RE LED

- Lit: When the keypad is selected for Run command and frequency reference control (LOCAL).
- Off: When a device other than the keypad is selected for Run command and frequency reference control (REMOTE).
- **10**LED Status Ring The corresponding lamp lights depending on the operation status.
- **4 RUN Key** Starts the drive in LOCAL mode.
- **6 LO/RE Selection Key** Switches drive control between the keypad (LOCAL) and an external source (REMOTE) for the Run command and frequency reference.
- **®STOP Key** Stops drive operation.

For connecting to a PC (DriveWizard or DriveWorksEZ), a USB copy unit or a LCD keypad.

①QR code

Import the dedicated smartphone application "DriveWizard Mobile" and use it to retrieve product information.



②Function Keys: F1, F2, F3

The functions of the function key depend on the menu that is being displayed. The name of each function appears in the lower half of the display window.

3 Display Operation Keys:

LEFT Arrow Key

- Moves the cursor to the left.
- Returns to the previous screen.

UP Arrow Key / **DOWN Arrow Key**

- Scrolls up to display the next item.
- Scrolls down to display the previous item.
- Selects parameter numbers.
- Increments setting values.
- · Decrements setting values.

RIGHT Arrow (RESET) Key

- Moves the cursor to the right.
- Proceeds to the next screen.
- Resets the drive to clear a fault.
- Used as the start key in Auto-Tuning Mode.

ENTER Key


- Inputs parameter numbers and setting values. Press to enter values, edit parameters and set the control mode.
- Switches between displays with selection of menu items.

Note: QR code is a registered trademark of DENSO WAVE INCORPORATED.

Keypad LED

Indicator LED	Lit	Flashing	Flashing Quickly	OFF		
RUN	Motor running.	The motor is performing ramp to stop. The Run command was inputted when the frequency reference was 0 Hz	With a Run command inputted from an external command when the Run command source was in LOCAL, the Run command source switched to REMOTE. When the drive was not in the Drive Ready (READY) state, a Run command was inputted from an external command. An emergency stop command has been inputted. The Safe Disable input function was running and the drive output was shut off. When the Run command source was REMOTE, the STOP key on the keypad was pressed and the motor was stopped. The power supply for the drive is turned on when the Run command is inputted from an external source.	Drive is stopped.		
ALM	A fault was detected.	Minor fault was detected. Operation error was detected. Auto-Tuning was detected.	-	Normal operation		
LORE	Sets the Run command source to the keypad (LOCAL).	-	-	Sets the Run command source to a non-keypad external command (REMOTE).		
⊣ow the F	RUN LED works:	Drive output frequency —	6 Hz	UN STOP		


LED Status Ring

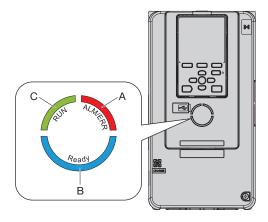


	LED Status Ring	State	Content						
		Lit	The drive detected a fault.						
Α	ALM/ERR ALM/ERG Ready	Flashing	The drive has detected: • An error • An oPE • An error during Auto-Tuning. Note: If the drive detects a fault and an error at the same time, this LED will be lit to indicate the fault.						
		OFF	The drive is in normal operation. There are no alarms of faults present.						
	Ready	Lit	The drive is operating or is ready for operation.						
	ALALAN ALALAN	Flashing	When the drive is in STo [Safe Torque Off] mode. The drive is in STo [Safe Torque Off] mode.						
В	Ready	OFF	 The drive detected a fault. There is no fault and the drive received an operation command, but the drive cannot operate (such as when in Programming Mode, or when is flashing). 						
	RUN	Lit	The drive is in regular operation.						
	ALM ALMER DE	Flashing	 The drive is decelerating to stop. The drive was issued a Run command and the frequency reference is 0 Hz. A DC injection braking command is input via a multi-function digital input terminal while the drive is stopped. 						
С	regus	Flashing Quickly	 Entering a Run command via the input terminals, then switching to REMOTE while the drive is set to LOCAL. Entering a Run command via the input terminals when the drive is not in Drive Mode. Entering a Fast Stop command. The safety function shuts off the drive output. Pushing STOP on the keypad while the drive is running in REMOTE mode. Setting b1-17 = 0 [Run Command at Power Up = Accept existing RUN command] and powering up the drive while the Run command is active. 						
		OFF	The motor is stopped.						

Basic Instructions (continued)

Keypad Example

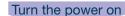

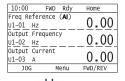












Mode Drive

Home

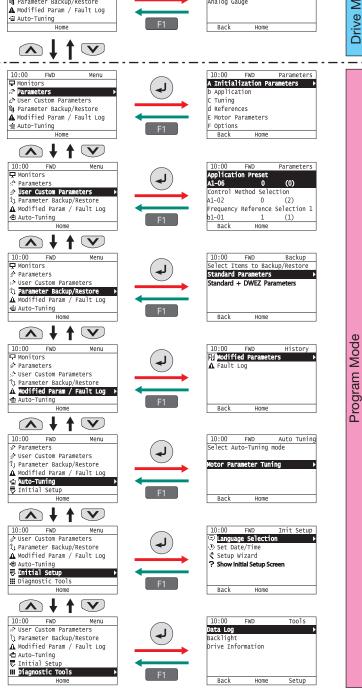

- Energizing the drive with factory defaults will display the initial start-up screen. Press F2 Key (Home) to display the HOME screen. -To prevent the drive from displaying the initial start-up screen, Select [No] from the [Show Initial Setup Screen] setting.
- Press Left Arrow Key from the Home screen to display the monitors.
- When U1-01 [Freq. Reference] is displayed on the Home screen in LOCAL mode, press ENTER Key to change parameter d1-01 [Frequency Referencel.
- The keypad will display [Rdy] when the drive is in Drive Mode and ready to accept a Run command.
- The drive will not accept a Run command while in Programming Mode. Set b1-08 [Run Command Select in PRG Mode] to accept or reject a Run command from an external source while in Programming Mode. -Set b1-08 = 0 [Do not accept RUN at Programming] (default) to reject the Run command from an external source while in Programming Mode. -Set b1-08 = 1 [Accept RUN while Programming] to accept the Run command from an external source while in Programming Mode. -Set b1-08 = 2 [Allow Programming only at Stop] to block changes from Drive Mode to Programming Mode while the drive is in operation.

Model Selection

Optimizing Control for Each Application

GA700 offers two separate performance ratings: Heavy Duty and Normal Duty.

Heavy Duty is capable of creating more powerful torque, while Normal Duty allows the drive to operate a larger motor.

Difference between load ratings:

	Heavy Duty Rating	Normal Duty Rating
Parameter settings	C6-01=0 (default)	C6-01=1
Overload tolerance	150% 60s	110% 60s
Carrier frequency	Low carrier frequency	Low carrier frequency (SwingPWM) *

*: Use Swing PWM to quiet undesirable motor noise generated when operating with a low carrier frequency. Available for models less than 450 kW.

Heavy Duty Applications

Applications














Selecting a Drive

For a conveyor application using an 11 kW motor, select GA70A2056 and set it for Heavy Duty performance (C6-01=0: default).

Catalog code: GA70A2056

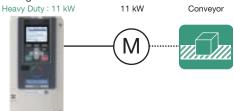

Normal Duty Applications

Applications








Selecting a Drive

For a fan application using a 11 kW motor, select GA70A2042 and set it for Normal Duty performance (C6-01=1).

Catalog code: GA70A2042

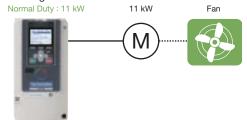

Standard Specifications

Parameter C6-01 sets the drive for Heavy Duty (default) or Normal Duty performance.

200 V Class HD: Heavy Duty, ND: Normal Duty Catalog Code GA70A2[] 004 006 800 010 012 018 021 030 042 056 070 110 138 169 360 415 0.75 1.5 37 5.5 Max. Applicable HD 0.4 11 22 3 7.5 11 15 18.5 22 30 37 45 55 75 90 110 Motor Capacity*1 ND 0.75 11 1.5 22 3 37 5.5 75 11 15 18.5 22 30 37 45 55 75 90 110 Rated Input HD 3.6 4.8 6.7 8.9 12.7 17 20.7 30 40.3 58.2 78.4 96 82 111 136 164 200 271 324 394 Input ND 4.8 6.7 8.9 12.7 17 20.7 30 40.3 52 78.4 96 271 114 111 136 164 200 324 394 HD 3.2 5 6.9 8 11 14 17.5 25 33 47 60 75 88 115 145 180 215 283 346 415 Rated Output Α 9.6 12.2 17.5 ND 3.5 6 8 21 30 42 70 110 211 257 313 Current 56 82 138 169 360 · HD Rating: 150% of rated output current for 60 s · ND Rating: 110% of rated output current for 60 s Overload Tolerance Note: Derating may be required for applications that start and stop frequently. Derating the output current enables a Derating the output current enables a maximum of 15 kHz to be set. maximum of 10 kHz to be set. Output Carrier Frequency (Derating the output current is not necessary for an ND rating of 2 kHz and an HD (Derating the output current is not rating up to 8 kHz.) necessary for an ND rating of 2 kHz and an HD rating up to 5 kHz.) Three-phase 200 to 240 V Max. Output Voltage Note: The maximum output voltage is proportional to the input voltage. Max. Output Frequency The frequencies that can be set vary depending on the control mode used. Measures DC Reactor External options Built-in Harmonics Braking **Braking Transistor** Built-in External options **Function FMC** filter EMC filter Internal (factory option) EN61800-3, C2/C3 \cdot Three-phase AC power supply 200 V to 240 V $\,$ 50/60 Hz \cdot DC power supply 270 V to 340 V $\,$ Rated Voltage/ Rated Frequency Allowable Voltage Fluctuation Power Allowable Frequency ±5% Fluctuation HD 1.5 2.0 2.8 3.7 5.3 7.1 8.6 12.5 16.8 24.2 32.6 39.9 34.1 46.1 56.5 68.2 83.1 113 135 164 KVA ND 2.0 2.8 3.7 5.3 7.1 8.6 12.5 16.8 21.6 32.6 39.9 47.4 46.1 56.5 68.2 83.1 113 135 164

^{*1:} The rated output current of the drive output amps should be equal to or greater than the motor rated current.

^{*2:} Rated input capacity is calculated with a power line voltage of 240 V.

400 V Class HD: Heavy Duty, ND: Normal Duty

Catalog Code GA70A4∐			002	004	005	007	009	012	018	023	031	038	044	060	075	089	103
Max. Applicab	Max. Applicable HD		0.4	0.75	1.5	2.2	3.0	3.7	5.5	7.5	11	15	18.5	22	30	37	45
Motor Capacity	y*1 Kvv	ND	0.75	1.5	2.2	3.0	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55
Input	Rated Input A	HD	1.9	3.5	4.7	6.7	8.9	11.7	15.8	21.2	30.6	41.3	50.5	43.1	58.3	71.5	86.5
Прис	Current	ND	2.5	4.7	6.7	8.9	11.7	15.8	21.2	30.6	41.3	50.5	59.7	58.3	71.5	86.5	105
	Rated Output A	HD	1.8	3.4	4.8	5.5	7.2	9.2	14.8	18	24	31	39	45	60	75	91
	Current	ND	2.1	4.1	5.4	7.1	8.9	11.9	17.5	23.4	31	38	44	59.6	74.9	89.2	103
	Overload Tolerance)	· ND Ra	 HD Rating: 150% of rated output current for 60 s ND Rating: 110% of rated output current for 60 s Note: Derating may be required for applications that start and stop frequently. 													
Output	Carrier Frequency		Deratin	Derating the output current enables a maximum of 15 kHz to be set. (Derating the output current is not necessary for an ND rating of 2 kHz and an HD rating up to 8 kHz.)													
	Max. Output Voltage			Three-phase 380 to 480 V Note: The maximum output voltage is proportional to the input voltage.													
	Max. Output Frequency																
Measures for Harmonics	DC Beactor			External options Built-in													
Braking Function	Braking Transistor	Braking Transistor Built-in															
EMC filter	EMC filter EN61800-3, C2/C3	EMC filter EN61800-3, C2/C3 Internal (factory option)															
	Rated Voltage/ Rated Frequency			-phase <i>A</i> ower sup			y 380 V 9 V	to 480 V	50/60	Hz							
Dames	Allowable Voltage Fluctuation			o 10%													
Power	Allowable Frequence Fluctuation	су	±5%														
	Power	HD	1.5	2.8	3.7	5.3	7.1	9.3	13	17	24	33	40	34	46	57	69
	Supply*2 kVA	ND	2.0	3.7	5.3	7.1	9.3	13	17	24	33	40	48	46	57	69	84

(Catalog Code GA70A4:::	140	168	208	250	296	371	389	453	568	675		
	Max. Applicable _{kW} HD		55	75	90	110	132	160	200	220	250	315	
Motor Capacit	y*1	ND	75	90	110	132	160	200	220	250	315	355	
Input	Rated Input A	HD	105	142	170	207	248	300	373	410	465	584	
pat	Current	ND	142	170	207	248	300	373	410	465	584	657	
	Rated Output A	HD	112	150	180	216	260	304	371	414	453	605	
	Current	ND	140	168	208	250	296	371	389	453	568	675	
	Overload Tolerance		 HD Rating: 150% of rated output current for 60 s ND Rating: 110% of rated output current for 60 s Note: Derating may be required for applications that start and stop frequently. 										
Output	Carrier Frequency		set. (Derating	Derating the output current enables a maximum of 10 kHz to be set. (Derating the output current is not necessary for an ND rating of 2 kHz and an HD rating up to 5 kHz.) Derating the output current enables a maximum of 5 kHz to be set. (Derating the output current is unnecessary for ND/HD rating up to 2 kHz)									
	Max. Output Voltage			Three-phase 380 to 480 V Note: The maximum output voltage is proportional to the input voltage.									
	Max. Output Frequency												
Measures for Harmonics	DC Reactor		Built-in										
Braking Function	Braking Transistor		Built-in		External	options							
EMC filter	MC filter EN61800-3, C2/C3			Internal (factory ontion)									
	Rated Voltage/ Rated Frequency				power su y 513 V to		V to 480	V 50/60 H	Ηz				
Danner	Allowable Voltage Fluctuation		-15% to	10%									
Power	Allowable Frequence Fluctuation	у	±5%										
	Power Supply*2 kVA	HD ND	84 113	113 136	136 165	165 198	198 239	239 297	297 327	327 370	370 465	465 523	

^{\$}1: The rated output current of the drive output amps should be equal to or greater than the motor rated current. \$2: Rated input capacity is calculated with a power line voltage of 480 V.

Standard Specifications

Common Specifications

Item	Specifications Specifications
Control Method	The following controls are selected by parameters. V/f Control Closed Loop V/f Control Open Loop Vector Control Closed Loop Vector Control Advanced Open Loop Vector Control Open Loop Vector Control for PM Advanced Open Loop Vector Control for PM Closed Loop Vector Control for PM EZ Open Loop Vector Control for PM
Maximum Output Frequency	 Advanced Open Loop Vector Control, EZ Open Loop Vector Control: 120 Hz Closed Loop V/f Control, Closed Loop Vector Control, Advanced Open Loop Vector Control for PM, Closed Loop Vector Control for PM: 400 Hz V/f Control, Open Loop Vector Control, Open Loop Vector Control for PM: 590 Hz
Frequency Accuracy (Temperature Fluctuation)	Digital reference: within $\pm 0.01\%$ of the max. output frequency (-10°C to +40°C) Analog reference: within $\pm 0.1\%$ of the max. output frequency (25°C ± 10 °C)
Frequency Setting Resolution	Digital reference: 0.01 Hz Analog reference: 1/2048 of the maximum output frequency setting (11 bit plus sign)
Output Frequency Resolution	0.001 Hz
Frequency Setting Resolution	Main frequency reference: -10 to +10 Vdc, 0 to 10 Vdc (20 k Ω), 4 to 20 mA (250 Ω), 0 to 20 mA (250 Ω) Main speed reference: Pulse train input (max. 32 kHz)
Starting Torque	· V/f Control: 150%/3 Hz · Closed Loop V/f Control: 150%/3 Hz · Open Loop Vector Control: 200%/0.3 Hz*1 · Closed Loop Vector Control: 200%/0 min ^{-1*1} · Advanced Open Loop Vector Control: 200%/0.3 Hz*1 · Open Loop Vector Control for PM: 100%/5% speed · Advanced Open Loop Vector Control for PM: 200%/0 min ^{-1*1} · Closed Loop Vector Control for PM: 200%/0 min ^{-1*1} · EZ Open Loop Vector Control: 100%/1% speed
	Note: To achieve specifications listed for Advanced Open Loop Vector Control for PM; Set n8-57 to 1 (High frequency injection is enabled), and perform Rotational Auto-Tuning to drive a non-Yaskawa PM motor.
Speed Control Range	 V/f Control 1:40 Closed Loop V/f Control 1:40 Open Loop Vector Control 1:200 Closed Loop Vector Control 1:1500 Advanced Open Loop Vector Control 1:200 Open Loop Vector Control for PM 1:20 Advanced Open Loop Vector Control for PM 1:100 Closed Loop Vector Control for PM 1:1500 EZ Open Loop Vector Control 1:100 Note: 1. To achieve specifications listed for Advanced Open Loop Vector Control for PM; Set n8-57 to 1 (High frequency injection is enabled), and perform Rotational Auto-Tuning to drive a non-Yaskawa PM motor.
	Advanced Open Loop Vector Control for PM 1:100 is valid in the momentary operation region.When using the motor continuously, it is necessary to consider the capacity of the GA700 and the motor.
Zero Speed Control	Possible in Closed Loop Vector Control, Advanced Open Loop Vector Control for PM, and Closed Loop Vector Control for PM. Parameter settings allow separate limits in four quadrants in Open Loop Vector Control, Closed Loop Vector Control,
Torque Limit	Advanced Open Loop Vector Control, Advanced Open Loop Vector Control for PM, Closed Loop Vector Control for PM, and EZ Open Loop Vector Control.
Accel/Decel Time	0.0 s to 6000.0 s The drive allows four selectable combinations of independent acceleration and deceleration settings.
	Approx. 20% Approx. 125% with a dynamic braking option · Short-time average deceleration torque Motor capacity 0.4/0.75 kW: over 100% Motor capacity 1.5 kW: over 50% Motors 2.2 kW and larger: over 20%, Overexcitation Braking / High Slip Braking allow for approx. 40% · Continuous regenerative torque: Approx. 20%. Dynamic braking option allows for approx. 125%, 10% ED, 10 s
Braking Torque	Note: 1. Catalog codes GA70□2004 to 2138 and 4002 to 4168 have a built-in braking transistor. 2. Set L3-04 = 0 [Stall Prevention during Decel = Disabled] when using a regenerative converter, regenerative unit, braking unit, braking resistor, or braking resistor unit. The drive could possibly not stop within the specified deceleration time when L3-04 = 1 [General Purpose](default). 3. Short-time deceleration torque refers to the torque required to decelerate the motor (uncoupled from the load) from the rated speed to zero. Actual specifications may vary depending on motor characteristics. 4. Continuous regenerative torque and short-time deceleration torque for motors 2.2 kW and larger vary depending on motor characteristics.
V/f Characteristics	Select from 15 predefined V/f patterns, or a user-set V/f pattern.
Main Control Functions	Torque Control, Droop Control, Speed/Torque Control switch, Feed Forward Control, Zero Servo Control, Momentary Power Loss Ride-Thru, Speed Search, Overtorque detection, torque limit, 17 Step Speed (max.), accel/decel switch, S-curve accel/decel, 3-wire sequence, Auto-Tuning (rotational, stationary), Dwell, cooling fan on/off switch, slip compensation, torque compensation, Frequency Jump, Upper/lower limits for frequency reference, DC Injection Braking at start and stop, Overexcitation Deceleration, High Slip Braking, PID control (with Sleep function), Energy Saving Control, MEMOBUS/Modbus (RTU mode) Communications (RS-485/422, max. 115.2 kbps), Fault Restart, Application Presets, DriveWorksEZ (customized functions), Parameter Backup Function, Online Tuning, KEB, Overexcitation Deceleration, Inertia Tuning and ASR Tuning, Overvoltage Suppression, High Frequency Injection, etc.

	Item	Specifications Specification Sp
Environment Protection Function	Motor Protection	Motor overheat protection based on output current
	Momentary Overcurrent Protection	Drive stops when output current exceeds 200%*2 of the HD output current.
	Totection	Drive stops after 60 s at 150% of rated HD output current and at 110% of rated ND output current.
	Overload Protection	Note: The drive may trigger the overload protection function at 150% of the drive rated output in under 60 s if the output frequency is less than 6 Hz.
	Overvoltage Protection	200 V class: Stops when DC bus exceeds approx. 410 V 400 V class: Stops when DC bus exceeds approx. 820 V
	Undervoltage Protection	200 V class: Stops when DC bus falls below approx. 190 V 400 V class: Stops when DC bus falls below approx. 380 V
	Momentary Power Loss Ride-Thru	Stops when power loss is longer than approximately 15 ms (default setting). Continues operation if power loss is shorter than 2 s (depending on parameter settings). Note: 1. Stop time may be shortened depending on the load and motor speed. 2. Continuous operation time varies by drive capacity. Catalog codes 2004 to 2056 and 4002 to 4031 require a Momentary Power Loss Recovery Unit to continue operation through a 2 s power loss.
	Heatsink Overheat Protection	Thermistor
	Braking Resistance Overheat Protection	Overheat sensor for braking resistor (optional ERF type, 3% ED)
	Stall Prevention	Stall prevention during acceleration/deceleration and constant speed operation
	Ground Fault Protection	Protection by electronic circuit Note: Protection may not be provided under the following conditions as the motor windings are grounded internally during run: Low resistance to ground from the motor cable or terminal block. Drive already has a short-circuit when the power is turned on.
	Charge LED	Charge LED remains lit until DC bus has fallen below approx. 50 V
	Area of Use	Indoors Chemical gas: IEC60721-3-3: 3 C2 Solid particle: IEC60721-3-3: 3 S2
	Power Supply	Overcurrent Category III
	Ambient Temperature	IP20/UL Open Type: -10°C to +50°C IP20/UL Type 1: -10°C to +40°C • Do not use the drive in a location where the temperature changes suddenly to improve the drive reliability. • When installing the drive in an enclosure, use a cooling fan or air conditioner to keep the internal air temperature in the permitted range. • Do not let the drive freeze. • To install IP20/UL Open Type drives in areas with ambient temperatures ≤ 60°C, derate the output current. • To install IP20/UL Type 1 drives in areas with ambient temperatures ≤ 50°C, derate the output current.
	Humidity	95% RH or less (no condensation)
	Storage Temperature	Short-term temperature during transportation is -20° C to +70° C
	Surrounding Area	Pollution degree 2 or less Install the drive in an area without: Oil mist, corrosive or flammable gas, or dust Metal powder, oil, water, or other unwanted materials Radioactive materials or flammable materials, including wood Harmful gas or fluids Salt Direct sunlight Keep wood or other flammable materials away from the drive.
	Altitude	1000 m or less*3
	Shock	· 10 Hz to 20 Hz, 1 G (9.8 m/s²) · 20 Hz to 55 Hz, Catalog code GA70A2004 to 2211, 4002 to 4168: 0.6 G (5.9 m/s²), Catalog code GA70A2257 to 2415, 4208 to 4675: 0.2 G (2.0 m/s²)
Standards Compliance		Catalog code GA70A2237 to 2415, 4208 to 4675. 0.2 G (2.0 m/s²) - UL61800-5-1 - EN61800-3:2004+A1:2012 - IEC/EN61800-5-1 - Two Safe Disable inputs and 1EDM output according to ISO/EN13849-1 Cat.3 PLe, IEC/EN61508 SIL3 Note: Used by setting functions to multi-function digital output terminals RCM** - EAC** - CSA** [Ship Classification Standards] - NK** - DNV GL** - LR** - ABS** - ABS** - BV** - KR** - KR**
Protection Design		IP20/UL Open Type, IP20/UL Type 1 Note: Install a UL Type 1 kit on an IP20/UL Open Type drive to convert the drive to IP20/UL Type 1.
★1: Increase the drive and motor capacities.		

^{*1:} Increase the drive and motor capacities.

^{*2: 200%} is the target value. The value varies depending on the capacity.
*3: Altitudes over 1000 m and up to 4000 m are possible by derating the output current by 1% for every 100 m.

Contact a Yaskawa representative or salesperson for more information. *4: Planning


Note: 1. Perform Rotational Auto-Tuning to achieve specifications listed for Open Loop Vector Control and Advanced Open Loop Vector Control.

2. Install the drive in an environment matching the specifications in the table above for optimum performance life.

Standard Connection Diagram

Standard Connection Diagram

Multi-Function Photocoupler Output Type C (Standard)

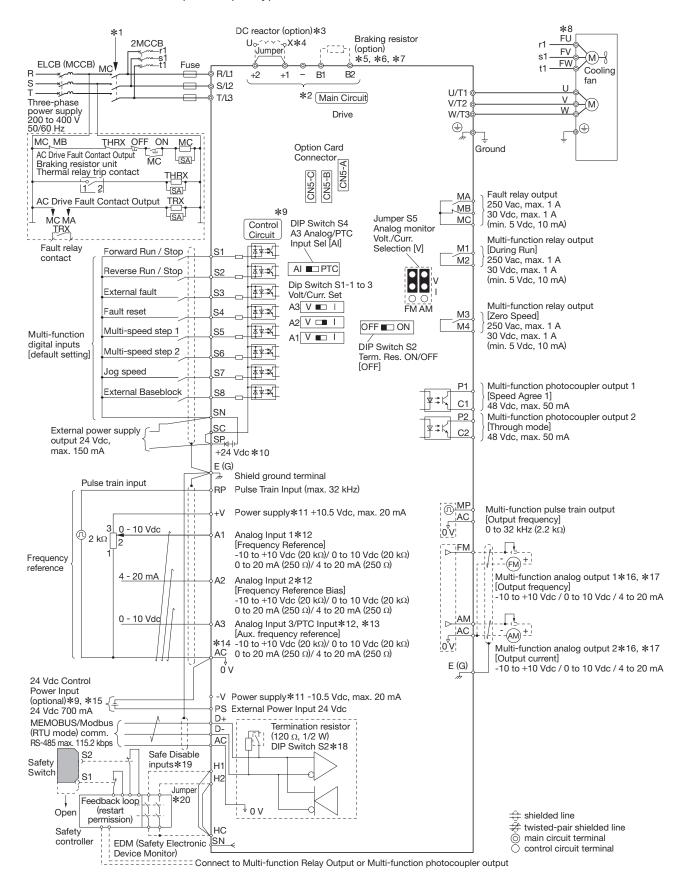

- *1: We recommend that the sequence that de-energizes the power supply be set via the fault relay output for the drive. When using the Fault Restart function, if L5-02 = 1 [Fault Contact at Restart Select = Always Active], the fault signal is output during Restart Enabled and the power supply will turn OFF. Be careful when using a cut-off sequence. The default setting for L5-02 is 0 [Active Only when Not Restarting].
- *2: Terminals -, +1, +2, B1 and B2 are the optional connection terminals. Do not connect an AC power supply to terminals -, +1, +2, B1, and B2. Failure to obey can cause damage to the drive and peripheral devices.
- *3: Be sure to remove the jumper between terminals +1 and +2 when installing a DC reactor (option).
- *4: Catalog codes GA70A2110 to 2415 and 4060 to 4675 have a built-in DC reactor.
- *5: Be sure to set L8-55 = 0 [Internal DB Transistor Protection = Disable] when using an optional regenerative converter, regenerative unit, or braking unit. Leaving L8-55 = 1 [Protection Enabled] can cause rF [Braking Resistor
- *6: Set L3-04 = 0 [Stall Prevention during Decel = Disabled] when connecting a regenerative converter, regenerative unit, braking unit, braking resistor, or braking resistor unit. If L3-04 = 1 [Enabled] (default setting), the drive may not stop within the designated deceleration time.
- *7: When using a braking resistor (ERF type), set L8-01 = 1 [3% ERF DB Resistor Protection = Enabled] and be sure to use a sequence that shuts the power off by using the fault relay output for the drive.
- *8: Self-cooling motors do not require the wiring for the motors with cooling
- ★9: Connect a 24 V power supply to terminals PS-AC to operate the control circuit while the main circuit power supply is OFF. *10: Use a wire jumper between terminals SC and SP or SC and SN to set the
- multi-function digital input power supply to SINK Mode, SOURCE Mode, or External power supply. Do not short circuit terminals SP and SN. Failure to obey will cause damage to the drive.
 - SINK Mode: Install a jumper between terminals SC and SP. Do not short circuit terminals SC and SN. Failure to obey will cause damage to the drive.
 - SOURCE Mode: Install a jumper between terminals SC and SN. Do not short circuit terminals SC and SP. Failure to obey will cause
 - · External power supply: Remove the jumper between terminals SC-SN and terminals SC-SP.


- *11: The output current capacity of the +V and -V terminals on the control circuit is 20 mA. Do not install a jumper between terminals +V. -V. and AC. Failure to obey can cause damage to the drive.
- *12: DIP switches \$1-1 to \$1-3 set terminals A1 to A3 for voltage or current input. The default setting for S1-1 and S1-3 is voltage input ("V" side). The
- default setting for S1-2 is current input ("1" side).

 *13: DIP switch S4 sets terminal A3 for analog or PTC input. Set DIP switch S1-3 to the "V" side, and set H3-05 = 0 [Terminal A3 Signal Level Select = 0 to 10 V (Lower Limit at 0)] to set terminal A3 for PTC input with DIP switch S4.
- *14: Do not ground the control circuit terminals AC or connect them to the drive. Failure to comply may cause malfunction or failure. *15: Connect the 24 V line of the 24 V control power supply input to terminal
- PS, and the 0 V line to terminal AC. Do not connect reverse terminals PS and AC. Failure to obey will cause damage to the drive.
- *16: Use multi-function analog monitor outputs with analog frequency meters, ammeters, voltmeters, and wattmeters. Do not use monitor outputs with feedback-type signal devices.
- \$17: Jumper switch S5 sets terminal FM and AM for voltage or current output. The default setting is voltage output ("V" side). *18: Set DIP switch S2 to "ON" to enable the termination resistor in the last
- drive in a MEMOBUS/Modbus (RTU mode) network.
- *19: Use only SOURCE Mode for Safe Disable input.
- *20: Disconnect the wire jumper between H1 and HC, and H2 and HC to use the Safe Disable input.

Standard Connection Diagram

Standard Connection Diagram

Multi-Function Digital Output Type A (Factory Option)

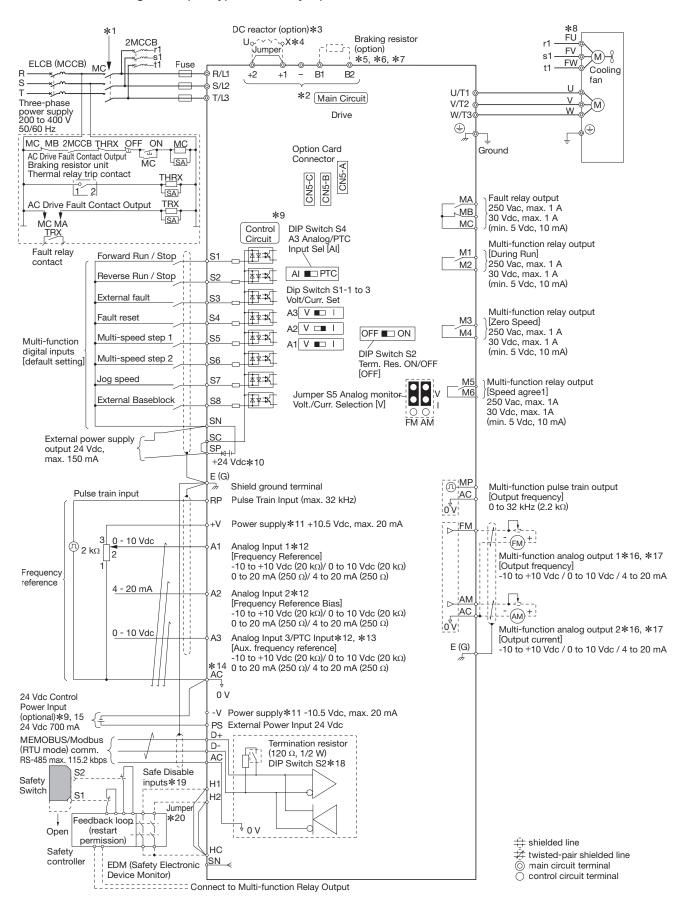

- *1: We recommend that the sequence that de-energizes the power supply be set via the fault relay output for the drive. When using the Fault Restart function, if L5-02 = 1 [Fault Contact at Restart Select = Always Active], the fault signal is output during Restart Enabled and the power supply will turn OFF. Be careful when using a cut-off sequence. The default setting for L5-02 is 0 [Active Only when Not Restarting].
- *2: Terminals -, +1, +2, B1 and B2 are the optional connection terminals. Do not connect an AC power supply to terminals -, +1, +2, B1, and B2. Failure to obey can cause damage to the drive and peripheral devices.
- *3: Be sure to remove the jumper between terminals +1 and +2 when installing a DC reactor (option).
- *4: Catalog codes GA70A2110 to 2415 and 4060 to 4675 have a built-in DC reactor.
- *5: Be sure to set L8-55 = 0 [Internal DB Transistor Protection = Disable] when using an optional regenerative converter, regenerative unit, or braking unit. Leaving L8-55 = 1 [Protection Enabled] can cause rF [Braking Resistor
- *6: Set L3-04 = 0 [Stall Prevention during Decel = Disabled] when connecting a regenerative converter, regenerative unit, braking unit, braking resistor, or braking resistor unit. If L3-04 = 1 [Enabled] (default setting), the drive may not stop within the designated deceleration time.
- *7: When using a braking resistor (ERF type), set L8-01 = 1 [3% ERF DB Resistor Protection = Enabled] and be sure to use a sequence that shuts the power off by using the fault relay output for the drive.
- *8: Self-cooling motors do not require the wiring for the motors with cooling
- ★9: Connect a 24 V power supply to terminals PS-AC to operate the control circuit while the main circuit power supply is OFF. *10: Use a wire jumper between terminals SC and SP or SC and SN to set the
- multi-function digital input power supply to SINK Mode, SOURCE Mode, or External power supply. Do not short circuit terminals SP and SN. Failure to obey will cause damage to the drive.
 - SINK Mode: Install a jumper between terminals SC and SP. Do not short circuit terminals SC and SN. Failure to obey will cause damage to the drive.
 - SOURCE Mode: Install a jumper between terminals SC and SN. Do not short circuit terminals SC and SP. Failure to obey will cause
 - · External power supply: Remove the jumper between terminals SC-SN and terminals SC-SP.

- *11: The output current capacity of the +V and -V terminals on the control circuit is 20 mA. Do not install a jumper between terminals +V. -V. and AC. Failure to obey can cause damage to the drive.
- *12: DIP switches \$1-1 to \$1-3 set terminals A1 to A3 for voltage or current input. The default setting for S1-1 and S1-3 is voltage input ("V" side). The
- default setting for S1-2 is current input ("1" side).

 *13: DIP switch S4 sets terminal A3 for analog or PTC input. Set DIP switch S1-3 to the "V" side, and set H3-05 = 0 [Terminal A3 Signal Level Select = 0 to 10 V (Lower Limit at 0)] to set terminal A3 for PTC input with DIP switch S4.
- *14: Do not ground the control circuit terminals AC or connect them to the drive. Failure to comply may cause malfunction or failure. *15: Connect the 24 V line of the 24 V control power supply input to terminal
- PS, and the 0 V line to terminal AC. Do not connect reverse terminals PS and AC. Failure to obey will cause damage to the drive.
- *16: Use multi-function analog monitor outputs with analog frequency meters, ammeters, voltmeters, and wattmeters. Do not use monitor outputs with feedback-type signal devices.
- \$17: Jumper switch S5 sets terminal FM and AM for voltage or current output. The default setting is voltage output ("V" side). *18: Set DIP switch S2 to "ON" to enable the termination resistor in the last
- drive in a MEMOBUS/Modbus (RTU mode) network.
- *19: Use only SOURCE Mode for Safe Disable input.
- *20: Disconnect the wire jumper between H1 and HC, and H2 and HC to use the Safe Disable input.

Terminal Specifications

Terminal Functions

Main Circuit Terminals

Max. Applicable Motor Capacity indicates Heavy Duty

Voltage		200 V Class		400 V Class						
Catalog Code GA70A	2004 to 2082	2110 to 2138	2169 to 2415	4002 to 4044	4060 to 4168	4208 to 4389	4453 to 4675			
Max. Applicable Motor Capacity kW	0.4 to 18.5	22, 30	37 to 110	0.4 to 18.5	22 to 75	90 to 220	260 to 355			
R/L1, S/L2, T/L3	Main circuit input p	ower supply		Main circuit input power supply						
U/T1, V/T2, W/T3	Drive output			Drive output						
B1, B2	Braking resistor un	it	-	Braking resistor unit						
+2	DC reactor	-	-	DC reactor	-	-	-			
+1 -	(+1, +2) DC power supply (+1, -)	DC power supply (+1, -)	DC power supply (+1, -) Braking unit	(+1, +2) DC power supply (+1, -)	DC power supply (+1, -)	DC power supply (Braking unit (+3, -)	+1, _)			
+3			(+3, <i>-</i>)			Drawing with (10, 7)				
	Ground terminal (1	00 Ω or less)		Ground terminal (10 Ω or less)						

Note: Use terminals B1 and - to connect a CDBR braking unit to drive models 2004 to 2138 and 4002 to 4168 with built-in braking transistors.

Control Circ	cuit Te	rminals (200 V/400 V Class)							
Terminal Type	Terminal	Signal Function (default)	Description (Signal Level)						
	S1	MFDI selection 1 (ON: Forward run OFF: Stop)	· Photocoupler						
	S2	MFDI selection 2 (ON: Reverse run OFF: Stop)	· 24 V, 6 mA Note: Install the wire jumpers between terminals SC-SP and SC-SN to set the MFDI power supply						
	S3	MFDI selection 3 (External fault, N.O.)	(sinking/sourcing mode or internal/external power supply).						
	S4	MFDI selection 4 (Fault reset)	 Sinking Mode: Install a jumper between terminals SC and SP. NOTICE: Do not close the circuit between terminals SC and SN. A closed circuit between 						
Multi-Function	S5	MFDI selection 5 (Multi-step speed reference 1)	these terminals will cause damage to the drive.						
Digital Input	S6	MFDI selection 6 (Multi-step speed reference 2)	Sourcing Mode: Install a jumper between terminals SC and SN.						
(MFDI)	S7	MFDI selection 7 (Jog command)	NOTICE: Do not close the circuit between terminals SC and SP. A closed circuit between these terminals will cause damage to the drive.						
	S8	MFDI selection 8 (Baseblock, N.O.)	• External power supply: No jumper necessary between terminals SC-SN and terminals SC-SP.						
	SN	MFDI power supply 0V	MFDI power supply, 24 V (maximum 150 mA)						
	SC	MFDI selection common	NOTICE: Do not close the circuit between terminals SP and SN. Failure to obey will cause						
	SP	MFDI power supply +24 Vdc	damage to the drive.						
	H1	Safe Disable input 1	Remove the jumper between terminals H1-HC and H2-HC to use the Safe Disable input. · 24 V, 6 mA						
Safe Disable Input	H2	Safe Disable input 2	\sim ON: Normal operation \sim OFF: Coasting motor \sim Internal impedance 4.7 k Ω \sim OFF Minimum OFF time of 2 ms.						
	НС	Safe Disable function common	Safe Disable function common NOTICE : Do not close the circuit between terminals HC and SN. A closed circuit between these terminals will cause damage to the drive.						
	RP	Master frequency reference pulse train input (Master frequency reference)	\cdot Response frequency: 0 Hz to 32 kHz \cdot H level duty: 30% to 70% \cdot H level voltage: 3.5 V to 13.2 V \cdot L level voltage: 0.0 V to 0.8 V \cdot Input impedance: 3 k Ω						
	+V	Power supply for frequency setting	10.5 V (allowable current 20 mA max.)						
	-V	Power supply for frequency setting	-10.5 V (allowable current 20 mA max.)						
Master	A1	Multi-function analog input 1 (Master frequency reference)	Voltage input or current input Select terminal A1 with DIP switch S1-1 and H3-01 [Terminal A1 Signal Level Select]. Select terminal A2 with DIP switch S1-2 and H3-09 [Terminal A2 Signal Level Select].						
Frequency Reference	A2	Multi-function analog input 2 (Combined to terminal A1)	\cdot -10 V to +10 V/-100% to +100% (input impedance: 20 k $\Omega)$ \cdot 0 V to 10 V/100% (input impedance: 20 k $\Omega)$ \cdot 4 mA to 20 mA/100%, 0 mA to 20 mA/100% (input impedance: 250 $\Omega)$						
	АЗ	Multi-function analog input 3/PTC input (Auxiliary frequency reference)	Voltage input or current input Select using DIP switch S1-3 and H3-05 [Terminal A3 Signal Level Select]. $ -10 \text{ V to } +10 \text{ V/} -100\% \text{ to } +100\% \text{ (input impedance: } 20 \text{ k}\Omega) $ $ -0 \text{ V to } 10 \text{ V/} 100\% \text{ (input impedance: } 20 \text{ k}\Omega) $ $ -4 \text{ mA to } 20 \text{ mA/} 100\%, 0 \text{ mA to } 20 \text{ mA/} 100\% \text{ (input impedance: } 250 \Omega) $						
			PTC input (Motor Overheat Protection) Set DIP switch S4 to "PTC" and set DIP switch S1-3 to "V" to set terminal A3 for PTC input.						
	AC	Frequency reference common	0 V						
	E (G) MA	Connecting shielded cable	Relay output						
Fault Relay	MB	N.O. output (Fault)	· 30 Vdc, 10 mA to 1 A						
Output		N.C. output (Fault)	· 250 Vac, 10 mA to 1 A						
	MC M1	Digital output common	Minimum load: 5 Vdc, 10 mA (Reference value) Palau system						
Multi-Function	M2	MFDO (During run)	Relay output 30 Vdc, 10 mA to 1 A 250 Vac, 10 mA to 1 A						
Digital Output (MFDO)	M3 M4	MFDO (Zero speed)	 250 Vac, 10 mA to 1 A Minimum load: 5 V, 10 mA (Reference value) NOTICE: Do not set functions that frequently switch ON/OFF to MFDO (M1 to M6) because this will decrease the performance life of the relay contacts. Yaskawa estimates switching life at 200,000 times (assumes 1 A, resistive load). 						
	M5*1 M6*1	MFDO (Speed agree1)							

100-250-491

100-250-488

100-250-493

Control Circuit Terminals (200 V/400 V Class) (continued)

Terminal Type	Terminal	Signal Function (default)	Description (Signal Level)					
Multi-Function Photocoupler Output* ²	P1	Multi-function photocoupler output	· Photocoupler output Flywheel diode					
	C1	(Speed agree1)	· 48 Vdc or less, 2 to 50 mA Note: Connect a flywheel diode as shown in the External					
	P2	Multi-function photocoupler output	figure when driving a reactive load such as a relay coil. Make sure that the diode 48 V max. (50 mA max.)					
	C2	(Through mode)	rating is larger than the circuit voltage.					
	MP	Pulse train input (Output frequency)	32 kHz (maximum)					
Manitar Output	FM	Analog monitor output 1 (Output frequency)	Select voltage or current output. · 0 V to 10 V/0% to 100% · -10 V to +10 V/-100% to +100%					
Monitor Output	AM	Analog monitor output 2 (Output current)	\cdot 4 mA to 20 mA (receiver recommended impedance: 250 $\Omega)$ Note: Select with jumper switch S5 and H4-07 [Terminal FM Signal Level Select] or H4-08 [Terminal AM Signal Level Select].					
	AC	Monitor common	0 V					

- *1: Multi-function digital output type A is compatible.
- *2: Multi-function photocoupler output type C (standard) is compatible.

External Power Supply Input Terminals (200 V/400 V Class)

	Туре	Terminal	Terminal Name (Default)	Function
Exter	rnal Power oly	PS	External 24 V power supply input	Supplies backup power to the drive control circuit, keypad, and option board. 21.6 Vdc to 26.4 Vdc, 700 mA
Input	t Terminals	AC	External 24 V power supply ground	0 V


Serial Communication Terminals (200 V/400 V Class)

Classification	Terminal	Signal Function	Signal Level)		
MEMOBUS / Modbus (RTU mode) Communications	D+	Communications input (+)	MEMOBUS/Modbus (RTU mode) communications: Use an RS-485 cable to connect the drive. Note: Set DIP switch S2 to ON to enable the	· RS-485 · MEMOBUS/Modbus (RTU mode)	
	D-	Communications input (-)	termination resistor in the last drive in a MEMOBUS/Modbus (RTU mode) network.	communications protocol May 115.2 kbps	
	AC	Shield ground	0 V		

Tools for Wiring European Style Terminal Blocks (Recommended product)

Check the "Terminal size / Wire gauge" on the next page and prepare the tools for wiring.


one	ck the	Terminal size / wire gauge on the next page and pr
Screw size	Screw type	Recommended Product
M4	Slot ⊖	Prepare the following two tools. Bit [PHOENIX CONTACT] Model: SF-BIT-SL 1,0X4,0-70 Torque screwdriver [PHOENIX CONTACT] Model: TSD-M 3NM (1.2 to 3 N·m)
M5	Slot ⊖	When wiring drive models GA70A2056 and GA70A4089 or earlier models, be sure to correctly select tools based on the wire gauges. Wiring Gauge: ≤25 mm² or AWG10 Bit [PHOENIX CONTACT] Model: SF-BIT-SL 1,2X6,5-70 Torque screwdriver [PHOENIX CONTACT] Model: TSD-M 3NM (1.2 to 3 N·m) Wiring Gauge: ≥30 mm² or AWG8 Torque wrench that includes a torque measurement range of 4.5 N·m Bit socket holder of 6.35 mm
	Hex socket (WAF: 5)	Prepare the following three tools. · Bit [PHOENIX CONTACT] Model: SF-BIT-HEX 5-50 · Torque wrench that includes a torque measurement range of 9 N·m · Bit socket holder of 6.35 mm
M6		Prepare the following three tools for the models GA70A2110 to 2138, and GA70A4103. - Bit [PHOENIX CONTACT] Model: SF-BIT-SL 1,2X6,5-70 - Torque wrench that includes a torque measurement range of 3.5 N·m - Bit socket holder of 6.35 mm
M8	Hex socket (WAF: 6)	Prepare the following three tools. · Bit [PHOENIX CONTACT] Model: SF-BIT-HEX 6-50 · Torque wrench that includes a torque measurement range of 12 N·m · Bit socket holder of 6.35 mm
M10	Hex socket (WAF: 8)	Prepare the following three tools. - Bit [PHOENIX CONTACT] Model: SF-BIT-HEX 8-50 - Torque wrench that includes a torque measurement range of 14 N-m - Bit socket holder of 6.35 mm

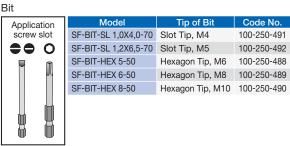

Torque screwdriver

•		
	Model	Measurement Ran
<u>.</u>	TSD-M 3NM	1.2 to 3 N·m



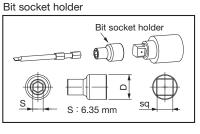

Tip of Bit

Terminal Specifications

Main Circuit Terminal Type

Voltage	200 V	Class	400 V Class				
Catalog Code GA70A	2004 to 2211	2257 to 2415	4002 to 4168	4208 to 4675			
Terminal Type	European Terminal*	Conventional Products	European Terminal*	Conventional Products			

^{*:} The ground terminal is a screw terminal.

Terminal Size / Wire Gauge Symbols

200 V	Symbols indication the shape of the terminal screws: OUNTIES Symbols indication the shape of the terminal screws: Symbols indication the shape of the terminal screws:														
Catalog code	Terminal	Recommended Gauge	Wire Range (IP20 Compatible	Wire Stripping	Terr Sc	ninal rew	Tightening Torque	Catalog code	Terminal	Recommended Gauge	Wire Range (IP20 Compatible	Wire Stripping	Tern Sc	ninal rew	Tightening Torque
GA70A□		mm²	Gauge) mm ²	Length*1 mm	Size	Shape	Nem	GA70A□		mm ²	Gauge) mm ²	Length*1 mm	Size	Shape	N·m
	R/L1, S/L2, T/L3	2	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7		R/L1, S/L2, T/L3	3.5	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7
2004	U/T1, V/T2, W/T3	2	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7	2018	U/T1, V/T2, W/T3	3.5	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7
2004	-,+1,+2	2	2 to 22 (2 to 22)	18	M5	\ominus	2.3 to 2.5*2	2016	-,+1,+2	5.5	2 to 22 (2 to 22)	18	M5	\ominus	2.3 to 2.5*2
	B1, B2	2	2 to 5.5 (2 to 5.5)	10	M4	\ominus	1.5 to 1.7		B1, B2	2	2 to 5.5 (2 to 5.5)	10	M4	\ominus	1.5 to 1.7
	R/L1, S/L2, T/L3	2	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7		R/L1, S/L2, T/L3	8	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7
0000	U/T1, V/T2, W/T3	2	2 to 14 (2 to 14)	10	M4	Θ	1.5 to 1.7	0004	U/T1, V/T2, W/T3	3.5	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7
2006	-,+1,+2	2	2 to 22 (2 to 22)	18	M5	\ominus	2.3 to 2.5*2	2021	-,+1,+2	8	2 to 22 (2 to 22)	18	M5	\ominus	2.3 to 2.5*2
	B1, B2	2	2 to 5.5 (2 to 5.5)	10	M4	\ominus	1.5 to 1.7		B1, B2	2	2 to 5.5 (2 to 5.5)	10	M4	\ominus	1.5 to 1.7
	R/L1, S/L2, T/L3	2	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7	2030	R/L1, S/L2, T/L3	14	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7
	U/T1, V/T2, W/T3	2	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7		U/T1, V/T2, W/T3	8	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7
2008	-,+1,+2	2	2 to 22 (2 to 22)	18	M5	\ominus	2.3 to 2.5*2		-,+1,+2	14	2 to 22 (2 to 22)	18	M5	\ominus	2.3 to 2.5*2
	B1, B2	2	2 to 5.5 (2 to 5.5)	10	M4	\ominus	1.5 to 1.7		B1, B2	3.5	2 to 5.5 (2 to 5.5)	10	M4	\ominus	1.5 to 1.7
	R/L1, S/L2, T/L3	2	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7		R/L1, S/L2, T/L3	14	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7
	U/T1, V/T2, W/T3	2	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7		U/T1, V/T2, W/T3	14	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7
2010	-,+1,+2	2	2 to 22 (2 to 22)	18	M5	\ominus	2.3 to 2.5*2	2042	-,+1,+2	22	2 to 22 (2 to 22)	18	M5	\ominus	2.3 to 2.5*2
	B1, B2	2	2 to 5.5 (2 to 5.5)	10	M4	\ominus	1.5 to 1.7		B1, B2	5.5	2 to 5.5 (2 to 5.5)	10	M4	\ominus	1.5 to 1.7
	R/L1, S/L2, T/L3	3.5	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7		R/L1, S/L2, T/L3	22	2 to 22 (8 to 22)	18	M5	\ominus	2.3 to 2.5*2
	U/T1, V/T2, W/T3	2	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7		U/T1, V/T2, W/T3	14	2 to 14 (5.5 to 14)	18	M5	\ominus	2.3 to 2.5*2
2012	-,+1,+2	3.5	2 to 22 (2 to 22)	18	M5	\ominus	2.3 to 2.5*2	2056	-,+1,+2	38	2 to 38 (8 to 38)	20	M6	6	5 to 5.5
	B1, B2	2	2 to 5.5 (2 to 5.5)	10	M4	\ominus	1.5 to 1.7		B1, B2	14	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7

200 V Class

Symbols indication the shape of the terminal screws: \bigcirc : Slot (-), \bigcirc : Minus (-), \bigcirc : Hex socket (WAF: 5), \bigcirc : Hex socket (WAF: 6), \bigcirc : Hex socket (WAF: 8), \bigcirc : Hex self-locking nut

Catalog code	Terminal	Recommended Gauge	Wire Range (IP20 Compatible	Wire Stripping	Terminal Screw		Tightening Torque	Catalog code	Terminal	Recommended Gauge	d Wire Range (IP20 Compatible	Wire Stripping			Tightening Torque
GA70A		mm ²	Gauge) mm ²	Length*1 mm	Size	Shape	Nim	GA70A□	Terminal	mm ²	Gauge) mm ²	Length*1 mm	Size	Shape	N·m
	R/L1, S/L2, T/L3	38	2 to 38 (22 to 38)	20	M6	6	5 to 5.5		R/L1, S/L2, T/L3	100	50 to 100 (80 to 100)	37	M10	8	12 to 14
	U/T1, V/T2, W/T3	22	2 to 22 (14 to 22)	20	M6	6	5 to 5.5		U/T1, V/T2, W/T3	125	50 to 125 (80 to 125)	37	M10	8	12 to 14
2070	-,+1,+2	50	2 to 50 (22 to 50)	20	M6	6	5 to 5.5	2211	-,-,+1,+1*3	50	22 to 50 (50)	28	M6	6	8 to 9
	B1, B2	14	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7		+3	80	30 to 80*5 (50 to 80) *5	28	M8	6	8 to 9
	R/L1, S/L2, T/L3	50	2 to 50 (22 to 50)	20	M6	6	5 to 5.5	2257	R/L1. S/L2, T/L3	60×2P	22 to 100 × 2P (80 to 100 × 2P)	-	M10	(a)	20 (177)
0000	U/T1, V/T2, W/T3	30	2 to 30 (14 to 30)	20	M6	6	5 to 5.5		U/T1, V/T2, W/T3	50×2P	22 to 100 × 2P (80 to 100 × 2P)	-	M10	<u></u>	20 (177)
2082	-,+1,+2	60	2 to 60 (22 to 60)	20	M6	6	5 to 5.5		-, +1	80×2P	30 to $125 \times 2P$ (100 to $125 \times 2P$)	-	M10	(a)	20 (177)
	B1, B2	14	2 to 14 (2 to 14)	10	M4	\ominus	1.5 to 1.7		+3	50×2P	22 to 60 × 2P (50 to 60 × 2P)	-	M10	(a)	20 (177)
2110	R/L1, S/L2, T/L3	38	22 to 38 (22 to 38)	27	M6	6	8 to 9	2313	R/L1, S/L2, T/L3	80×2P	22 to 100 × 2P (80 to 100 × 2P)	-	M10	0	20 (177)
	U/T1, V/T2, W/T3	38	22 to 38 (22 to 38)	27	M6	6	8 to 9		U/T1, V/T2, W/T3	80×2P	22 to 100 × 2P (80 to 100 × 2P)	-	M10	<u></u>	20 (177)
2110	-, +1	60	30 to 60 (30 to 60)	27	M8	6	10 to 12		−, +1	100×2P	30 to 125 \times 2P (100 to 125 \times 2P)	-	M10	<u></u>	20 (177)
	B1, B2	22	8 to 22 (8 to 22)	21	M6	•	3 to 3.5		+3	60×2P	22 to 60 × 2P (50 to 60 × 2P)	-	M10	0	20 (177)
	R/L1, S/L2, T/L3	60	22 to 60 (38 to 60)	27	M6	6	8 to 9		R/L1, S/L2, T/L3	125×2P	60 to 125 × 2P (125 × 2P)	-	M12	(a)	35 (310)
2138	U/T1, V/T2, W/T3	60	22 to 60 (38 to 60)	27	M6	6	8 to 9	2360	U/T1, V/T2, W/T3	125×2P	60 to 125 × 2P (125 × 2P)	-	M12	(a)	35 (310)
2130	-,+1	80	30 to 80 (50 to 80)	27	M8	6	10 to 12	2300	-, +1	150×2P	100 to 150 × 2P (150 × 2P)	-	M12	()	35 (310)
	B1, B2	30	8 to 30 (8 to 30)	21	M6	•	3 to 3.5		+3	80×2P	38 to 150 × 2P (150 × 2P)	-	M12	(a)	35 (310)
	R/L1, S/L2, T/L3	80	50 to 100 (80 to 100)	37	M10	®	12 to 14		R/L1, S/L2, T/L3	125×2P	60 to 125 × 2P (125 × 2P)	-	M12	©	35 (310)
2160	U/T1, V/T2, W/T3	80	50 to 125 (80 to 125)	37	M10	®	12 to 14	2415	U/T1, V/T2, W/T3	125×2P	60 to 125 × 2P (125 × 2P)	-	M12	0	35 (310)
2169	-,-,+1,+1*3	38*4	22 to 50 (50)	28	M6	⑤	8 to 9	2410	-, +1	150×2P	100 to 150 × 2P (150 × 2P)	-	M12	0	35 (310)
	+3	60	30 to 80*5 (50 to 80) *5	28	M8	6	8 to 9		+3	80 × 2P	38 to 150 × 2P (150 × 2P)	-	M12	(a)	35 (310)

- *1: Remove the insulator from the tips of wires to the length shown in "Wire Stripping Length."
- *2: When using wire with a gauge over 30 mm², tighten to a tightening torque of 4.1 to 4.5 N⋅m.
 *3: Terminals and +1 have two screws. Recommended Gauge means the wire gauge of one terminal.

*4: Use cables in the range of applicable gauges to meet the IP20 protective level.
*5: A junction terminal is required when connecting a braking unit (CDBR series) or a braking resistor unit (LKEB series).
Note: The recommended wire gauges based on drive continuous current ratings using 75°C 600 V class 2 heat resistant indoor PVC wire.

- Assume the following usage conditions:
- · Ambient temperature: 40°C or lower
- · Wiring distance: 100 m or shorter
- · Normal Duty rated current value

Terminal Specifications

Terminal Size / Wire Gauge Symbols (continued)

Symbols indication the shape of the terminal screws: 400 V Class ←: Slot (-), ←: Minus (-), (6): Hex socket (WAF: 5), (6): Hex socket (WAF: 6), (6): Hex socket (WAF: 8), (7): Hex self-locking nut Terminal Screw Wire Range Wire Range (IP20 Compatible Catalog Tightening Catalog commer Gauge mm² Strippin Terminal **Terminal** (IP20 Compatible Gauge) mm² Gauge Torque GA70A N·m GA70A N·m Size Size 2 to 14 2 to 14 R/L1, S/L2, T/L3 2 Θ 1.5 to 1.7 R/L1, S/L2, T/L3 8 M4 10 M4 10 1.5 to 1.7 (2 to 14) (2 to 14) 2 to 14 2 to 14 U/T1, V/T2, W/T3 2 10 M4 Θ 1.5 to 1.7 U/T1, V/T2, W/T3 5.5 10 M4 1.5 to 1.7 (2 to 14) (2 to 14) 4002 4023 2 to 22 (2 to 22) 2 to 22 (2 to 22) -,+1,+2 2 18 M5 2.3 to 2.5*2 -,+1,+2 18 M5 2.3 to 2.5*2 2 to 5.5 2 Θ 2 B1, B2 M4 1.5 to 1.7 B1, B2 10 M4 1.5 to 1.7 10 (2 to 5.5) (2 to 5.5) 2 to 14 2 to 22 R/L1, S/L2, T/L3 2 10 M4 1.5 to 1.7 R/L1, S/L2, T/L3 14 18 M5 2.3 to 2.5*2 (2 to 14) 2 to 14 2 to 14 U/T1, V/T2, W/T3 M4 1.5 to 1.7 U/T1, V/T2, W/T3 8 M5 2.3 to 2.5*2 10 18 (2 to 14) (5.5 to 14) 4004 4031 2 to 38 -,+1,+2 2 M5 2.3 to 2.5*2 -,+1,+2 14 6 5 to 5.5 18 20 M6 (2 to 22) (8 to 38) 2 to 5.5 2 to 14 B1 B2 2 10 M4 1.5 to 1.7 B1 B2 3.5 10 M4 1.5 to 1.7 (2 to 5.5) (2 to 14) 2 to 14 2 to 22 R/L1, S/L2, T/L3 2 10 M4 1.5 to 1.7 R/L1, S/L2, T/L3 14 18 M5 2.3 to 2.5*2 (2 to 14) (8 to 22) U/T1, V/T2, W/T3 2 Θ U/T1, V/T2, W/T3 M5 2.3 to 2.5*2 10 M4 1.5 to 1.7 14 18 (5.5 to 14) (2 to 14) 4005 4038 2 to 22 2 to 38 -.+1.+2 2 18 M5 2.3 to 2.5*2 -.+1.+2 22 20 M6 5 to 5.5 (2 to 22) (8 to 38) 2 to 5.5 2 to 14 B1 B2 2 10 M4 1.5 to 1.7 B1. B2 5.5 10 M4 1.5 to 1.7 2 to 14 R/L1, S/L2, T/L3 R/L1, S/L2, T/L3 10 M4 1.5 to 1.7 18 M5 2.3 to 2.5*2 (2 to 14) (3.5 to 14) U/T1, V/T2, W/T3 U/T1, V/T2, W/T3 2.3 to 2.5*2 2 1.5 to 1.7 14 M5 10 M4 18 (2 to 14) (5.5 to 14) 4007 4044 2 to 22 2 to 22 -,+1,+2 2 18 M5 2.3 to 2.5*2 -.+1.+2 22 18 M5 2.3 to 2.5*2 (3.5 to 22) 2 to 5.5 2 to 8 2 1.5 to 1.7 B1, B2 1.5 to 1.7 B1, B2 10 8 10 M4 (2 to 8) (2 to 5.5) 2 to 14 R/L1, S/L2, T/L3 2 Θ R/L1, S/L2, T/L3 2.3 to 2.5*2 1.5 to 1.7 M5 10 M4 14 18 (2 to 14) (3.5 to 14) 2 to 14 2 to 14 U/T1, V/T2, W/T3 2 10 M4 1.5 to 1.7 U/T1, V/T2, W/T3 14 18 M5 2.3 to 2.5*2 (2 to 14) (5.5 to 14) 4009 4060 2 to 22 2 to 22 -,+1,+2 2 М5 2.3 to 2.5*2 - , +1 22 18 M5 2.3 to 2.5*2 18 (2 to 22) (3.5 to 22) B1, B2 2 10 M4 Θ 1.5 to 1.7 B1, B2 14 10 M4 1.5 to 1.7 (2 to 5.5) (2 to 14) 2 to 22 2 to 14 2.3 to 2.5*2 R/L1, S/L2, T/L3 2 10 M4 1.5 to 1.7 R/L1, S/L2, T/L3 22 18 M5 (2 to 14) (3.5 to 22) 2 to 14 2 to 22 U/T1, V/T2, W/T3 2 10 M4 1.5 to 1.7 U/T1, V/T2, W/T3 22 18 M5 2.3 to 2.5*2 (2 to 14) (3.5 to 22) 4012 4075 2 to 22 (2 to 22) 2 to 30 -,+1,+2 3.5 M5 2.3 to 2.5*2 30 18 М5 2.3 to 2.5*2 18 -, +1 (3.5 to 30) 2 to 5.5 2 to 14 B1, B2 1.5 to 1.7 B1, B2 2 10 M4 14 10 M4 1.5 to 1.7 (2 to 5.5) (2 to 14) 2 to 30 2 to 14 R/L1, S/L2, T/L3 3.5 10 M4 Θ 1.5 to 1.7 R/L1, S/L2, T/L3 30 18 M5 2.3 to 2.5*2 (2 to 14) (5.5 to 30) 2 to 14 2 to 30 U/T1, V/T2, W/T3 U/T1, V/T2, W/T3 3.5 10 M4 1.5 to 1.7 18 M5 2.3 to 2.5*2 (2 to 14) (5.5 to 30) 4018 4089 2 to 38 2.3 to 2.5*2 -,+1,+2 5.5 M5 6 5 to 5.5 18 -, +138 20 M6 (2 to 22) (22 to 38) 2 to 5.5 2 to 22 B1. B2 2 10 M4 1.5 to 1.7 B1. B2 22 18 M5 2.3 to 2.5*2

Symbols indication the shape of the terminal screws:

4NN	۱/	Class

Θ :	Slot (–), 🖨 : Mi	nus (-	·), ⑤ : Hex s	ocket (WAF	=: 5), 🔞 :	Hex socket (WAI	F: 6), 🔞 :	Hex socket (WA	F: 8), 〈	ें∶ Hex self-	locking nut
		Wire	Terminal		2				Wire	Terminal	

O	Catalog code	Terminal	Recommended Gauge	Wire Range (IP20 Compatible	Wire Stripping		minal rew	Tightening Torque	Catalog code	Terminal	Recommended Gauge	Wire Range (IP20 Compatible	Wire Stripping	Tern Sci	ninal rew	Tightening Torque
G	A70A	Terrillia	mm ²	Gauge) mm ²	Length*1 mm	Size	Shape	N·m	GA70A□	Terrinia	mm ²	Gauge) mm ²	Length*1 mm	Size	Shape	N·m
		R/L1, S/L2, T/L3	38	22 to 60 (38 to 60)	27	M6	6	8 to 9		R/L1, S/L2, T/L3	125×2P	60 to 125 × 2P (125 × 2P)	-	M12	(35 (310)
	4103	U/T1, V/T2, W/T3	38	22 to 60 (38 to 60)	27	M6	6	8 to 9	4371	U/T1, V/T2, W/T3	125 × 2P	60 to 125 × 2P (125 × 2P)	-	M12	©	35 (310)
	4103	-, +1	50	30 to 80 (50 to 80)	27	M8	6	10 to 12	4371	-, +1	125×2P	100 to 150 × 2P (150 × 2P)	-	M12	©	35 (310)
		B1, B2	30	8 to 30 (8 to 30)	21	M6	•	3 to 3.5		+3	100×2P	38 to 150 × 2P (150 × 2P)	-	M12	©	35 (310)
		R/L1, S/L2, T/L3	60*4	50 to 100 (80 to 100)	37	M10	8	12 to 14		R/L1, S/L2, T/L3	125×2P	60 to 125×2P (125×2P)	-	M12	©	35 (310)
	4140	U/T1, V/T2, W/T3	60*4	50 to 125 (80 to 125)	37	M10	8	12 to 14	4389	U/T1, V/T2, W/T3	125×2P	60 to 125×2P (125×2P)	-	M12	©	35 (310)
	4140	-, -, +1, +1*3	30*4	22 to 50 (50)	28	M6	6	8 to 9	4369	-, +1	150×2P	100 to 150 × 2P (150 × 2P)	-	M12	©	35 (310)
		B1, B2	50	30 to 80*5 (50 to 80) *5	28	M8	6	8 to 9		+3	125×2P	38 to 150 × 2P (150 × 2P)	-	M12	©	35 (310)
		R/L1, S/L2, T/L3	80	50 to 100 (80 to 100)	37	M10	8	12 to 14		R/L1, S/L2, T/L3	125 × 4P	60 to 125 × 4P (125 × 4P)	-	M12	(35 (310)
	4168	U/T1, V/T2, W/T3	80	50 to 125 (80 to 125)	37	M10	8	12 to 14	4453	U/T1, V/T2, W/T3	100×4P	60 to 150 × 4P (125 to 150 × 4P)	-	M12	(a)	35 (310)
	4100	-, -, +1, +1*3	38*4	22 to 50 (50)	28	M6	6	8 to 9	4455	-, +1	100×4P	80 to 150 × 4P (150 × 4P)	-	M12	©	35 (310)
		B1, B2	60	30 to 80*5 (50 to 80) *5	28	M8	6	8 to 9		+3	80×4P	30 to 125 × 4P (100 to 125 × 4P)	-	M12	©	35 (310)
		R/L1, S/L2, T/L3	50 × 2P	22 to 100 × 2P (80 to 100 × 2P)	-	M10	©	20 (177)		R/L1, S/L2, T/L3	125 × 4P	60 to 125 × 4P (125 × 4P)	-	M12	©	35 (310)
	4208	U/T1, V/T2, W/T3	50 × 2P	22 to 100 × 2P (80 to 100 × 2P)	-	M10	©	20 (177)	4568	U/T1, V/T2, W/T3	100×4P	60 to 150 × 4P (125 to 150 × 4P)	-	M12	©	35 (310)
	4200	-, +1	80 × 2P	30 to $125 \times 2P$ (100 to $125 \times 2P$)	-	M10	0	20 (177)	4500	-, +1	100×4P	80 to 150 × 4P (150 × 4P)	-	M12	0	35 (310)
		+3	38 × 2P	22 to 60 × 2P (50 to 60 × 2P)	-	M10	(a)	20 (177)		+3	80×4P	30 to 125 × 4P (100 to 125 × 4P)	-	M12	©	35 (310)
		R/L1, S/L2, T/L3	50 × 2P	22 to 100 × 2P (80 to 100 × 2P)	-	M10	(a)	20 (177)		R/L1, S/L2, T/L3	125×4P	60 to 125 × 4P (125 × 4P)	-	M12	(a)	35 (310)
	4250	U/T1, V/T2, W/T3	50 × 2P	22 to 100 × 2P (80 to 100 × 2P)	-	M10	(20 (177)	4675	U/T1, V/T2, W/T3	100×4P	60 to 150 × 4P (125 to 150 × 4P)	-	M12	©	35 (310)
	4250	-, +1	80 × 2P	$30 \text{ to} 125 \times 2P$ (100 to $125 \times 2P$)	-	M10	(a)	20 (177)	4075	-, +1	125×4P	80 to 150 × 4P (150 × 4P)	-	M12	0	35 (310)
		+3	50 × 2P	22 to 60 × 2P (50 to 60 × 2P)	-	M10	(a)	20 (177)		+3	100×4P	30 to 125 × 4P (100 to 125 × 4P)	-	M12	(a)	35 (310)
		R/L1, S/L2, T/L3	80 × 2P	22 to 100×2P (80 to 100×2P)	-	M10	©	20 (177)								
		U/T1, V/T2, W/T3	80 × 2P	22 to 100×2P (80 to 100×2P)	-	M10	0	20 (177)								
	4296	-, + 1	100 × 2P	30 to 125×2P (100 to 125× 2P)	-	M10	0	20 (177)								
		+3	60 × 2P	22 to 60×2P (50 to 60×2P)	-	M10	(a)	20 (177)								

^{*1:} Remove the insulator from the tips of wires to the length shown in "Wire Stripping Length."

*2: When using wire with a gauge over 30 mm², tighten to a tightening torque of 4.1 to 4.5 N·m.

*3: Terminals - and +1 have two screws. Recommended Gauge means the wire gauge of one terminal.

*4: Use cables in the range of applicable gauges to meet the IP20 protective level.

*5: A junction terminal is required when connecting a braking unit (CDBR series) or a braking resistor unit (LKEB series).

Note: The recommended wire gauges based on drive continuous current ratings using 75°C 600 V class 2 heat resistant indoor PVC wire. Assume the following usage conditions:

Ambient temperature: 40°C or lower · Normal Duty rated current value

[·] Wiring distance: 100 m or shorter

Dimensions

Enclosures

200 V Class HD: Heavy Duty, ND: Normal Duty

																		,	,			,
Catalog Code G	A70A		2004	2006	2008	2010	2012	2018	2021	2030	2042	2056	2070	2082	2110	2138	2169	2211	2257	2313	2360	2415
Max. Applicable	kW)	HD	0.4														90	110				
Max. Applicable Motor Capacity	KVV)	ND	0.75	1.1	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	-
IP20/UL Open Type)		IP20 s	support	ted witl	n stand	lard mo	odel														
IP20/UL Type 1			Option	n suppo	orted (I	nstall (JL Type	e 1 kit d	on IP20	/UL O	pen Ty	oe driv	e)									*

400 V Class

HD: Heavy Duty, ND: Normal Duty

100 1 01000																
Catalog Code GA70	A□	4002	4004	4005	4007	4009	4012	4018	4023	4031	4038	4044	4060	4075	4089	4103
Max. Applicable (kW)	HD	0.4	0.75	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45
Motor Capacity (KVV)	ND	0.75	1.5	2.2	3	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55
IP20/UL Open Type		IP20 sup	ported w	ith stand	ard mod	el										
IP20/UL Type 1		Option s	upported	l (Install L	JL Type 1	kit on IP	20/UL O _I	oen Type	drive)							

Catalog Code GA70A		4140	4168	4208	4250	4296	4371	4389	4453	4568	4675
Max. Applicable (kW)	HD	55	75	90	110	132	160	200	220	250	315
Motor Capacity (KVV)	ND	75	90	110	132	160	200	220	250	315	355
IP20/UL Open Type		IP20 supp	orted with	n standard	model						
IP20/UL Type 1		Option su (Install UL		t on IP20/l	JL Open T	ype drive)		*	*	*	*

^{*:} UL Type 1 is not available for this capacity.

■IP20/UL Open Type





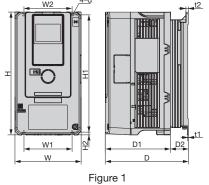


Figure 2

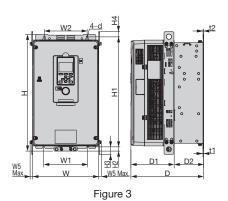

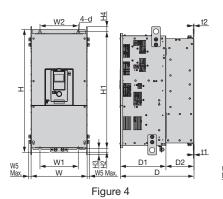

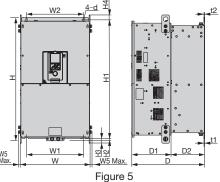

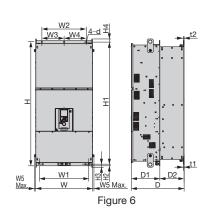

200 V Class: IP20/UL Open Type

Catalog Code	Figure								Dime	ensions	mm								Weight kg
GA70A[]]	rigure	W	Н	D	D1	D2	W1	W2	W3	W4	W5	H1	H2	НЗ	H4	t1	t2	d	weight kg
2004																			
2006																			
2008	1	140	260	176	138	38	102	102	_	_	_	248	6	_	_	1.6	5	M5	3.5
2010																			
2012																			
2018	-1	140	260	211	138	73	102	102	_	_	_	248	6	_	_	1.6	5	M5	3.9
2021	'	140	200	211	130	73	102	102				240	O			1.0	3	IVIO	3.9
2030	1	140	260	211	138	73	102	102	_	_	_	248	6	_	_	1.6	5	M5	4.2
2042	'	140	200	211	130	73	102	102				240	O			1.0	J	IVIO	4.2
2056	1	180	300	202	134	68	140	140	_	_	_	284	8	_	_	1.6	1.6	M5	6.0
2070	1	220	350	227	140	87	192	192	_	_	_	335	8	_	_	2.3	2.3	M6	8.5
2082	1	220	350	227	140	87	192	192	_	_	_	335	8	_	_	2.3	2.3	M6	9
2110	2	240	400	280	166	114	195	186	_	_	12	375	17.5	_	17.5	2.3	2.3	M6	22
2138	3	255	450	280	166	114	170	165	_	_	12	424	16	29	21	2.3	2.3	M6	24
2169	3	264	543	335	186	149	190	182	_	_	12	516	17.5	28.5	20.5	2.3	2.3	M8	39
2211	3	264	543	335	186	149	190	182	_	_	12	516	17.5	28.5	20.5	2.3	2.3	M8	40
2257	4	312	700	420	260	160	218	218	_	_	18	659	28	43.5	28.5	4.5	4.5	M10	67
2313	4	012	700	420	200	100	210	210			10	039	20	40.0	20.5	4.5	4.5	IVITO	01
2360	5	440	800	472	254	218	370	370	-	-	20	757	28	44	30	4.5	4.5	M12	104
2415	5	440	800	472	254	218	370	370	_	_	20	757	28	44	30	4.5	4.5	M12	119

400 V Class: IP:	20/UL O	pen Ty	/pe																
Catalog Code	Figure								Dim	ensions	mm								Weight kg
GA70A[]	rigure	W	Н	D	D1	D2	W1	W2	W3	W4	W5	H1	H2	НЗ	H4	t1	t2	d	Weight kg
4002																			
4004	1	140	260	176	138	38	102	102	_	_	_	248	6	_	_	1.6	5	M5	3.5
4005																			
4007																			
4009	1	140	260	211	138	73	102	102	_	_	_	248	6	_	_	1.6	5	M5	3.9
4012																			
4018	1	140	260	211	138	73	102	102	_	_	_	248	6	_	_	1.6	5	M5	4.2
4023	'	140	200	211	130	73	102	102				240	O			1.0	3	IVIO	4.2
4031	1	180	300	202	134	68	140	140	_	_	_	284	8	_	_	1.6	1.6	M5	6.0
4038	'	100	300	202	104	00	140	140				204	O			1.0	1.0	IVIO	0.0
4044	1	220	350	227	140	87	192	192	_	_	_	335	8	_	_	2.3	2.3	M6	7.5
4060	1	220	350	246	140	106	192	192	_	_	_	335	8	_	_	2.3	2.3	M6	12
4075	2	240	400	280	166	114	195	186	_	_	12	375	17.5	_	17.5	2.3	2.3	M6	17
4089	3	255	450	280	166	114	170	165	_	_	12	424	16	29	21	2.3	2.3	M6	22
4103	3	255	450	280	166	114	170	165	_	_	12	424	16	29	21	2.3	2.3	M6	25
4140	3	264	543	335	186	149	190	182	_	_	12	516	17.5	28.5	20.5	2.3	2.3	M8	38
4168	3	264	543	335	186	149	190	182	_	_	12	516	17.5	28.5	20.5	2.3	2.3	M8	39
4208																			
4250	4	312	700	420	260	160	218	218	_	_	18	659	28	43.5	28.5	4.5	4.5	M10	71
4296																			
4371	5	440	800	472	254	218	370	370	_	_	20	757	28	44	30	4.5	4.5	M12	122
4389	5	440	800	472	254	218	370	370	_	_	20	757	28	44	30	4.5	4.5	M12	126
4453	6	510	1136	480	260	220	450	450	225	225	20	1093	25.5	43.5	30.5	4.5	4.5	M12	198
4568	b	510	1130	400	200	220	450	450	223	223	20	1093	25.5	43.3	30.3	4.5	4.5	IVI IZ	190
4675	6	510	1136	480	260	220	450	450	225	225	20	1093	25.5	43.5	30.5	4.5	4.5	M12	207

Note: External and mounting dimensions are different for standard installation and external heatsink installation. Refer to page 51 for external heatsink installation.

Dimensions

■IP20/UL Type 1


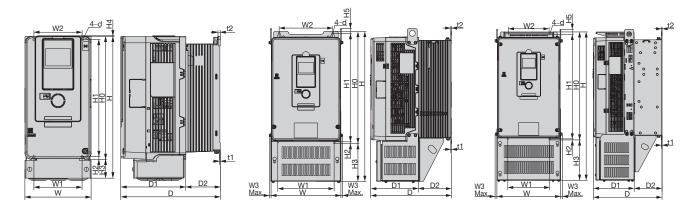


Figure 1 Figure 2 Figure 3

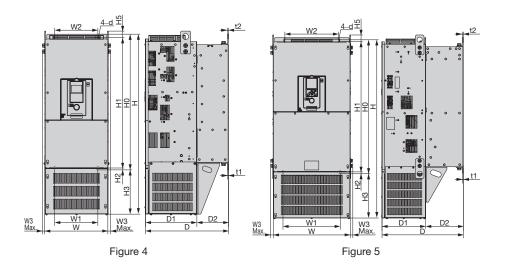

200 V Class: IP20/UL Type 1

Catalog									Dim	ensions	mm								Weight	UL Type 1 Kit
Code GA70A	Figure	w	н	D	D1	D2	W1	W2	W3	НО	H1	H2	НЗ	H4	H5	tf	t2	d	kg	Model (Code No.)
2004																				
2006																				900-192-121-001
2008	1	140	300	176	138	38	102	102	_	260	248	6	40	1.5	_	1.6	5	M5	4.1	(100-202-326)
2010																				
2012																				900-192-121-001
2021	1	140	300	211	138	73	102	102	_	260	248	6	40	1.5	_	1.6	5	M5	4.5	(100-202-326)
2030	1	140	300	211	138	73	102	102	_	260	248	6	40	1.5	_	1.6	5	M5	4.8	900-192-121-001
2042	'	140	300	211	130	73	102	102		200	240	0	40	1.5		1.0	3	IVIO	4.0	(100-202-326)
2056	1	180	340	202	134	68	140	140	_	300	284	8	40	1.5	_	1.6	1.6	M5	7.0	900-192-121-002 (100-202-327)
2070	1	220	400	227	140	87	192	192	_	350	335	8	50	1.5	_	2.3	2.3	M6	9	900-192-121-003 (100-202-328)
2082	1	220	435	227	140	87	192	192	_	350	335	8	85	1.5	-	2.3	2.3	M6	10	900-192-121-004 (100-202-329)
2110	2	244	500	280	166	114	195	186	10	400	375	17.5	100	_	17.5	2.3	2.3	M6	24	900-192-121-005 (100-202-330)
2138	3	259	580	280	166	114	170	165	10	450	424	16	130	_	21	2.3	2.3	M6	27	900-192-121-006 (100-208-526)
2169	3	268	700	335	186	149	190	182	10	543	516	17.5	157	_	20.5	2.3	2.3	M8	44	900-192-121-007 (100-208-527)
2211	3	268	770	335	186	149	190	182	10	543	516	17.5	227	_	20.5	2.3	2.3	M8	46	900-192-121-008 (100-208-528)
2257 2313	4	316	915	420	260	160	218	218	16	700	659	28	215	_	28.5	4.5	4.5	M10	72	900-192-121-009 (100-208-549)
2360	5	444	1045	472	254	218	370	370	18	800	757	28	245	_	30	4.5	4.5	M12	113	900-192-121-010 (100-213-136)

400 V Class: IP20/UL Type 1


Catalog									Dime	ensions	mm_								Weight	UL Type 1 Kit
Code GA70A∷	Figure	w	Н	D	D1	D2	W1	W2	W3	Н0	H1	H2	НЗ	H4	H5	t1	t2	d	kg	Model (Code No.)
4002 4004 4005	1	140	300	176	138	38	102	102	_	260	248	6	40	1.5	_	1.6	5	M5	4.1	900-192-121-001 (100-202-326)
4007 4009 4012	1	140	300	211	138	73	102	102	_	260	248	6	40	1.5	_	1.6	5	M5	4.5	900-192-121-001 (100-202-326)
4018 4023	1	140	300	211	138	73	102	102	-	260	248	6	40	1.5	_	1.6	5	M5	4.8	900-192-121-001 (100-202-326)
4031 4038	1	180	340	202	134	68	140	140	_	300	284	8	40	1.5	_	1.6	1.6	M5	7.0	900-192-121-002 (100-202-327)
4044	1	220	400	227	140	87	192	192	_	350	335	8	50	1.5	_	2.3	2.3	M6	8.5	900-192-121-003 (100-202-328)
4060	1	220	400	246	140	106	192	192	_	350	335	8	50	1.5	_	2.3	2.3	M6	13	900-192-121-003 (100-202-328)
4075	2	244	500	280	166	114	195	186	10	400	375	17.5	100	_	17.5	2.3	2.3	M6	20	900-192-121-005 (100-202-330)
4089	3	259	580	280	166	114	170	165	10	450	424	16	130	_	21	2.3	2.3	M6	25	900-192-121-006 (100-208-526)
4103	3	259	580	280	166	114	170	165	10	450	424	16	130	_	21	2.3	2.3	M6	29	900-192-121-006 (100-208-526)
4140	3	268	700	335	186	149	190	182	10	543	516	17.5	157	_	20.5	2.3	2.3	M8	43	900-192-121-007 (100-208-527)
4168	3	268	700	335	186	149	190	182	10	543	516	17.5	157	_	20.5	2.3	2.3	M8	44	900-192-121-007 (100-208-527)
4208 4250 4296	4	316	915	420	260	160	218	218	16	700	659	28	215	_	28.5	4.5	4.5	M10	76	900-192-121-009 (100-208-549)
4371	5	444	1045	472	254	218	370	370	18	800	757	28	245	_	30	4.5	4.5	M12	130	900-192-121-010 (100-213-136)

Note: UL Type 1 kit (option) is required. The values in the table are the dimensions for the UL Type 1 kit mounted to the IP20/UL Open Type drive.

Dimensions

■ IP20/UL Open Type (Shield Clamp Kit)



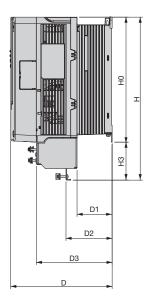



200 V Class: IP20/UL Open Type (Shield Clamp Kit)

Catalog Code				Di	mensions n	ım				Shield Clamp Kit Model
GA70A:	W	Н	D	D1	D2	D3	W1	H0	Н3	(Code No.)
2004										
2006										000 105 000 001
2008	140	339	176	38	61	123	137	260	79	900-195-896-001 (100-206-983)
2010										
2012										
2018										
2021	140	339	211	73	96	158	137	260	79	900-195-896-001
2030										(100-206-983)
2042										
2056	180	439	202	68	93	148	175	298	141	900-195-896-002 (100-206-984)
2070	220	468	227	87	112	174	220	350	118	900-195-896-003 (100-229-140)
2082	220	468	227	87	112	174	220	350	118	900-195-896-004 (100-229-141)
2110	240	490	280	114	139	217	244	390	100	900-195-896-007 (100-229-144)
2138	255	582	280	114	151	226	259	440	142	900-195-896-009 (100-229-146)
2169	264	697	335	149	189	266	268	533	164	900-195-896-012 (100-233-647)
2211	264	697	335	149	189	266	268	533	164	900-195-896-013 (100-233-700)


400 V Class: IP20/UL Open Type (Shield Clamp Kit)

Catalog Code					mensions n	nm				Shield Clamp Kit Model
GA70A:	W	н	D	D1	D2	D3	W1	Н0	H3	(Code No.)
4002										000 405 000 004
4004	140	339	176	38	61	123	137	260	79	900-195-896-001 (100-206-983)
4005										
4007										
4009										900-195-896-001
4012	140	339	211	73	96	158	137	260	79	(100-206-983)
4018										
4023										
4031	180	439	202	68	93	148	175	298	141	900-195-896-002 (100-206-984)
4038										
4044	220	468	227	87	112	174	220	350	118	900-195-896-005 (100-229-142)
4060	220	468	227	87	112	174	220	350	118	900-195-896-006 (100-229-143)
4075	240	490	280	114	139	217	244	390	100	900-195-896-008 (100-229-145)
4089	255	557	280	114	151	226	259	440	117	900-195-896-010 (100-233-645)
4103	255	582	280	114	151	226	259	440	142	900-195-896-011 (100-233-646)
4140	264	697	335	149	189	266	268	533	164	900-195-896-014 (100-233-701)
4168	264	697	335	149	189	266	268	533	164	900-195-896-012 (100-233-647)


Fully-Enclosed Design and Drive Watt Loss Data

When you install the drive in a control panel, the maximum intake air temperature is 50°C. The heatsink can alternatively be mounted outside the control panel, thus reducing the amount of heat inside the panel and allowing for a more compact set up.

· Cooling Design for Fully-Enclosed Panel

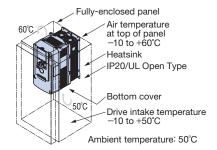



· Mounting the External Heatsink

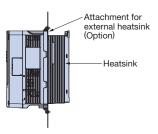

Intake air temperature for external heatsink Open chassis side: 50 °C Heatsink side: 50 °C Use only an IP20/UL Open Type for the external heatsink.

· Ventilation Space

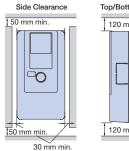

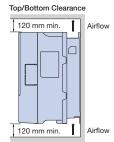

For installing the drive (IP20/UL Open Type) with capacity of 200 V/400 V class 22 kW and above, be sure to leave enough clearance during installation for main circuit wiring for maintenance.

Drive Watt Loss Data

200 V Class Heavy Duty Ratings

Catalog	Code GA70A2		004	006	008	010	012	018	021	030	042	056	070	082	110	138	169	211	257	313	360	415
Rated C	Output Current	Α	3.2	5	6.9	8	11	14	17.5	25	33	47	60	75	88	115	145	180	215	283	346	415
Carrier I	Frequency	kHz	8	8	8	8	8	8	8	8	8	8	8	8	8	8	5	5	5	5	5	5
Watt	Internal	W	35	37	40	44	50	47	56	74	88	112	145	179	155	212	275	314	398	502	582	644
Loss*	Heatsink	W	18	26	36	43	61	82	105	174	183	267	373	478	563	680	820	991	1252	1643	1978	2359
LUSS	Total Watt Loss	W	53	63	76	87	111	129	161	248	271	379	518	657	718	892	1095	1305	1650	2145	2560	3003

400 V Class Heavy Duty Ratings

Catalog	g Code GA70A4		002	004	005	007	009	012	018	023	031	038	044	060	075	089	103
Rated C	Output Current	Α	1.8	3.4	4.8	5.5	7.2	9.2	14.8	18	24	31	39	45	60	75	91
Carrier I	Frequency	kHz	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8
Watt	Internal	W	38	42	46	48	37	46	65	73	101	119	148	126	165	184	237
Loss*	Heatsink	W	15	28	37	45	61	82	140	150	211	272	354	389	527	617	779
LUSS	Total Watt Loss	W	53	70	83	93	98	128	205	223	312	391	502	515	692	801	1016
Catalog	Code GA70A4		140	168	208	250	296	371	414	453	568	675					
Rated C	Output Current	Α	112	150	180	216	260	304	371	414	453	605					
Carrier I	Frequency	kHz	5	5	5	5	5	5	5	2	2	2					
Watt	Internal	W	300	486	446	558	692	824	777	963	1086	1328					
Loss*	Heatsink	W	956	1274	1432	1464	2061	2346	2212	2696	3035	3995					
LUSS	Total Watt Loss	W	1256	1760	1878	2022	2753	3170	2989	3659	4121	5323					

200 V Class Normal Duty Ratings

Catalog	g Code GA70A2		004	006	008	010	012	018	021	030	042	056	070	082	110	138	169	211	257	313	360
Rated C	Output Current	Α	3.5	6	8	9.6	12.2	17.5	21	30	42	56	70	82	110	138	169	211	257	313	360
Carrier I	Frequency	kHz	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
Watt	Internal	W	35	38	42	49	56	53	75	95	129	149	177	202	192	269	338	384	519	579	655
Loss*	Heatsink	W	16	25	34	46	62	88	125	206	227	302	403	467	631	814	941	1131	1534	1794	2071
LUSS	Total Watt Loss	W	51	63	76	95	118	141	200	301	356	451	580	669	823	1083	1279	1515	2053	2373	2726

400 V Class Normal Duty Ratings

			,														
Catalog	Code GA70A4		002	004	005	007	009	012	018	023	031	038	044	060	075	089	103
Rated C	Output Current	Α	2.1	4.1	5.4	7.1	8.9	11.9	17.5	23.4	31	38	44	59.6	74.9	89.2	103
Carrier I	requency	kHz	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
\A/add	Internal	W	39	44	48	52	42	57	82	108	138	145	168	157	185	212	264
Watt Loss*	Heatsink	W	16	33	31	44	58	84	144	185	222	270	335	444	527	665	766
LUSS	Total Watt Loss	W	55	77	79	96	100	141	226	293	360	415	503	601	712	877	1030
Catalog	Code GA70A4		140	168	208	250	296	371	389	453	568	675					
Rated C	Output Current	Α	140	168	208	250	296	371	389	453	568	675					
Carrier I	requency	kHz	2	2	2	2	2	2	2	2	2	2					
\A/add	Internal	W	393	574	493	686	805	1022	867	1086	1429	1526					
Watt Loss*	Heatsink	W	1126	1348	1465	1738	2155	2553	2393	3035	3989	4572					
LUSS*	Total Watt Loss	W	1519	1922	1958	2424	2960	3575	3260	4121	5418	6098					

^{*:} Watt loss is calculated in the following conditions:

^{·200} V class: Input voltage 220 V, power frequency 60 Hz, load ratio 100%


^{·400} V class: Input voltage 440 V, power frequency 60 Hz, load ratio 100%

Contact your Yaskawa or nearest agent when not calculating watt loss in the above conditions.


Attachment for **External Heatsink**

When the heatsink is installed outside the drive, additional attachments are required. Additional attachments are not required for models GA70A2110 and above, and GA70A4075 and above because installing a heatsink outside the drive can be performed on these models by replacing their standard mounting feet.

Contact Yaskawa if an instruction manual is needed.

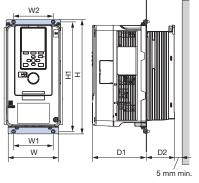

Panel Modification for External Heatsink

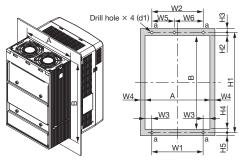

Panel cut out dimensions


Note: The shaded area is the size when in installing the gasket. Guarantee a wider and higher gasket width space than the following W and H information.

200 V Class

200 V Class																	
Catalog								Dimensi	ons mr	n							Attachment for External
Code GA70⊞	W	н	D1	D2	W1	W2	W3	W4	H1	H2	НЗ	H4	H5	Α	В	d1	Heatsink Model (Code No.)
2004																	
2006																	900-193-209-001
2008	140	294	138	38	102	102	16	3	282	23	6	26	6	134	233	M5	(100-203-229)
2010																	(100 200 223)
2012																	
2018																	
2021	140	294	138	73	102	102	16	3	282	23	6	26	6	134	233	M5	900-193-209-001
2030	140	254	100	70	102	102	10	O	202	20	O	20	O	104	200	1010	(100-203-229)
2042																	
2056	180	329	134	68	140	140	17	3	318	23.5	5	24.5	6	174	270	M5	900-193-209-002 (100-203-230)
2070	220	384	140	87	192	192	11	3	371	27	7	25	6	214	319	M6	900-193-209-003
2082	220	304	140	01	132	192	- ' '	3	3/1	21	'	23	O	214	319	IVIO	(100-203-231)
2110	240	400	166	114	195	204	14.5	8	385	19.5	7.5	19.5	7.5	224	346	M6	_
2138	255	450	166	114	170	210	34.5	8	436	20	8	20	6	239	396	M6	_
2169	264	543	186	149	190	220	29	8	527	19.5	8.5	20.5	7.5	248	487	M8	_
2211	204	040	100	143	100	220	20	O	021	10.0	0.0	20.0	7.0	240	407	1410	
2257	312	700	260	160	218	263	39	8	675	33	12	32	13	296	610	M10	_
2313	012	, 50	250	.50	210	230	00	3	070	- 00	12	OL.	.0	230	010	14110	
2360	440	800	254	218	370	310	23	12	773	31.5	14	31.5	13	416	710	M12	_
2415	140	550	254	210	070	010	20		. 70	01.0		01.0	.0	.10	. 10	14112	

100 V Class																			
Catalog								D	imensi	ons m	m						_		Attachment for External
Code GA70[]	W	Н	D1	D2	W1	W2	W3	W4	W5	W6	H1	H2	Н3	H4	H5	Α	В	d1	Heatsink Model (Code No.)
4002																			900-193-209-001
4004	140	294	138	38	102	102	16	3	_	_	282	23	6	26	6	134	233	M5	(100-203-229)
4005 4007																			
4007																			
4009	140	294	138	73	102	102	16	3			282	23	6	26	6	134	233	M5	900-193-209-001
4012	140	294	130	13	102	102	10	3	_		202	23	О	20	О	134	233	CIVI	(100-203-229)
4018																			
4031																			900-193-209-002
4038	180	329	134	68	140	140	17	3	_	_	318	23.5	5	24.5	6	174	270	M5	(100-203-230)
4044	220	384	140	87	192	192	11	3	_	_	371	27	7	25	6	214	319	M6	900-193-209-003 (100-203-231)
4060	220	384	140	106	192	192	11	3	_	_	371	27	7	25	6	214	319	M6	900-193-209-003 (100-203-231)
4075	240	400	166	114	195	204	14.5	8	_	_	385	19.5	7.5	19.5	7.5	224	346	M6	_
4089	255	450	166	11/	170	210	34.5	8			436	20	8	20	6	239	396	M6	
4103	255	450	100	114	170	210	34.5	0			430	20	0	20	O	239	390	IVIO	_
4140	264	543	186	149	190	220	29	8	_	_	527	19.5	8.5	20.5	7.5	248	487	M8	_
4168	204	040	100	143	130	220	23	U			521	13.5	0.5	20.5	7.5	240	401	IVIO	
4208																			
4250	312	700	260	160	218	263	39	8	_	_	675	33	12	32	13	296	610	M10	_
4296																			
4371	440	800	254	218	370	310	23	12	_	_	773	31.5	14	31.5	13	416	710	M12	_
4389																			
4453								4.0	.=-							105			
4568	510	1140	260	220	450	404	18	12	179	225	1110	34	15	34	15	486	1042	M12	_
4675																			

Peripheral Devices and Options

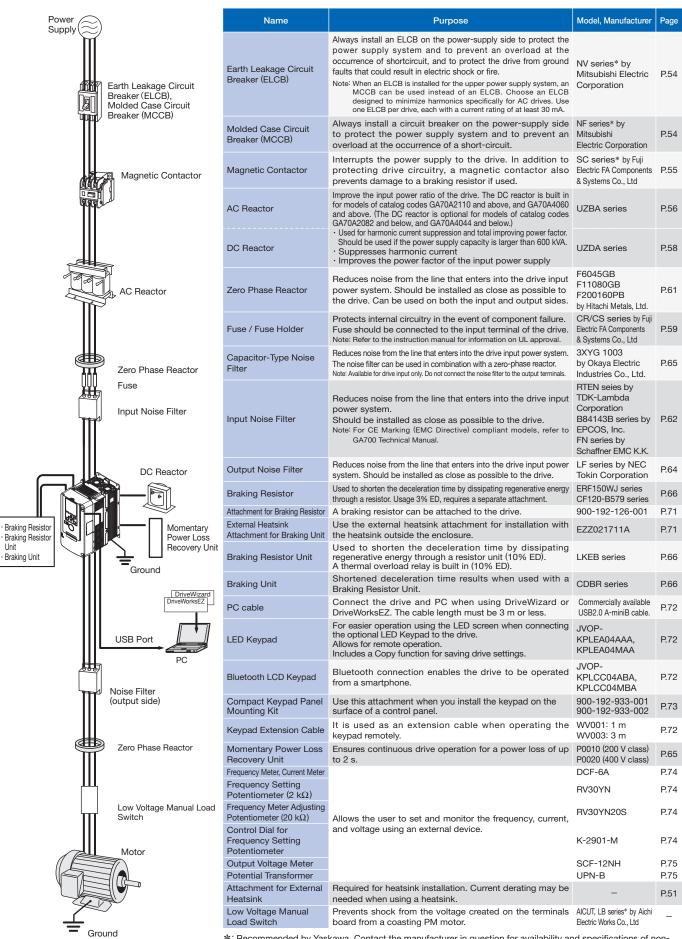

^{*:} Recommended by Yaskawa. Contact the manufacturer in question for availability and specifications of non-Yaskawa products.

Option Cards

RoHS compliant. Shipment of factory installed option is available. Contact Yaskawa.

Туре	Name	Model	Function	Manual No.
	Analog Input	AI-A3	Enables high-precision and high-resolution analog speed reference setting. · Input signal level: –10 to +10 Vdc (20 kΩ), 4 to 20 mA (250 Ω) · Input channels: 3 channels, DIP switch for input voltage/input current selection · Input resolution: Input voltage 13 bit signed (1/8192) Input current 1/4096	TOBPC73060078
Speed Reference Card	Digital Input	DI-A3	Enables 16-bit digital speed reference setting. Input signal: 16 bit binary, 2 digit BCD +sign signal +set signal Input voltage: 24 V (isolated) Input current: 8 mA User-set: 8 bit, 12 bit, 16 bit	TOBPC73060080
	MECHATROLINK- II	SI-T3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through MECHATROLINK- ${\mathbb I}$ communication with the host controller.	TOEPC73060086 SIEPC73060086
	MECHATROLINK- II	SI-ET3	Note: Use options with software versions of 6108 or later. Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through MECHATROLINK- communication with the host controller.	TOEPC73060088
	Interface CC-Link Interface	SI-C3	Note: Use options with software versions of 6202 or later. Used for running or stopping the drive, setting or referencing parameters, and monitoring output	
Card	DeviceNet Interface	SI-N3	frequency, output current, or similar items through CC-Link communication with the host controller. Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through DeviceNet communication with the host controller.	
ption		0.110	Note: Use options with software versions of 1114 or later. Used for HVAC control, running or stopping U1000, setting or referencing parameters, and	SIEPC73060084 TOEPC73060093
Communications Option Card	LONWORKS Interface	SI-W3	monitoring output current, watt-hours, or similar items through LONWORKS communications with the host controller.	SIEPC73060093
ınicat	PROFIBUS-DP Interface	SI-P3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through PROFIBUS-DP communication with the host controller.	TOBPC73060082 SIEPC73060082
ommı	CANopen Interface	SI-S3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through CANopen communication with the host controller.	TOBPC73060085 SIEPC73060085
O	EtherCAT Interface	SI-ES3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through EtherCAT communication with the host controller.	TOBPC73060096 SIEPC73060096
	EtherNet/IP Interface	SI-EN3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through EtherNet/IP communication with the host controller.	TOEPC73060092 SIEPC73060092
	Modbus TCP/IP Interface	SI-EM3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through Modbus TCP/IP communication with the host controller.	TOEPC73060091 SIEPC73060091
	PROFINET Interface	SI-EP3	Used for running or stopping the drive, setting or referencing parameters, and monitoring output frequency, output current, or similar items through PROFINET communication with the host controller.	
Monitor Option Card	Analog Monitor	AO-A3	Outputs analog signal for monitoring drive output state (output freq., output current etc.). Output resolution: 11 bit signed (1/2048) Output voltage: -10 to +10 Vdc (non-isolated) Terminals: 2 analog outputs	TOBPC73060079
Monitor (Digital Output	DO-A3	Outputs isolated type digital signal for monitoring drive run state (alarm signal, zero speed detection, etc.) Terminals: 6 photocoupler outputs (48 V, 50 mA or less) 2 relay contact outputs (250 Vac, 1 A or less 30 Vdc, 1 A or less)	TOBPC73060081
	Complimentary Type PG	PG-B3	For control modes requiring a PG encoder for motor feedback. Phase A, B, and Z pulse (3-phase) inputs (complementary type) Max. input frequency: 50 kHz Pulse monitor output: Open collector, 24 V, max. current 30 mA Power supply output for PG: 12 V, max. current 200 mA Note: Not available in Advanced Open Loop Vector for PM.	TOBPC73060075
	Line Driver PG	PG-X3	For control modes requiring a PG encoder for motor feedback or PM motor feedback. Phase A, B, and Z pulse (differential pulse) inputs (RS-422) Max. input frequency: 300 kHz Pulse monitor output: RS-422 Power supply output for PG: 5 V or 12 V, max. current 200 mA	TOBPC73060076
PG Speed Controller Card	Motor Encoder Feedback (EnDat, HIPERFACE) Interface	PG-F3	For control modes requiring a PG encoder for PM motor feedback. Encoder type: EnDat 2.1/01, EnDat 2.2/01, and EnDat 2.2/22 (HEIDENHAIN), HIPERFACE (SICK STEGMANN) Maximum input frequency: 20 kHz (Used with low-speed gearless motors.) Note: EnDat 2.2/22 does not have maximum input frequency. Wiring length: 20 m max. for the encoder, 30 m max. for the pulse monitor Pulse monitor: Matches RS-422 level Note: EnDat 2.2/22 is not available. [Encoder power supply: 5 V, max current 330 mA or 8 V, max current 150 mA] Use one of the following encoder cables. EnDat2.1/01, EnDat2.2/01: 17-pin cable from HEIDENHAIN EnDat2.2/22 Sepin cable from HEIDENHAIN	TOBPC73060077
	Resolver Interface for TS2640N321E64	PG-RT3	HIPERFACE : 8-pin cable from SICK STEGMANN For control modes requiring a PG encoder for motor feedback or PM motor feedback. Can be connected to the TS2640N321E64 resolver made by Tamagawa Seiki Co., Ltd. and electrically compatible resolvers. The representative electrical characteristics of the TS2640N321E64 are as follows. Input voltage: 7 Vac rms 10 kHz Transformation ratio: 0.5 ± 5% maximum input current: 100 mArms Wiring length: 10 m max. (100 m max. for the SS5 and SS7 series motors manufactured by Yaskawa and PG cables manufactured by Yaskawa Controls Co., Ltd.)	TOBPC73060087

Note: 1. The communication file required when operating the communication card with the configurator can be downloaded from e-Mecha Site (www.e-mechatronics.com).

2. PG speed controller card is required for PG control.

Earth LeakageCircuit Breaker (ELCB), Molded Case Circuit Breaker (MCCB)

Device selection is based on the motor capacity.

Make sure that the rated breaking capacity is higher than the shortcircuit current for the power supply. Protect the wiring to withstand the shortcircuit current for the power supply using a combination of fuses if the rated breaking capacity of the ELCB or MCCB is insufficient, such as when the power transformer capacity is large.



Earth Leakage Circuit Breaker [Mitsubishi Electric Corporation]



Molded Case Circuit Breaker [Mitsubishi Electric Corporation]

200 V Class

		E	arth Leakage	Circuit Break	er				Molded Case (Circuit Break	er	
Motor	Wit	thout React	tor*1	W	/ith Reacto	r*1	Wit	thout Reac	tor*1	W	ith Reacto	r*1
Capacity (kW)	Model	Rated Current (A)	Interrupt Capacity (kA) Icu/Ics*2	Model	Rated Current (A)	Interrupt Capacity (kA) Icu/Ics*2	Model	Rated Current (A)	Interrupt Capacity (kA) Icu/Ics*2	Model	Rated Current (A)	Interrupt Capacity (kA) Icu/Ics*2
0.4	NV32-SV	5	10/10	NV32-SV	5	10/10	NF32-SV	5	7.5/7.5	NF32-SV	5	7.5/7.5
0.75	NV32-SV	10	10/10	NV32-SV	10	10/10	NF32-SV	10	7.5/7.5	NF32-SV	10	7.5/7.5
1.1 1.5	NV32-SV	15	10/10	NV32-SV	10	10/10	NF32-SV	15	7.5/7.5	NF32-SV	10	7.5/7.5
2.2	NV32-SV	20	10/10	NV32-SV	15	10/10	NF32-SV	20	7.5/7.5	NF32-SV	15	7.5/7.5
3 3.7	NV32-SV	30	10/10	NV32-SV	20	10/10	NF32-SV	30	7.5/7.5	NF32-SV	20	7.5/7.5
5.5	NV63-SV	50	15/15	NV63-SV	40	15/15	NF63-SV	50	15/15	NF63-SV	40	15/15
7.5	NV125-SV	60	50/50	NV63-SV	50	15/15	NF125-SV	60	50/50	NF63-SV	50	15/15
11	NV125-SV	75	50/50	NV125-SV	75	50/50	NF125-SV	75	50/50	NF125-SV	75	50/50
15	NV250-SV	125	85/85	NV125-SV	100	50/50	NF250-SV	125	85/85	NF125-SV	100	50/50
18.5	NV250-SV	150	85/85	NV250-SV	125	85/85	NF250-SV	150	85/85	NF250-SV	125	85/85
22	*3	-	_	NV250-SV	150	85/85	*3	_	_	NF250-SV	150	85/85
30	*3	-	-	NV250-SV	175	85/85	*3	-	_	NF250-SV	175	85/85
37	*3	-	_	NV250-SV	225	85/85	*3	_	_	NF250-SV	225	85/85
45	*3	-	-	NV400-SW	250	85/85	*3	_	_	NF400-CW	250	50/25
55	*3	-	-	NV400-SW	300	85/85	*3	-	-	NF400-CW	300	50/25
75	*3	-	-	NV400-SW	400	85/85	*3	_	-	NF400-CW	400	50/25
90	*3	-	_	NV630-SW	500	85/85	*3	_	_	NF630-CW	500	50/25
110	*3	-	-	NV630-SW	600	85/85	*3	_	_	NF630-CW	600	50/25

- *1: Indicates whether an AC reactor or DC reactor is connected to the drive.
- *2: lou: Rated ultimate short-circuit breaking capacity los: Rated service short-circuit breaking capacity.

 *3: Drives with the motor capacity of 200 V class 22 kW and above (catalog codes: GA70A2110 to 2415) include a built-in DC reactor that improves the power factor.

		E	arth Leakage	Circuit Break	er				Molded Case (Circuit Break	er	
Motor	Wit	hout React	tor*1	W	ith Reacto	r*1	Wit	hout Reac	tor*1	W	ith Reacto	r*1
Capacity (kW)	Model	Rated Current (A)	Interrupt Capacity (kA) Icu/Ics*2	Model	Rated Current (A)	Interrupt Capacity (kA) Icu/Ics*2	Model	Rated Current (A)	Interrupt Capacity (kA) Icu/Ics*2	Model	Rated Current (A)	Interrupt Capacity (kA) Icu/Ics*2
0.4	NV32-SV	5	5/5	NV32-SV	5	5/5	NF32-SV	3	2.5/2.5	NF32-SV	3	2.5/2.5
0.75	NV32-SV	5	5/5	NV32-SV	5	5/5	NF32-SV	5	2.5/2.5	NF32-SV	5	2.5/2.5
1.5	NV32-SV	10	5/5	NV32-SV	10	5/5	NF32-SV	10	2.5/2.5	NF32-SV	10	2.5/2.5
2.2	NV32-SV	15	5/5	NV32-SV	10	5/5	NF32-SV	15	2.5/2.5	NF32-SV	10	2.5/2.5
3 3.7	NV32-SV	20	5/5	NV32-SV	15	5/5	NF32-SV	20	2.5/2.5	NF32-SV	15	2.5/2.5
5.5	NV32-SV	30	5/5	NV32-SV	20	5/5	NF32-SV	30	2.5/2.5	NF32-SV	20	2.5/2.5
7.5	NV32-SV	30	5/5	NV32-SV	30	5/5	NF32-SV	30	2.5/2.5	NF32-SV	30	2.5/2.5
11	NV63-SV	50	7.5/7.5	NV63-SV	40	7.5/7.5	NF63-SV	50	7.5/7.5	NF63-SV	40	7.5/7.5
15	NV125-SV	60	25/25	NV63-SV	50	7.5/7.5	NF125-SV	60	25/25	NF63-SV	50	7.5/7.5
18.5	NV125-SV	75	25/25	NV125-SV	60	25/25	NF125-SV	75	25/25	NF125-SV	60	25/25
22	*3	_	_	NV125-SV	75	25/25	*3	_	_	NF125-SV	75	25/25
30	*3	_	-	NV125-SV	100	25/25	*3	_	-	NF125-SV	100	25/25
37	*3	_	_	NV250-SV	125	36/36	*3	_	_	NF250-SV	125	36/36
45	*3	_	-	NV250-SV	150	36/36	*3	_	-	NF250-SV	150	36/36
55	*3	_	_	NV250-SV	175	36/36	*3	_	_	NF250-SV	175	36/36
75	*3	_	-	NV250-SV	225	36/36	*3	_	-	NF250-SV	225	36/36
90	*3	_	_	NV400-SW	250	42/42	*3	_	_	NF400-CW	250	25/13
110	*3	_	-	NV400-SW	300	42/42	*3	-	-	NF400-CW	300	25/13
132	*3	_	_	NV400-SW	350	42/42	*3	_	_	NF400-CW	350	25/13
160	*3	_	-	NV400-SW	400	42/42	*3	-	-	NF400-CW	400	25/13
200	*3	_	_	NV630-SW	500	42/42	*3	_	-	NF600-CW	630	36/18
220	*3	_	-	NV630-SW	630	42/42	*3	-	-	NF600-CW	630	36/18
250	*3	_	_	NV630-SW	630	42/42	*3	-	-	NF600-CW	630	36/18
315	*3	_	-	NV800-SEW	800	42/42	*3	-	-	NF800-CEW	800	36/18
355	*3	-	_	NV800-SEW	800	42/42	*3	_	-	NF800-CEW	800	36/18

^{*1:} Indicates whether an AC reactor or DC reactor is connected to the drive.

Magnetic Contactor

Base device selection on motor capacity.




Magnetic Contactor [Fuji Electric FA Components & Systems Co., Ltd]

200 V Class

Motor Capacity	Without I	Reactor*1	With Re	eactor*1
(kW)	Model	Rated Current (A)	Model	Rated Current (A)
0.4	SC-03	11	SC-03	11
0.75	SC-05	13	SC-03	11
1.1	SC-4-0	18	SC-05	13
1.5	SC-4-0	18	SC-05	13
2.2	SC-N1	26	SC-4-0	18
3	SC-N2	35	SC-N1	26
3.7	SC-N2	35	SC-N1	26
5.5	SC-N2S	50	SC-N2	35
7.5	SC-N3	65	SC-N2S	50
11	SC-N4	80	SC-N4	80
15	SC-N5A	93	SC-N4	80
18.5	SC-N5	93	SC-N5	93
22	*2	-	SC-N6	125
30	*2	-	SC-N7	152
37	*2	-	SC-N8	180
45	*2	-	SC-N10	220
55	*2	-	SC-N11	300
75	*2	_	SC-N12	400
90	*2	-	SC-N12	400
110	*2	_	SC-N14	600

*1: Indicates whether an AC reactor or DC reactor is connected to the drive.
*2: Drives with the motor capacity of 200 V class 22 kW and above (catalog codes: GA70A2110 to 2415) include a built-in DC reactor that improves the power factor.

Wiring a Magnetic Contactor in Parallel

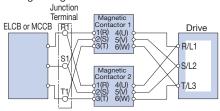

Note: When wiring contactors in parallel, make sure wiring lengths are the same to keep current flow even to the relay terminals.

400 V Class

Motor Capacity	Without I	Reactor*1	With Re	eactor*1
(kW)	Model	Rated Current (A)	Model	Rated Current (A)
0.4	SC-03	7	SC-03	7
0.75	SC-03	7	SC-03	7
1.5	SC-05	9	SC-05	9
2.2	SC-4-0	13	SC-4-0	13
3	SC-4-1	17	SC-4-1	17
3.7	SC-4-1	17	SC-4-1	17
5.5	SC-N2	32	SC-N1	25
7.5	SC-N2S	48	SC-N2	32
11	SC-N2S	48	SC-N2S	48
15	SC-N3	65	SC-N2S	48
18.5	SC-N3	65	SC-N3	65
22	*2	-	SC-N4	80
30	*2	_	SC-N4	80
37	*2	-	SC-N5	90
45	*2	-	SC-N6	110
55	*2	-	SC-N7	150
75	*2	-	SC-N8	180
90	*2	-	SC-N10	220
110	*2	-	SC-N11	300
132	*2	-	SC-N11	300
160	*2	-	SC-N12	400
200	*2	-	SC-N12	400
220	*2	-	SC-N14	600
250	*2	-	SC-N14	600
315	*2	-	SC-N16	800
355	*2	- captor or DC roa	SC-N16	800

*1: Indicates whether an AC reactor or DC reactor is connected to the drive. #2: Drives with the motor capacity of 400 V class 22 kW and above (catalog codes: GA70A4060 to 4675) include a built-in DC reactor that improves the power factor.


AC Reactor (UZBA-B for 50/60 Hz Input)

Base device selection on motor capacity.

Lead Wire Type





Connection Diagram

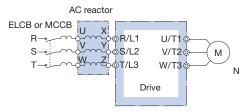


Note: When using low noise type drives (high-carrier frequency of 2.5 kHz or more), do not connect an AC reactor to the output side (U, V, W) of the drive.

Dimensions (mm)

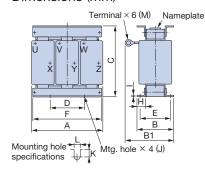

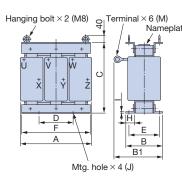

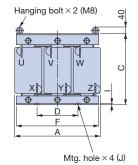

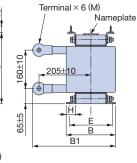


Figure 1

Figure 2

Figure 3

200 V Class

200 V O	1400																		
Motor	Current	Inductance	Code No.	Figure						Dime	nsions	(mm)						Weight	Watt Loss
Capacity (kW)	(A)	(mH)	Code No.	rigure	Α	В	B1	С	D	Е	F	Н	ı	J	K	L	М	(kg)	(W)
3	20	0.50	100 050 560	4	100	88	444	105	50	70	120	22	3.2	MC	44 5	7	N 4 E	0	35
3.7	20	0.53	100-250-562	'	130	00	114	105	50	70	130	22	3.2	M6	11.5	1	M5	3	35
5.5	30	0.35	100-250-578	1	130	88	119	105	50	70	130	22	3.2	M6	9	7	M5	3	45
7.5	40	0.265	100-250-584	1	130	98	139	105	50	80	130	22	3.2	M6	11.5	7	M6	4	50
11	60	0.18	100-250-594	1	160	105	147.5	130	75	85	160	25	2.3	M6	10	7	M6	6	65
15	80	0.13	100-250-599	1	180	100	155	150	75	80	180	25	2.3	M6	10	7	M8	8	75
18.5	90	0.12	100-250-602	1	180	100	150	150	75	80	180	25	2.3	M6	10	7	M8	8	90
22	120	0.09	100-250-552	1	180	100	155	150	75	80	180	25	2.3	M6	10	7	M10	8	90
30	160	0.07	100-250-557	1	210	100	170	175	75	80	205	25	3.2	M6	10	7	M10	12	100
37	200	0.05	100-250-560	1	210	115	182.5	175	75	95	205	25	3.2	M6	10	7	M10	15	110
45	240	0.044	100-250-574	1	240	126	218	215	150	110	240	25	3.2	M8	8	7	M10	23	125
55	280	0.039	100-250-576	1	240	126	218	215	150	110	240	25	3.2	M8	8	10	M12	23	130
75	360	0.026	100-250-583	1	270	162	241	230	150	130	260	40	5	M8	16	10	M12	32	145
90	500	0.02	100-250-589	2	330	162	281	270	150	130	320	40	4.5	M10	16	10	M12	55	200
110	500	0.02	100-250-589	2	330	162	281	270	150	130	320	40	4.5	M10	16	10	M12	55	200

Motor	Current	Inductance	Orda Na	Firm						Dimer	nsions	(mm)						Weight	Watt Loss
Capacity (kW)	(A)	(mH)	Code No.	Figure	Α	В	B1	С	D	Е	F	Н	- 1	J	K	L	М	(kg)	(W)
7.5	20	1.06	100-250-564	1	160	90	115	130	75	70	160	25	2.3	M6	10	7	M5	5	50
11	30	0.7	100-250-580	1	160	105	132.5	130	75	85	160	25	2.3	M6	10	7	M5	6	65
15	40	0.53	100-250-586	1	180	100	140	150	75	80	180	25	2.3	M6	10	7	M6	8	90
18.5	50	0.42	100-250-590	1	180	100	145	150	75	80	180	25	2.3	M6	10	7	M6	8	90
22	60	0.36	100-250-596	1	180	100	150	150	75	80	180	25	2.3	M6	10	7	M6	8.5	90
30	80	0.26	100-250-601	1	210	100	150	175	75	80	205	25	3.2	M6	10	7	M8	12	95
37	90	0.24	100-250-604	1	210	115	177.5	175	75	95	205	25	3.2	M6	10	7	M8	15	110
45	120	0.18	100-250-553	1	240	126	193	205	150	110	240	25	3.2	M8	8	10	M10	23	130
55	150	0.15	100-250-554	1	240	126	198	205	150	110	240	25	3.2	M8	8	10	M10	23	150
75	200	0.11	100-250-561	1	270	162	231	230	150	130	260	40	5	M8	16	10	M10	32	135
90	250	0.09	100-250-575	1	270	162	246	230	150	130	260	40	5	M8	16	10	M12	32	135
110	250	0.09	100-250-575	'	210	102	240	230	130	130	200	40	3	IVIO	10	10	IVIIZ	32	133
132	330	0.06	100-250-582	2	320	165	253	275	150	130	320	40	4.5	M10	17.5	12	M12	55	200
160	330	0.06	100-250-582	2	320	103	233	213	130	130	320	40	4.5	IVITO	17.5	12	IVIIZ	33	200
200	490	0.04	100-250-588																
220	490	0.04	100-250-588	2	330	176	293	275	150	150	320	40	4.5	M10	13	12	M12	60	340
250	490	0.04	100-250-588																
315	660	0.03	100-250-597	3	330	216	353	285	150	185	320	40	4.5	M10	22	12	M16	80	300
355	660	0.03	100-250-597	3	330	210	333	200	130	100	320	40	4.5	IVITO	22	12	IVITO	60	300

Terminal Type



Dimensions (mm)


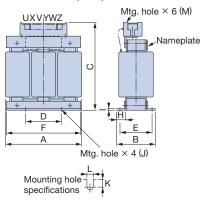


Figure 1

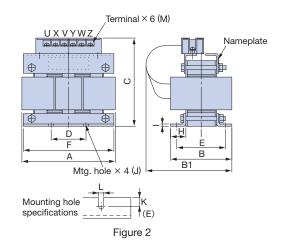

200 V Class

Motor	Current	Inductance	Code No.	Eiguro						Dime	nsions	(mm)						Weight	Watt Loss
Capacity (kW)	(A)	(mH)	Code No.	Figure	Α	В	B1	С	D	Е	F	Н	1	J	K	L	М	(kg)	(W)
0.4	2.5	4.2	100-250-558	1	120	71	_	120	40	50	105	20	2.3	M6	10.5	7	M4	2.5	15
0.75	5	2.1	100-250-592	1	120	71	_	120	40	50	105	20	2.3	M6	10.5	7	M4	2.5	15
1.1 1.5	10	1.1	100-250-550	1	130	88	_	130	50	70	130	22	3.2	M6	9	7	M4	3	25
2.2	15	0.71	100-250-555	1	130	88		130	50	70	130	22	3.2	M6	9	7	M4	3	30
3 3.7	20	0.53	100-250-563	2	135	88	140	130	50	70	130	22	3.2	M6	9	7	M4	3	35
5.5	30	0.35	100-250-579	2	135	88	150	130	50	70	130	22	3.2	M6	9	7	M4	3	45
7.5	40	0.265	100-250-585	2	135	98	160	140	50	80	130	22	3.2	M6	9	7	M5	4	50
11	60	0.18	100-250-595	2	165	105	185	170	75	85	160	25	2.3	M6	10	7	M6	6	65
15	80	0.13	100-250-600	2	185	100	180	195	75	80	180	25	2.3	M6	10	7	M6	8	75
18.5	90	0.12	100-250-603	2	185	100	180	195	75	80	180	25	2.3	M6	10	7	M6	8	90

Motor	Current	Inductance	Code No.	Figure		Dimensions (mm)									Weight	Watt Loss			
Capacity (kW)	(A)	(mH)	Code No.	Figure	Α	В	B1	С	D	Е	F	Н	- 1	J	K	L	M	(kg)	(W)
0.4	1.3	18	100-250-549	1	120	71	_	120	40	50	105	20	2.3	M6	10.5	7	M4	2.5	15
0.75	2.5	8.4	100-250-559	1	120	71	-	120	40	50	105	20	2.3	M6	10.5	7	M4	2.5	15
1.5	5	4.2	100-250-593	1	130	88	_	130	50	70	130	22	3.2	M6	9	7	M4	3	25
2.2	7.5	3.6	100-250-598	1	130	88	-	130	50	70	130	22	3.2	M6	9	7	M4	3	25
3 3.7	10	2.2	100-250-551	1	130	88	_	130	50	70	130	22	3.2	M6	9	7	M4	3	40
5.5	15	1.42	100-250-556	1	130	98	-	130	50	80	130	22	3.2	M6	9	7	M4	4	50
7.5	20	1.06	100-250-565	2	165	90	160	155	75	70	160	25	2.3	M6	10	7	M4	5	50
11	30	0.7	100-250-581	2	165	105	175	155	75	85	160	25	2.3	M6	10	7	M4	6	65
15	40	0.53	100-250-587	2	185	100	170	185	75	80	180	25	2.3	M6	10	7	M5	8	90
18.5	50	0.42	100-250-591	2	185	100	170	185	75	80	180	25	2.3	M6	10	7	M5	8	90


DC Reactor (UZDA-B for DC circuit)

Base device selection on motor capacity.

Terminal Type



Dimensions (mm)

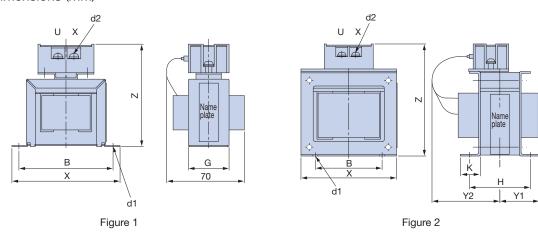

200 V Class

Motor Capacity	Current (A)	Inductance (mH)	Code No.	Figure								Weight (kg)	Watt Loss			
(kW)	` ′	· ´			Χ	Y2	Y1	Z	В	Н	K	G	d1	d2		(W)
0.4	5.4	8	100-250-673	1	85	_	_	81	74	_	_	32	M4	M4	0.8	8
0.75	5.4	0	100-250-075	'	65			01	74			32	1014	1014	0.6	0
1.1																
1.5																
2.2	18	3	100-250-661	2	86	84	36	101	60	55	18	_	M4	M4	2	18
3																
3.7																
5.5	36	1	100-250-669	2	105	94	46	129	64	80	26	_	M6	M4	3.2	22
7.5	30	1	100-250-009	2	103	94	40	129	04	00	20		IVIO	1014	3.2	22
11	72	0.5	100-250-678	2	105	124	56	135	64	100	26	_	M6	M6	4.9	29
15	12	0.5	100-230-076	2	103	124	30	133	04	100	20		IVIO	IVIO	4.9	29
18.5	90	0.4	100-250-680	2	133	147.5	52.5	160	86	80	25	_	M6	M6	6.5	44
22 to 110	Built-in															

Motor Capacity	Current (A)	Inductance (mH)	Code No.	Figure		Dimensions (mm)							Weight (kg)	Watt Loss		
(kW)		()			Х	Y2	Y1	Z	В	Н	K	G	d1	d2	(g/	(W)
0.4 0.75	3.2	28	100-250-665	1	85	-	_	81	74	-	_	32	M4	M4	0.8	9
1.5 2.2	5.7	11	100-250-675	1	90	-	-	88	80	-	-	32	M4	M4	1	11
3 3.7	12	6.3	100-250-659	2	86	84	36	101	60	55	18	-	M4	M4	2	16
5.5 7.5	23	3.6	100-250-663	2	105	104	46	118	64	80	26	-	M6	M4	3.2	27
11 15	33	1.9	100-250-667	2	105	109	51	129	64	90	26	-	M6	M4	4	26
18.5	47	1.3	100-250-671		115	142.5	57.5	136	72	90	25	-	M6	M5	6	42
22 to 355	Built-in															


Fuse and Fuse Holder

Install a fuse to the drive input terminals to prevent damage in case a fault occurs. Refer to the instruction manual for information on UL-approved components. [Fuji Electric FA Components & Systems Co., Ltd]

Connection Diagram

This example shows a DC power supply (two drives connected in series).

For an AC power supply, see the connection diagram on page 34.

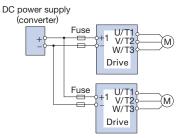


Note: When connecting multiple drives together, make sure that each drive has its own fuse. If any one fuse blows, all fuses should be replaced.

200 V Class

	AC Power Supply Input						DC Power Supply Input							
Catalog Code		Fuse		Fuse	Holder			Fuse		Fuse	Holder			
GA70A:	Model	Rated Shortcircuit Breaking Current (kA)	Qty.	Model	Qty.	Figure	Model	Rated Shortcircuit Breaking Current (kA)	Qty.	Model	Qty.	Figure		
2004														
2006	CR2LS-30	100	3	CM-1A	1	1	CR2LS-30	100	2	CM-1A	1	1		
2008														
2010	CR2LS-50	100	3	CM-1A	1	1	CR2LS-50	100	2	CM-1A	1	1		
2012	Ch2L3-30	100	3	CIVI- IA	'	'	Ch2L5-50	100	2	CIVI- IA	'	'		
2018	CR2LS-75	100	3	CM-1A	1	1	CR2LS-75	100	2	CM-1A	1	1		
2021	Ch2L3-73	100	3	CIVI- IA		'	UHZL3-73	100	2	CIVI- IA	'	'		
2030	CR2LS-100	100	3	CM-1A	1	1	CR2LS-100	100	2	CM-1A	1	1		
2042	CR2L-125	100	3	CM-2A	1	2	CR2L-150	100	2	CM-2A	1	2		
2056	CR2L-150	100	3	CM-2A	1	2	CR2L-175	100	2	CM-2A	1	2		
2070	CR2L-200	100	3		*		CR2L-225	100	2		*			
2082	CR2L-260	100	3		*		CR2L-260	100	2		*			
2110	Ch2L-200	100	3		~		Ch2L-200	100	2		*			
2138	CR2L-300	100	3		*		CR2L-350	100	2		*			
2169	CR2L-350	100	3		*		CR2L-400	100	2		*			
2211	CR2L-450	100	3		*		CR2L-450	100	2		*			
2257							CDOL 600	100						
2313	CR2L-600	100	3		*		CR2L-600	100	2		*			
2360						CS5F-800	200							
2415	CS5F-800	200	3		*		CS5F-1200	200	2		*			

^{*:} Manufacturer does not recommend a specific fuse holder for this fuse.

Fuse Holder Dimensions (mm)

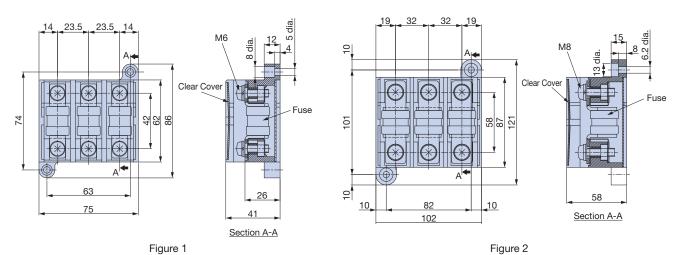


Fuse and Fuse Holder (continued)


400 V Class

		AC Power S	DC Power Supply Input									
Catalog Code		Fuse		Fuse	Holder			Fuse		Fuse	Holder	
GA70A:	Model	Rated Shortcircuit Breaking Current (kA)	Qty.	Model	Qty.	Figure	Model	Rated Shortcircuit Breaking Current (kA)	Qty.	Model	Qty.	Figure
4002	CR6L-20	100	3	CMS-4	3	3	CR6L-20	100	2	CMS-4	2	3
4004	CR6L-30	100	3	CMS-4	3	3	CR6L-30	100	2	CMS-4	2	3
4005												
4007												
4009	CR6L-50	100	3	CMS-4	3	3	CR6L-50	100	2	CMS-4	2	3
4012												
4018												
4023	CR6L-75	100	3	CMS-5	3	4	CR6L-75	100	2	CMS-5	2	4
4031	CR6L-100	100	3	CMS-5	3	4	CR6L-100	100	2	CMS-5	2	4
4038												
4044	CR6L-150	100	3	CMS-5	3	4	CR6L-150	100	2	CMS-5	2	4
4060												
4075							CDCL OFO					
4089	CR6L-250	100	3		*		CR6L-250	100	2		*	
4103							CR6L-300					
4140	CR6L-300	100	3		*		CR6L-350	100	2		*	
4168	CR6L-400	100	3		*		CR6L-400	100	2		*	
4208	CR6L-500	100										
4250	CS5F-600	200	3		*		CS5F-600	200	2		*	
4296	CS5F-600	200										
4371												
4389	CCEE 000	CS5F-800 200	000		*		CS5F-800	200	2			
4453	CS5E-800	200	3		•			200	2		*	
4568							CS5F-1200					
4675	CS5F-1000	200	3		*		CS5F-1500	200	2		*	

^{*:} Manufacturer does not recommend a specific fuse holder for this fuse.

Fuse Holder Dimensions (mm)

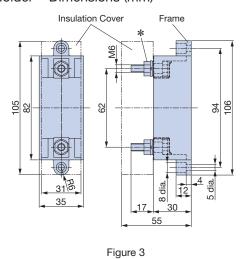

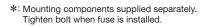

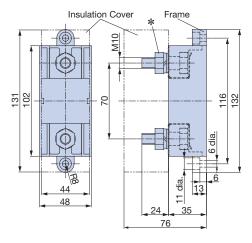


Figure 4

Zero Phase Reactor

Zero-phase reactor should match wire gauge.*


*: Current values for wire gauges may vary based on electrical codes. The table below lists selections based on Japanese electrical standards and Yaskawa's ND rating.


Contact Yaskawa for questions regarding UL.
Pass each wire (U/T1, V/T2, W/T3) through the core 4 times. Noise will be more effectively reduced when more wire is wrapped.

If the wire is thick and cannot be wrapped around the core, pass it through in series of no less than 4 cores.


Connection Diagram

Compatible with the input and output side of the drive.

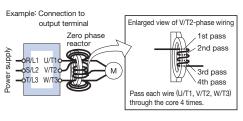

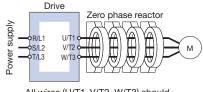

All wires (U/T1, V/T2, W/T3) should pass through the four cores of the reactor in series without winding.

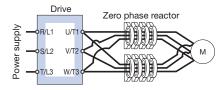

FINEMET Zero-Phase Reactor to Reduce Radio Noise

[Hitachi Metals, Ltd.]


Note: FINEMET is a trademark of Hitachi Metals, Ltd.


Separate each terminal lead for U/T1, V/T2, and W/T3 in half, passing one half of the wires through a set of four cores and the other half through the other set of four cores as shown. Diagram c

Diagram a


Diagram b

Dimensions (mm)

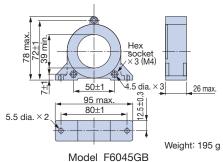

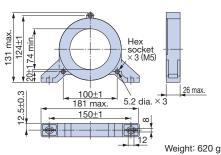

Model F11080GB

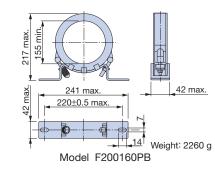

200 V Class

	GA70	0 (ND)	Zero Phase Reactor										
Motor Capacity		mended (mm²)		Input Side			Output Side						
(kW)	Input Side	Output Side	Model	Code No.	Qty.	Diagram	Model	Code No.	Qty.	Diagram			
0.4													
0.75													
1.1	2	2	F6045GB	100-250-745	1	а	F6045GB	100-250-745	1	а			
1.5													
2.2													
3	3.5	2	F6045GB	100-250-745	1	а	F6045GB	100-250-745	1	а			
3.7	3.5	3.5											
5.5	8	3.5	F11080GB	100-250-743	1	а	F6045GB	100-250-745	1	а			
7.5	14	8	F6045GB	100-250-745	4	b	F11080GB	100-250-743	1	а			
11	14	14											
15	22	14	F6045GB	100-250-745	4	b	F6045GB	100-250-745	4	b			
18.5	38	22											
22	50	30	F11080GB	100-250-743	4	b	F6045GB	100-250-745	4	b			
30	38	38	F6045GB	100-250-745	4	b	F6045GB	100-250-745	4	b			
37	60	60											
45	80	80	F11080GB	100-250-743	4	b	F11080GB	100-250-743	4	b			
55	100	125											
75	60×2P	50×2P	F200160PB	100-250-744	4	b	F11080GB	100-250-743	4	b			
90	80×2P	80×2P	F200160PB	100-250-744	4	b	F200160PB	100-250-744	4	b			
110	125×2P	125×2P	1200100PD	100-230-744	4	D	1200100PD	100-230-744	4	D			

Depending on the loading conditions of the motor, when a wire is selected that is not of the recommended gauge, select a zero-phase reactor using the table below

reactor using the table below.								
Wiring Gauge Guide mm ²	Model	Code No.	Qty.	Diagram				
2 to 5.5 or less	F6045GB	100-250-745	1	а				
More than 5.5 to 8	F11080GB	100-250-743	1	а				
More than 8 to 38	F6045GB	100-250-745	4*	b				
More than 38 to 200, more than $38 \times 2P$ to $50 \times 2P$	F11080GB	100-250-743	4*	b				
More than 200 to 250, more than $50\times2P$ to $150\times4P$	F200160PB	100-250-744	4*	b				
More than 150×4P to 150×8P	F200160PB	100-250-744	8*	С				

400 V Class

	GA70	0 (ND)	D) Zero Phase Reactor							
Motor Capacity	Recomi Gauge	mended (mm²)		Input Side				Output Side	е	
(kW)	Input Side	Output Side	Model	Code No.	Qty.	Diagram	Model	Code No.	Qty.	Diagram
0.4										
0.75										
1.5										
2.2	2	2	F6045GB	100-250-745	1	а	F6045GB	100-250-745	1	а
3										
3.7										
5.5										
7.5	3.5	3.5	F6045GB	100-250-745	1	а	F6045GB	100-250-745	1	а
11	8	5.5	F11080GB	100-250-743	1	а	F6045GB	100-250-745	1	а
15	14	8	F6045GB	100-250-745	4	b	F11080GB	100-250-743	1	а
18.5										
22	14	14	F6045GB	100-250-745	4	b	F6045GB	100-250-745	4	b
30										
37	22	22								
45	30	30	F6045GB	100-250-745	4	b	F6045GB	100-250-745	4	b
55	38	38								
75	60	60	F11080GB	100-250-743	4	b	F11080GB	100-250-743	4	b
90	80	80	FIIOOUGB	100-230-143	4	Ь	FILLOUGE	100-230-143	4	Ь
110	50×2P	50×2P	F11080GB	100-250-743	4	b	F11080GB	100-250-743	4	b
132	3U^2F	3U^2P	FIIUOUGD	100-230-743	4	В	FIIUOUGD	100-230-743	4	В
160	80×2P	80×2P	F200160PB	100-250-744	4	b	F200160PB	100-250-744	4	b
200	125×	125×	F200160PB	100-250-744	4	b	F200160PB	100-250-744	4	b
220	2P	2P	1 200 100 PB	100-200-744	4	D	1 200 100PB	100-230-744	4	D
250										
315	125 × 4P	100 × 4P	F200160PB	100-250-744	4	b	F200160PB	100-250-744	4	b
355	41	41								

^{*:} The selection of 4 or more zero-phase reactors assumes that the wires are thick and cannot be wrapped

When the wires can be wrapped, you can reduce the number of reactors used.

Input Noise Filter

Base device selection on motor capacity.



[TDK-Lamda Corporation]




[EPCOS, Inc.]




[Schaffner EMC K.K.] Select the internal EMC filter type for CE Marking (EMC Directive) compliant model. Refer to the instruction manual for more information.

Connection Diagram

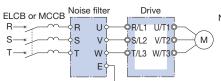

Note: Do not connect the input noise filter to the drive output terminals (U, V, W). Connect in parallel when using two filters.

Connecting Noise Filters in Parallel to the Input or Output Side (examples shows two filters in parallel)

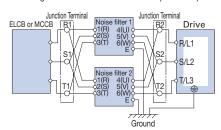

Note: When wiring contactors in parallel, make sure wiring lengths are the same to keep current flow even to the relay terminals. Noise filters and grounding wire should be as heavy and as short as possible.

200 V Class


Motor Capacity	Noise Filter by TD	K-Lamda Corporation				
(kW)	Model	Qty.	Rated Current (A)			
0.4						
0.75	RTEN-5010	1	10			
1.1						
1.5	RTEN-5020	- 1	20			
2.2	111214 0020	·	20			
3	RTEN-5030	1	30			
3.7		·				
5.5	RTEN-5040	1	40			
7.5	RTEN-5060	1	60			
11	RTEN-5100	1	100			
15	111211 0100	·	.00			
18.5						
22	RTEN-5150	1	150			
30						
37	RTEN-5200	1	200			
45						
55	RTEN-5300	1	300			
75	RTEN-5200	2	400			
90	RTEN-5250	2	500			
110	RTEN-5300	2	600			

Motor Capacity	Noise	Filter by Schaffner	EMC K.K.	
(kW)	Model	Code No.	Qty.	Rated Current (A)
0.4				
0.75				
1.1				
1.5	-	-	-	-
2.2				
3				
3.7				
5.5	FN258L-42-07	100-250-467	1	42
7.5	FN258L-55-07	100-250-468	1	55
11	FN258L-75-34	100-250-470	1	75
15	FN258L-100-35	100-250-462	1	100
18.5	FN258L-100-35	100-250-462	1	100
22	FN258L-130-35	100-250-463	1	130
30	FN258L-130-35	100-250-463	1	130
37	FN258L-180-07	100-250-465	1	180
45	FN200L-100-0/	100-200-405	1	100
55	FN359P-250-99	100-250-471	1	250
75	FN359P-400-99	100-250-473	1	400
90	FN359P-500-99	100-250-474	1	500
110	FN359P-600-99	100-250-475	1	600


	Noise Filter by TD	K-Lamda Corporation				
Motor Capacity (kW)	Model	Qty.	Rated Current (A)			
0.4 0.75	RTEN-5006	1	6			
1.5	RTEN-5010	1	10			
2.2	ITILIN 3010	'	10			
3.7	RTEN-5020	1	20			
5.5	RTEN-5030	1	30			
7.5	RTEN-5040	1	40			
11						
15	RTEN-5060	1	60			
18.5 22						
30	RTEN-5100	1	100			
37	111211 0 100	·				
45	RTEN-5150	1	150			
55		·				
75	RTEN-5200	1	200			
90	RTEN-5250	1	250			
110	RTEN-5300	1	300			
132	B84143B0400S080*	1	400			
160						
200 220						
250	B84143B1000S080*	1	1000			
315						
355						


Motor Capacity	Noise	Filter by Schaffner	EMC K.K.	
(kW)	Model	Code No.	Qty.	Rated Current (A)
0.4				
0.75				
1.5				
2.2	_	_	_	_
3				
3.7				
5.5				
7.5				
11	FN258L-42-07	100-250-467	1	42
15	FN258L-55-07	100-250-468	1	55
18.5	1142002 00 07	100 200 400	· ·	00
22	FN258L-75-34	100-250-470	1	75
30		100 200 470	·	
37	FN258L-100-35	100-250-462	1	100
45	FN258L-100-35	100-250-462	1	100
55	FN258L-130-35	100-250-463	1	130
75	FN258L-180-07	100-250-465	1	180
90				
110	FN359P-300-99	100-250-472	1	300
132	FN359P-400-99	100-250-473	1	400
160			·	
200	FN359P-500-99	100-250-474	1	500
220	FN359P-600-99	100-250-475	1	600
250				
315	FN359P-900-99	100-250-476	1	900
355			,	


^{*:} Manufactured by EPCOS, Inc.

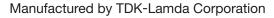


Dimensions (mm)

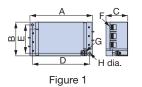

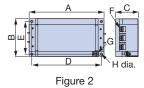

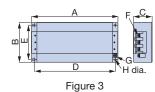


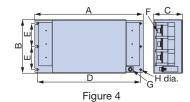

Model	Figure				Dimension	ons (mm)				Recommended Tightening Torque
Model	Figure	Α	В	С	D	Е	F	G	H dia.	(N·m)
RTEN-5006	1	120	63	42	110	53	M4	M4	4.5	
RTEN-5010	1	120	63	42	110	53	M4	M4	4.5	
RTEN-5020	2	140	70	42	130	60	M4	M4	4.5	M4: 1.27
RTEN-5030	2	140	70	42	130	60	M4	M4	4.5	M5: 2.5
RTEN-5040	2	170	90	54	160	80	M5	M4	4.5	
RTEN-5060	2	170	90	54	160	80	M5	M4	4.5	
RTEN-5100	3	267	161	85	247	135	M8	M6	6.5	
RTEN-5150	3	290	190	88	270	164	M8	M6	6.5	M6: 4.8
RTEN-5200	4	390	195	103	370	84.5	M10	M8	6.5	M8:7.64
RTEN-5250	4	390	195	103	370	84.5	M10	M8	6.5	M10:11.8
RTEN-5300	4	390	195	103	370	84.5	M10	M8	6.5	

Manufactured by EPCOS, Inc.

Dimensions (mm)

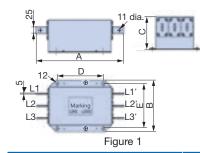

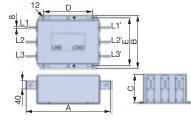
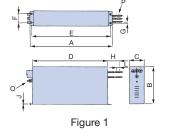


Figure 2

Model	Figure			Weight			
Model	Figure	Α	В	С	D	Е	(kg)
B84143B0400S080	1	320	190	120	170	165	7.5
B84143B1000S080	2	410	260	140	240	235	18.5

Manufactured by Schaffner EMC K.K.

Dimensions (mm)





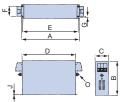


Figure 2

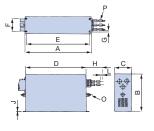

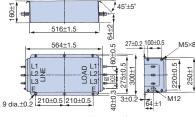

Model	(kg)
FN359P-250-99	16
FN359P-300-99	16
FN359P-400-99	18.5
FN359P-500-99	19.5
FN359P-600-99	20.5
FN359P-900-99	33

Fia	ure	4	

Model	Figure					Din	nensions (ı	nm)					Wire Gauge	Weight
Wodel	rigure	Α	В	С	D	Е	F	G	Н	J	L	0	Р	(kg)
FN258L-42-07	1	329	185±1	70	300	314	45	6.5	500	1.5	12	M6	AWG8	2.8
FN258L-55-07	1	329	185±1	80	300	314	55	6.5	500	1.5	12	M6	AWG6	3.1
FN258L-75-34	1	329	220	80	300	314	55	6.5	-	1.5	-	M6	-	4
FN258L-100-35	2	379±1.5	220	90±0.8	350±1.2	364	65	6.5	-	1.5	-	M10	-	5.5
FN258L-130-35	2	438±1.5	240	110±0.8	400±1.2	414	80	6.5	-	3	-	M10	-	7.5
FN-258L-180-07	3	438±1.5	240	110±0.8	400±1.2	413	80	6.5	500	4	15	M10	50 mm ²	11
FN359P-111111111111111111111111111111111111	4	The dimer	nsions are	shown in Fi	igure 4.									See above.

Note: For CE Marking (EMC Directive) compliant models, contact us for inquiry.


Output Noise Filter

Base device selection on motor capacity.




[NEC Tokin Corporation]

Connection Diagram

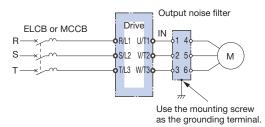

Dimensions (mm)

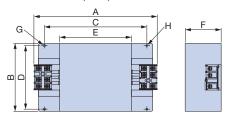



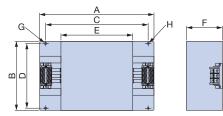


Figure 2

Motor				Rated					Dimen	sions (r	nm)			Terminal	Block	Weight*2
Capacity (kW)	Model	Code No.	Qty.*1	Current (A)	Figure	Α	В	С	D	Е	F	G	Н	Model	Screw Size	(kg)
0.4																
0.75	LF-310KA	100-261-505	1	10	1	150	100	100	90	70	45	7× 4.5 dia.	1.5 dia	OTB-203	M4	0.5
1.1	LI OTOTO	100 201 303	'	10		150	100	100	50	70	40	7 × 4.5 dia.	4.5 ula.	O1D 200	IVIT	0.0
1.5																
2.2																
3	LF-320KA	100-261-506	1	20	1	150	100	100	90	70	45	7×4.5 dia.	4.5 dia.	OTB-203	M4	0.6
3.7																
5.5	LF-350KA	100-261-510	1	50	2	260	180	180	160	120	65	7×4.5 dia.	4.5 dia.	CTKC-65S	M6	2.0
7.5 11																
15	LF-350KA	100-261-510	2	100	2	260	180	180	160	120	65	7× 4.5 dia.	1.5 dia	CTKC-659	M6	2.0
18.5	LI -550KA	100-201-310	2	100	2	200	100	100	100	120	03	7 ^ 4.5 ula.	4.5 Ula.	O110-000	IVIO	2.0
	LF-350KA*3	100-261-510	3	150	2	260	180	180	160	120	65	7× 4.5 dia.	4.5 dia	CTKC-65S	M6	2.0
22	LF-3110KB*3	100-261-513	1	110	2	540	340	480	300	340	240	9×6.5 dia.			M8	19.5
00	LF-350KA*3	100-261-510	3	150	2	260	180	180	160	120	65	7×4.5 dia.	4.5 dia.	CTKC-65S	M6	2.0
30	LF-375KB*3	100-261-512	2	150	2	540	320	480	300	340	240	9×6.5 dia.	6.5 dia.	CTKC-65S	M6	12.0
37																
45	LF-3110KB	100-261-513	2	220	2	540	320	480	300	340	240	9×6.5 dia.	6.5 dia.	CTKC-100	M8	19.5
55																
75	LF-3110KB	100-261-513	3	330	2	540	320	480	300	340	240	9×6.5 dia.			M8	19.5
90	LF-3110KB	100-261-513	4	440	2	540	320	480	300	340	240	9×6.5 dia.		CTKC-100	M8	19.5
110	LF-3110KB	100-261-513	5	550	2	540	320	480	300	340	240	9×6.5 dia.	6.5 dia.	CTKC-100	M8	19.5

^{*1:} Connect in parallel when using more than one filter. Refer to the Connecting Noise Filters in Parallel to the Input or Output Side on page 62.

^{*2:} Weight of one filter.

^{*3:} Either noise filter model can be used.

Output Noise Filter (continued)

400 V Class


Motor				Rated		Dimensions (mm)									Terminal Block		
Capacity (kW)	Model	Code No.	Qty.*1	Current (A)	Figure	Α	В	С	D	Е	F	G	Н	Model	Screw Size	Weight*2 (kg)	
0.4																	
0.75																	
1.5	LF-310KB	100-261-507	1	10	1	150	100	100	90	70	45	7× 4.5 dia.	4.5 dia.	OTB-203	M4	0.5	
2.2																	
3																	
3.7 5.5																	
7.5	LF-320KB	100-261-508	1	20	1	150	100	100	90	70	45	7×4.5 dia.	4.5 dia.	OTB-203	M4	0.6	
11																	
15	LF-335KB	100-261-509	1	35	1	150	100	100	90	70	45	7× 4.5 dia.	4.5 dia.	OTB-203	M4	8.0	
18.5	LF-345KB	100-261-511	1	45	2	260	180	180	160	120	65	7× 4.5 dia.	4.5 dia.	CTKC-65S	M6	2.0	
22	LF-375KB	100-261-512	1	75	2	540	320	480	300	340	240	0 × 6 E dia	C E 41a	CTIVO GEO	M6	12.0	
30	LF-3/3ND	100-201-512	'	75	2	540	320	400	300	340	240	9× 6.5 dia.	o.o dia.	C1KC-055	IVIO	12.0	
37	LF-3110KB	100-261-513	1	110	2	540	340	480	300	340	240	9× 6.5 dia.	6.5 dia	CTKC-100	M8	19.5	
45																	
55	LF-375KB	100-261-512	2	150	2	540	320	480	300	340	240	9× 6.5 dia.	6.5 dia.	CTKC-65S	M6	12.0	
75	LF-3110KB	100-261-513	2	220	2	540	320	480	300	340	240	9× 6.5 dia.	6.5 dia.	CTKC-100	M8	19.5	
90																	
132	LF-3110KB	100-261-513	3	330	2	540	320	480	300	340	240	9× 6.5 dia.	6.5 dia.	CTKC-100	M8	19.5	
160																	
200	LF-3110KB	100-261-513	4	440	2	540	320	480	300	340	240	9× 6.5 dia.	6.5 dia.	CTKC-100	M8	19.5	
220	LF-3110KB	100-261-513	5	550	2	540	320	480	300	340	240	9× 6.5 dia.	6.5 dia.	CTKC-100	M8	19.5	
250	LF-3110KB	100-261-513	6	660	2	540	320	480	300	340	240	9× 6.5 dia.			M8	19.5	
315	LF-3110KB	100-261-513	7	770	2	540	320	480	300	340	240	9×6.5 dia.	6.5 dia.	CTKC-100	M8	19.5	
355	LF-3110KB	100-261-513	8	880	2	540	320	480	300	340	240	9× 6.5 dia.	6.5 dia.	CTKC-100	M8	19.5	


^{*1:} Connect in parallel when using more than one filter. Refer to the Connecting Noise Filters in Parallel to the Input or Output Side on page 62.

Momentary Power Loss Recovery Unit

Connection Diagram



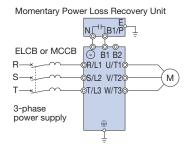

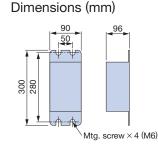

Model	Code No.
200 V Class: P0010	100-005-752
400 V Class: P0020	P0020

Note: Functions as a back-up power supply for drives up to 11 kW. Allows the drive to ride through a power loss up to 2 s long. The drive alone can continue running through a power loss lasting 0.1 s to 1.0 s. Results may vary with drive capacity.

Capacitor-Type Noise Filter

Capacitor-type noise filter exclusively designed for drive input.

For both 200 V and 400 V classes, the noise filter can be used with a zero-phase reactor.


Note: The capacitor-type noise filter can be used for drive input only. Do not connect the noise filter to the output terminals.



[Okaya Electric Industries Co., Ltd.]

Model	Code No.
3XYG 1003	100-250-542

Connection Diagram ELCB or MCCB

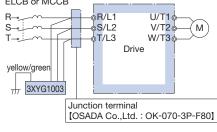


Specifications

Rated Voltage	Capacitance (3 devices each)	Operating Temperature (°C)
440 V	X (Δ connection) : 0.1 μ F±20 % Y (λ connection) : 0.003 μ F±20 %	-40 to +85

Note: For use with 460 V and 480 V units, contact Yaskawa directly.

Dimensions (mm)

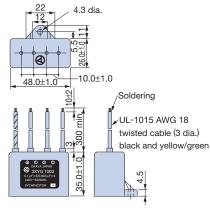

^{*2:} Weight of one filter.

Braking Unit, Braking Resistor, Braking Resistor Unit

Braking units and braking resistors are required to brake the drive.

However, the braking unit for drives with catalog codes GA70A2004 through 2138 and GA70A4002 through 4168 is not required since these drives have built-in braking transistors. If the application requires a braking resistor or braking unit, choose from built-in and stand-alone types in accordance with motor capacity.

When connecting a braking unit or a braking resistor unit with the catalog codes GA70A2169, GA70A2211, GA70A4140, and GA70A4168, a junction terminal is required.

Yaskawa recommends Mibu Denki Industrial Co., Ltd. as a manufacturer of the junction terminal.



ROHS COmpliant **Braking Unit** CDBR-...D series



Braking Resistor ERF150WJ series



Braking Resistor with Fuse CF120-B579 series



Braking Resistor Unit LKEB series

200 V Class

Footnotes are listed on page 67.

Max.		GA700	Braking Uni			_		Duty Fa	ctor: 3% E						Braking Resis			Min.*2	
Applicable					No F	use				With	Fus	е			y Factor: 10% El	D, 10	0 s max		Connectable
Motor (kW)	ND/HD	Catalog Code GA70A	Model CDBR- Qty	Model ERF150WJ	Resistance (Ω)	Qty.	Diagram	Braking Torque*3 (%)	Model CF120-B579	Resistance (Ω)	Qty.	Diagram	Braking Torque*3 (%)	Model LKEB-	Resistor Specifications (per unit)	Qty.	Diagram	Braking Torque*3 (%)	Resistance (Ω)
0.4	HD	2004	Built-in	201	200	1	Α	220	В	200	1	Α	220	20P7	70 W 200 Ω	1	В	220	48
0.75	ND HD	2004 2006	Built-in	201	200	1	Α	125	В	200	1	Α	125	20P7	70 W 200 Ω	1	В	125	48
1.1	ND HD	2006 2008	Built-in	201 101	200 100	1	Α	85 150	B C	200 100	1	Α	85 150	20P7 21P5	70 W 200 Ω 260 W 100 Ω	1	В	85 150	48
1.5	ND HD	2008 2010	Built-in	101	100	1	Α	125	С	100	1	Α	125	21P5	260 W 100 Ω	1	В	125	48
2.2	ND HD	2010 2012	Built-in	700	70	1	Α	120	D	70	1	Α	120	22P2	260 W 70 Ω	1	В	120	48 16
3	ND HD	2012 2018	Built-in	620	62	1	Α	100	E	62	1	Α	100	23P7	390 W 40 Ω	1	В	150	16
3.7	ND HD	2018 2021	Built-in	620	62	1	Α	80	Е	62	1	Α	80	23P7	390 W 40 Ω	1	В	125	16
5.5	ND HD	2021 2030	Built-in	620	62 -	2	A*4	110	E	62 -	2	A*4	110	25P5	520 W 30 Ω	1	В	115	16
7.5	ND HD	2030 2042	Built-in		-	-			-					27P5	780 W 20 Ω	1	В	125	16 9.6
11	ND HD	2042 2056	Built-in		-	-				-	-			2011	2400 W 13.6 Ω	1	В	125	9.6
15	ND HD	2056 2070	Built-in		_	-				-	-			2015	3000 W 10 Ω	1	В	125	9.6
18.5	ND HD	2070 2082	Built-in		-	-				-	-			2015	3000 W 10 Ω	1	В	100	9.6
22	ND HD	2082 2110	Built-in		-	-				-	-			2015 2022	3000 W 10 Ω 4800W 6.8 Ω	1	В	85 125	9.6 6.4
30	ND HD	2110 2138	Built-in		-	-				-	-			2022	4800 W 6.8 Ω	1	В	90	6.4
37	ND HD	2138 2169* ⁵	Built-in 2037D 1		_	-				-	-			2022 2015	4800 W 6.8 Ω 3000 W 10 Ω		B F	70 100	6.4 5.0
45	ND HD	2169* ⁵ 2211* ⁵	2037D 1 2022D 2		-	-				-	-			2015 2022	3000 W 10 Ω 4800 W 6.8 Ω		F G	80 120	5.0 6.4
55	ND HD	2211* ⁵ 2257	2022D 2		-	-				-	-			2022	4800 W 6.8 Ω		G C	100	6.4
75	ND HD	2257 2313	2110D 1		-	-				-	-			2022	4800 W 6.8 Ω	3	D	110	1.6
90	ND HD	2313 2360	2110D 1		-					-				2022	4800 W 6.8 Ω	4	D	120	1.6
110	ND HD	2360 2415	2110D 1		-	-				-	-			2018	4800 W 8 Ω	5	D	100	1.6

Note: 1. Braking resistor (ERF150WJ and CF120-B579) requires a separate attachment

for installation. See attachment for braking resistor on page 71.

2. Use the retrofit attachment when replacing an older model CDBR braking unit (CDBR-□B, CDBR-□C). Refer to TOBP C720600 01 1000-Series Option CDBR, LKEB Installation Manual for more details.

^{3.} Use the External Heatsink Attachment for installation with the heatsink outside the enclosure. Refer to page 63 for details.

If the built-in fuse on a braking resistor blows, then the entire braking

resistor should be replaced.


^{5.} See the connection diagram on page 68.

No fuse With Fuse (Duty Factor: 10% ED, 10's max.)**	Max.		GA700	Braking	Unit	Braking Resistor (Duty Factor: 3% ED, 10 s max.)*1 Braking Resistor Unit				Min.*2											
Mode		e					No F	use)			With	Fus	e							Connectable
Column	1.1	ND/HD					Resistance	۵.				Resistance		_							
10.0	(kW)		GA/0A	CDBR-	Qty.	ERF150WJ	(Ω)	Qty.	Diagram		CF120-B5/9 	(Ω)	Qty.	Diagram		LKEB-		Qty.	Diagram		(Ω)
1.5 NO 4004 Built-in	0.4	HD	4002	Built-	in	751	750	1	Α		F	750	1	А		40P7		1	В		165
Ho	0.75	ND	4002	Ruilt-	in	751	750	1	Δ	130	F	750	1	Δ	130	40P7	70 W 750 O	1	R	130	165
1.5	0.75			Duin	111	751	750	•		150	'	750	'	^	100	401 7	70 W 730 32	'	Б	100	
No. Hope	1.5	HD	4005	Built-	in	401	400	1	Α	125	G	400	1	Α	125	41P5	260 W 400 Ω	1	В	125	
3	2.2			Built-	in	301	300	1	Α	115	Н	300	1	Α	115	42P2	260 W 250 Ω	1	В	135	110
Second S	3			Built-	in	201	200	1	Α	125	J	250	1	Α	100			1	В		
5.5 HD 4018 Bullt-in - 47P5 520 W 100 Ω 1 B 135 32	3.7			Built-	in	201	200	1	Α	105	J	250	1	Α	83	43P7	390W 150 Ω	1	В	135	55
10 10 10 10 10 10 10 10	5.5			Built-	in	201	200 –	2	A*4	135	J	250	2	A*4	105	45P5	520 W 100 Ω	1	В	135	
HD 4031 Built-in - - 4011 1040 W 50 Ω 1 B 135 20	7.5			Built-	in		-	-				-	-			47P5	780 W 75 Ω	1	В	130	32
15	11			Built-	in		_	-				-	-			4011	1040 W 50 Ω	1	В	135	
HD 4044 Built-in - - 408 4800 W 2Ω Ω 1 B 125 19.2 22 HD 4060	15			Built-	in		-	-				-	-			4015	1560 W 40 Ω	1	В	125	20
HD 4060 Built-in - 4022 4800 W 27.2Ω 1 B 125 19.2	18.5			Built-	in		-	-				-	-			4018	4800 W 32 Ω	1	В	125	
HD 4075 Built-in - - 4030 6000 W 20 Ω 1 B 125 19.2	22			Built-	in		-	-				-	-			4022	4800 W 27.2 Ω	1	В	125	19.2
HD 4089 Built-in -	30			Built-	in		-	-				-	-			4030	6000 W 20 Ω	1	В	125	19.2
HD 4103 Built-in - 4045 9600 W 13.6 Ω 1 B 125 8.7	37			Built-	in		-	-				-	-					1	В		
HD 4140*5 HD 4140*5 HD 4140*5 HD 4168*5 HD 4168*5 HD 4168*5 HD 4168*5 HD 4168*5 HD 4208 4045 2 Ho 4168*5 HD 4208 4045 2 Ho 4208 4045 2 Ho 4208 4200 1 HD 4250 HD 4296 HD 4296 HD 4371 HD 4371 HD 4389 HD 4389 HD 4453 HD 4453 HD 4453 HD 4453 HD 4458 HD 4568 HD 4567 HD 4568 HD 4568 HD 4567 HD 4568 H	45			Built-	in		-	-				-	-			4045	9600 W 13.6 Ω	1	В	125	
ND 4140*5 HD 4168*5 HD 4208 4045D 2 HO 4208 4045D 2 HD 4208 4045D 2 HD 4250 HD 4250 HD 4296 HD 4296 HD 4371 HD 4371 HD 4389 HD 4389 HD 4389 HD 4453 HD 4456 HD 4456 HD 4456 HD 4453 HD 4456 HD 4453 HD 4456 HD 4568	55			Built-	in		-	-				-	-								
ND 4168** Built- - 4045 9600 W 13.6 Ω 2 H*4 100 5.2 12.8	75	ND	4140*5	Built-	in		-					-	-			4030	6000 W 20 Ω			100	7.2
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	90	ND	4168*5				-					-	-					2			5.2
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	110	ND	4208				_					-	-			4030	6000 W 20 Ω	3		100	
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	132	ND	4250	4220D	1		-	-				-	-			4045	9600 W 13.6 Ω	4	D	140	3.2
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	160	ND	4296	4220D	1		_	-				_	-			4045	9600 W 13.6 Ω	4	D	140	3.2
ND 4389 HD 4453 420D 1 - - 4037 9600 W 16 Ω 5 D 110 3.2 250 HD 4453 HD 4458 4220D 1 - - 4037 9600 W 16 Ω 5 D 90 90 3.2 315 HD 4568 HD 4220D 2 - - 4045 9600 W 13.6 Ω 6 E 100 3.2	200	ND	4371	4220D	1		-	-				-	-			4045	9600 W 13.6 Ω	4	D	120	3.2
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	220	ND	4389	4220D	1		_	-				_	-			4037	9600 W 16 Ω	5	D	110	3.2
315 ND 4568 HD 4675 4220D 2 4045 9600 W 13.6 Ω 6 E 100 3.2	250	ND	4453	4220D	1		-	-				-	-			4037	9600 W 16 Ω	5	D	90	3.2
	315	ND	4568	4220D	2		-					-	-			4045	9600 W 13.6 Ω	6	Е	100	3.2
	355			4220D	2		-	-				-	-			4045	9600 W 13.6 Ω	8	Е	120	3.2

- *1: Refers to a motor coasting to stop with a constant torque load. Constant output and regenerative braking will reduce the duty factor.
- *2: Assumes the use of a single braking unit. The braking unit should have a resistance higher than the minimum connectable resistance value and be able to generate enough braking torque to stop the motor.
- *3: Applications with a relatively large amount of regenerative power (elevators, hoists, etc.) may require more braking power than is possible with only the standard braking unit and braking resistor. If the braking torque exceeds the value shown in the table, the capacity of the braking resistor must be increased.
- *4: When using multiple braking resistors or braking resistor units, connect them in parallel.
- *5: When connecting a braking unit or a braking resistor unit with the catalog codes GA70A2169, GA70A2211, GA70A4140, and GA70A4168, a junction terminal
- is required. For details, see the connection diagram on the next page.

 Note: 1. Braking resistor (ERF150WJ and CF120-B579) requires a separate attachment for installation. See attachment for braking resistor on page 71.

 2. Use the retrofit attachment when replacing an older model CDBR braking unit (CDBR-□B, CDBR-□C). Refer to TOBP C720600 01 1000-Series Option CDBR, LKEB Installation Manual for more details.
 - 3. Use the External Heatsink Attachment for installation with the heatsink outside the enclosure. Refer to page 71 for details.
 - 4. If the built-in fuse on a braking resistor blows, then the entire braking resistor should be replaced.
 - 5. See the connection diagram on page 68.

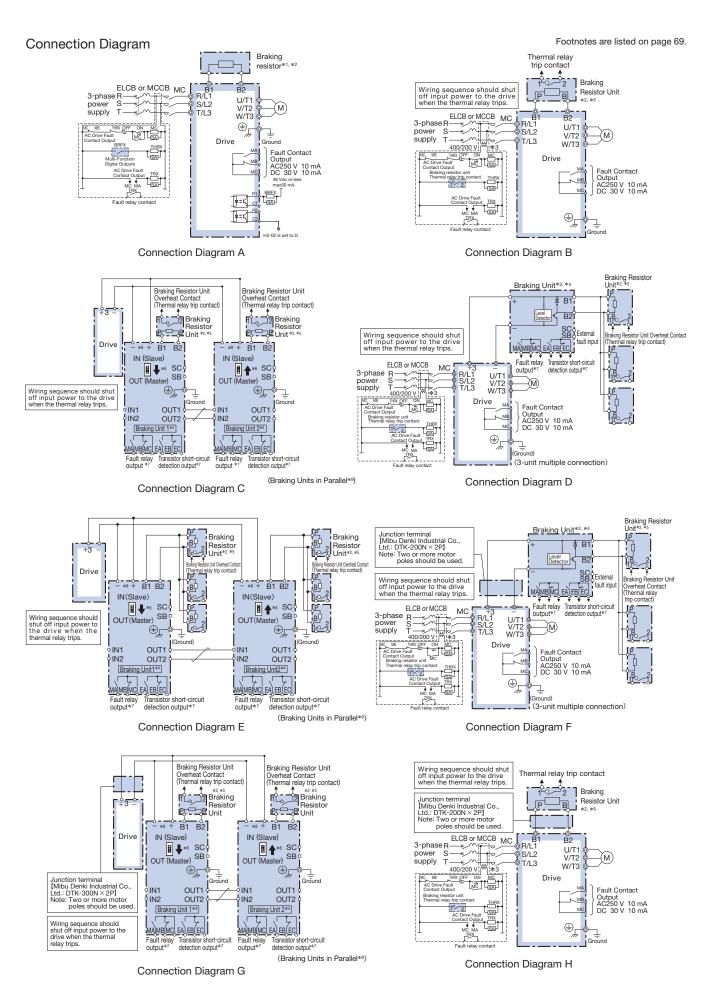

- *1: Set L8-01 to 1 to enable braking resistor overload protection in the drive when using braking resistors, and set a multi-function input to "Braking Resistor Fault" (H1-:::::= D). Wiring sequence should shut off power to the drive when a fault output is triggered. CF120-B579 series does not need to be wired an external sequence.
- *2: Set L3-04 to 0 [Stall Prevention during Decel = Disabled] when using a braking unit, a braking resistor, or a braking resistor unit. If L3-04 is set to 1 [Enabled] (default setting), the drive may not stop within the specified deceleration time.
- *3: 200 V class drives do not require a control circuit transformer.
- *4: Set L8-55 to 0 to disable the protection function for the built-in braking transistor when using a regenerative unit or another type of braking option in lieu of the built-in braking transistor. If the protection function is enabled under these conditions, it may cause a braking resistor fault (rF). When connecting a separately-installed type braking resistor unit (model
- CDBR) to drives with a built-in braking transistor (catalog codes GA70A2004 to 2138, and GA70A4002 to 4168), connect the B1 terminal of the drive to the positive terminal of the braking resistor unit and connect the negative terminal of the drive to the negative terminal of the braking resistor unit. The B2 terminal is not used in this case.
- *6: When using more than one braking unit connected in parallel, set one of the braking units as the master, and set the others as slaves.
 *7: Connect fault relay output to multi-function digital input S∷ (External Fault).
- Connect the CDBR transistor short-circuit detection output to disconnect main input power to the drive.
- **★8**: Connect directly to the drive terminal or install a terminal block
- $\pmb{\ast} 9$: Contact your Yaskawa or nearest sales representative for a replacement manual when connecting braking units CDBR-[]B, CDBR-[]C, and CDBR-::D in parallel.

Model, Code No. **Braking Unit**

200 V Class

Model CDBR-	Protection Design	Code No.
2022D	IP20	100-091-707
2022D	UL Type 1	100-091-754
2037D	IP20	100-091-712
20370	UL Type 1	100-091-759
2110D	IP00	100-091-524
21100	UL Type 1	100-091-530

400 V Class


Model CDBR-	Protection Design	Code No.
4045D	IP20	100-091-722
4045D	UL Type 1	100-091-769
4220D	IP00	100-091-526
4220D	UL Type 1	100-091-532

Watt Loss

Model CDBR-	Watt Loss (W)
2022D	27
2037D	38
2110D	152
4045D	36
4220D	152


Dimensions (mm) **Braking Unit**

Open Chassis [IP20] CDBR-2022D, -2037D, -4045D

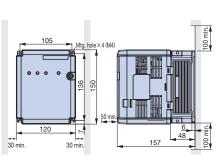


Weight: 2 kg

Open Chassis [IP00] CDBR-2110D, -4220D

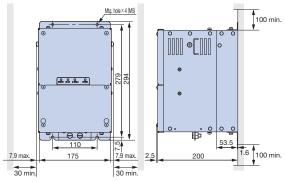


Weight: 7.5 kg

Enclosure Wall-Mounted [UL Type 1] CDBR-2022D, -2037D, -4045D

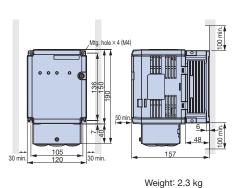


CDBR-2110D, -4220D

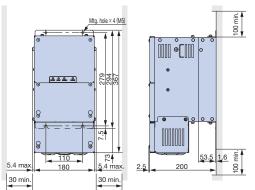


Weight: 8.3 kg

Braking Resistor


An optional separate attachment is need to install the braking resistor to the drive. Refer to the Attachment for Braking Resistor on page 71.

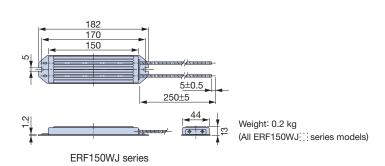


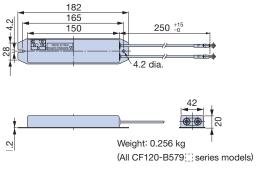

CF120-B579 series

Braking Resistor Unit (stand-alone)

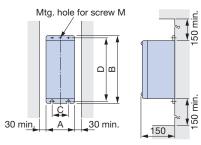

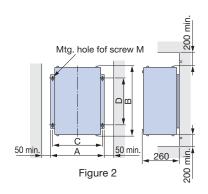


Applicable Voltage: 200 V Class


Braking Resistor			Dime	ensio	ns (m	m)		Allowable
Unit Model	Figure	Α	В	C D M		М	Weight (kg)	Average Power Consumption (W)
20P7	1	105	275	50	260	M5×3	3.0	30
21P5	1	130	350	75	335	M5×4	4.5	60
22P2	1	130	350	75	335	$M5 \times 4$	4.5	89
23P7	1	130	350	75	335	M5×4	5.0	150
25P5	1	250	350	200	335	M6×4	7.5	220
27P5	1	250	350	200	335	M6×4	8.5	300
2011	2	266	543	246	340	M8×4	10	440
2015	2	356	543	336	340	M8×4	15	600
2018	2	446	543	426	340	M8×4	19	740
2022	2	446	543	426	340	M8×4	19	880

Applicable Voltage: 400 V Class

Braking Resistor			Dime	ensio	ns (m	ım)		Allowable
Unit Model	Figure	Α	В	С	D	М	Weight (kg)	Average Power Consumption (W)
40P7	1	105	275	50	260	$M5 \times 3$	3.0	30
41P5	1	130	350	75	335	M5×4	4.5	60
42P2	1	130	350	75	335	$M5 \times 4$	4.5	89
43P7	1	130	350	75	335	M5×4	5.0	150
45P5	1	250	350	200	335	M6×4	7.5	220
47P5	1	250	350	200	335	M6×4	8.5	300
4011	2	350	412	330	325	M6×4	16	440
4015	2	350	412	330	325	M6×4	18	600
4018	2	446	543	426	340	M8×4	19	740
4022	2	446	543	426	340	M8×4	19	880
4030	2	356	956	336	740	M8×4	25	1200
4037	2	446	956	426	740	M8×4	33	1500
4045	2	446	956	426	740	M8×4	33	1800

Attachment for Braking Resistor

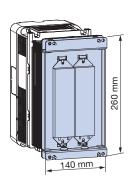

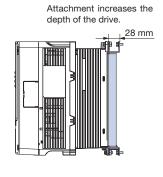



Model	Code No.
900-192-126-001	100-202-333

Braking Unit External Heatsink Attachment


Use the external heatsink attachment for installation with the heatsink outside the enclosure.


Attachment	Model CDBR-	Model (Code No.)
49 49	2022D	
	2037D	EZZ021711A
	4030D	(100-066-355)
do do s	4045D	

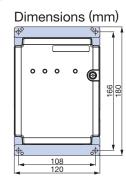

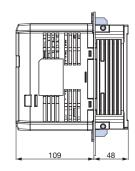

Braking Unit Panel Cutout Dimensions

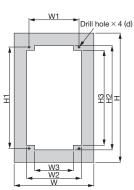

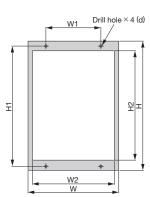

Modification Figure 1

Modification Figure 2

Model	Modification		Dimensions (mm)							
CDBR-	Figure	W*	H*	W1	W2	W3	H1	H2	НЗ	d
2022D	1	172	226	108	118	84	166	172	152	M4
2037D	1	172	226	108	118	84	166	172	152	M4
2110D	2	175	294	110	159	_	279	257.8	_	M5
4045D	1	172	226	108	118	84	166	172	152	M4
4220D	2	175	294	110	159	_	279	257.8	_	M5

 $[\]bigstar$: The following W, H information is the size when in installing the gasket.

Bluetooth LCD Keypad

A Bluetooth communications interface is built into the LCD keypad. The drive can be connected to DriveWizard Mobile through a wireless connection.

Specification	Model	Code No.
Standard	JVOP-KPLCC04ABA	100-225-008
Humidity, dust	JVOP-KPLCC04MBA	100-225-009


Note: 1. Available in the GA700 software versions: 1016 and later.

- 2. Certified international standards: CE, FCC, IC (Industry Canada), CMIIT, KC, MIC
- 3. This keypad is equipped with a wireless device. The usage of wireless devices may be restricted in accordance with the Radio Law in each country. Check relevant laws and regulations in each country before using the product.

Dimensions (mm) Bluetooth LCD

keypad



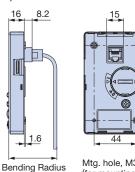

53.8 min.


Mtg. hole, M3 × 2 screws (depth 6) (for mounting on control panel)


LED Keypad

The LED keypad offers a five-digit LED display. Shipment of LED keypad as standard prepared is available. Contact Yaskawa.

Specification	Model	Code No.
Standard	JVOP-KPLEA04AAA	100-206-377
Humidity, dust	JVOP-KPLEA04MAA	100-206-378



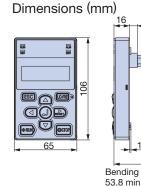

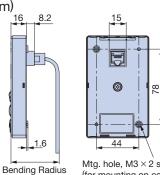


Mtg. hole, M3 \times 2 screws (depth 6) (for mounting on control panel)

Keypad Extension Cable

Enables remote operation.

Model	Code No.	Remarks
WV001 (1 m)	WV001	· RJ-45, 8-pin straight-through · UTP CAT5e cable (1 m/3 m)
WV003 (3 m)	WV003	Note: Use straight-through cable. Other cables will cause drive failure.

- Note: 1. Never use this cable for connecting the drive to a PC. Doing so may damage the PC.
 - 2. You can also use a commercially available LAN cable (straight-through) for the operator extension cable.

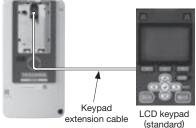






LED keypad Bluetooth I CD keypad

PC Cable

Cable to connect the drive to a PC with DriveWizard or DriveWorksEZ installed. Use a commercially available USB 2.0 cable (A-miniB connectors, max. 3 m).

Connection

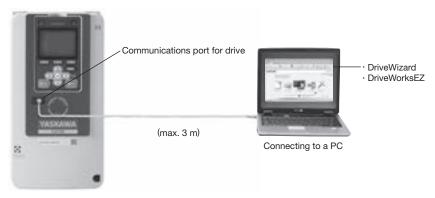


Note: DriveWizard is a PC software package for managing parameters and functions in Yaskawa drives. DriveWorksEZ is the software for creating custom application programs for the drive through visual programming.


Keypad Mounting Bracket

This bracket is required to mount the LCD, Bluetooth LCD Keypad, or LED keypad on the control panel.


Installation Support Set A

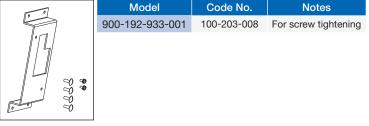

Installation using Set A

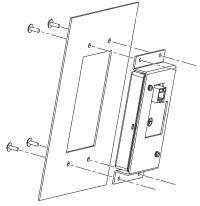


Installation Support Set B

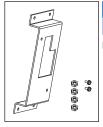

Model	Code No.	Notes
900-192-933-002	100-203-009	For nut fixing

Note: If there are weld studs on the interior of the control panel, use the installation support set B (nut clamp).

Panel Modification for Keypad Mounting Bracket

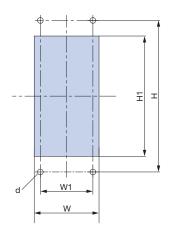

Dimensions (mm)				
W	Н	W1	H1	d
64+0.5	130	45	105+0.5	M4
(2.52+0.02)	(5.12)	(1.77)	(4.13+0.02)	IVI4

Peripheral Devices and Options (continued)


Frequency Meter/Current Meter



Model	Code No.
Scale-75 Hz full-scale: DCF-6A	100-250-730
Scale-65/130 Hz full-scale: DCF-6A	100-250-728
Scale-5 A full-scale: DCF-6A	100-252-699
Scale-10 A full-scale: DCF-6A	100-252-695
Scale-20 A full-scale: DCF-6A	100-252-696
Scale-30 A full-scale: DCF-6A	100-252-697
Scale-50 A full-scale: DCF-6A	100-252-698

Note: DCF-6A specifications are 3 V, 1 mA, and 3 k Ω inner impedance. Because the GA700 multifunction analog monitor output default setting is 0 to 10 V, set frequency meter adjusting potentiometer (20 k Ω) or parameter H4-02 (analog monitor output gain) within the range of 0 to 3 V.

Dimensions (mm)

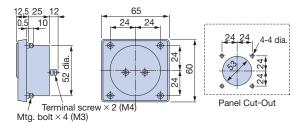


Weight: 0.3 kg

Frequency Setting Potentiometer/Frequency Meter Adjusting Potentiometer



Model	Code No.
2 kΩ: RV30YN	100-250-722
20 kΩ: RV30YN20S	100-250-723

Dimensions (mm)

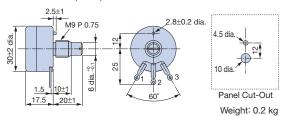


Control Dial for Frequency Setting Potentiometer/Frequency Meter Adjusting Potentiometer



Model	Code No.
K-2901-M	100-250-544

Dimensions (mm)

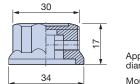

Applicable shaft diameter 6 mm Mounting screw × 1 (M4)

Meter Plate for Frequency Setting Potentiometer/Frequency Meter Adjusting Potentiometer



Model	Code No.
NPJT41561-1	100-250-701

Dimensions (mm)




Output Voltage Meter



Model	Code No.	
Scale-300 V full-scale	100-250-739	
(Rectification Type Class 2.5: SCF-12NH)	100-250-739	
Scale-600 V full-scale	100-250-740	
(Rectification Type Class 2.5: SCF-12NH)	100-250-740	

Dimensions (mm)

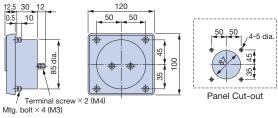

Weight: 0.3 kg


Potential Transformer




Model	Code No.
600 V meter for voltage transformer	100-250-548
UPN-B 440/110 V (400/100 V)	100 230 340

Note: For use with a standard voltage regulator. A standard voltage regulator may not match the drive output voltage. Select a regulator specifically designed for the drive output (100-250-548), or a voltmeter that does not use a transformer and offers direct read out.

Dimensions (mm)

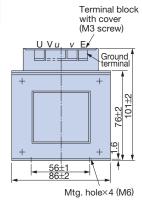

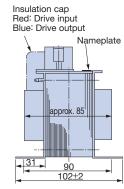

Weight: 2.2 kg

Application Notes


Selection

■ Installing a Reactor

An AC or DC reactor can be used for the following situations:

- · when the power supply is 600 kVA or more.
- · to smooth peak current that results from switching a phase advance capacitor.
- · to improve the power supply power factor. The DC reactor is built in for models of catalog codes GA70A2110 and above, GA70A4060 and above. Use an AC reactor when also connecting a thyristor

converter to the same power supply system, regardless of the conditions of the power supply.

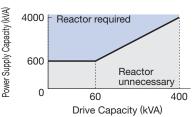

■ Drive Capacity

The rated output current of the drive output amps should be equal to or greater than the motor rated current. When running a specialized motor or more than one motor in parallel from a single drive, the capacity of the drive should be larger than 1.1 times of the total motor rated current.

■ Starting Torque

The overload rating for the drive determines the starting and accelerating characteristics of the motor. Expect lower torque than when running from line power. To get more starting torque, use a larger drive or increase both the motor and drive capacity.

■ Emergency Stop

When the drive faults out, a protective circuit is activated and drive output is shut off. This, however, does not stop the motor immediately. Some type of mechanical brake may be needed if it is necessary to halt the motor faster than the Fast Stop function is able to.

Options

The B1, B2, -, +1, +2 and +3 terminals are used to connect optional devices. Connect only GA700compatible devices.

■ Repetitive Starting/Stopping

Cranes (hoists), elevators, punching presses, and other such applications with frequent starts and stops often exceed 150% of their rated current values. Heat stress

generated from repetitive high current can shorten the lifespan of the IGBTs. The expected lifespan for the IGBTs is about 8 million start and stop cycles with a 2 kHz carrier frequency and a 150% peak current. Yaskawa recommends lowering the carrier frequency, particularly when audible noise is not a concern. The user can also choose to reduce the load, increase the acceleration and deceleration times, or switch to a larger drive. This will help keep peak current levels under 150%. Be sure to check the peak current levels when starting and stopping repeatedly during the initial test run, and make adjustments accordingly. For cranes and other applications using the inching function in which the drives starts and stops the motor repeatedly, Yaskawa recommends the following steps to ensure torque levels:

- · Select a large enough drive so that peak current levels remain below 150%.
- · The drive should be one frame size larger than the motor.
- As the carrier frequency of the drive is increased above the factory default setting, the drive's rated output current must be derated. Refer to the instruction manual of the drive for details on this function.

Installation

■ Enclosure Panels

Keep the drive in a clean environment by either selecting an area free of airborne dust, lint, oil mist, corrosive gas, and flammable gas, or install the drive in an enclosure panel. Leave the required space between the drives to provide for cooling, and take steps to ensure that the ambient temperature remains within allowable limits. Keep flammable materials away from the drive. If the drive must be used in an area where it is subjected to oil mist and excessive vibration, protective designs are available. Contact Yaskawa for details.

■ Installation Direction

The drive should be installed upright as specified in the


Although the drive can be installed on its side, an appropriate amount of airflow and current derating are required.

■ Installation of Bypass Circuit

If the fuse blows or the circuit breaker (MCCB) trips, check the cable wiring and selection of peripheral devices and identify the cause.

If the cause cannot be identified, do not turn ON the power supply or operate the device. Contact your Yaskawa representative.

If a drive fails and the motor will be directly driven using a commercial power supply, install the bypass circuit shown in the diagram below. If this bypass circuit is not installed, remove the drive and then connect the motor to a commercial power supply. (In other words, after disconnecting the cables connected to the main circuit terminals, such as main circuit power supply input terminals R/L1, S/L2, and T/L3 and drive output terminals U/T1, V/T2, and W/T3, connect the motor to a commercial power supply.)

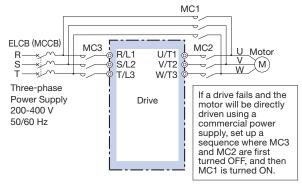

Settings

- Use V/f Control when running multiple induction motors at the same time.
- If using Open Loop Vector Control or Closed Loop Vector Control for PM motors, make sure that the proper motor code has been set to parameter E5-01 before performing a trial run.
- Upper Limits

Because the drive is capable of running the motor at up to 590 Hz, be sure to set the upper limit for the frequency to control the maximum speed. The default setting for the maximum output frequency is 60 Hz.

■ Pay close attention as follows when using DriveWorksEZ.

I/O terminal function of the drive will change with the function of the default terminal depending on the setting. Before test running the drive based on programs created by DriveWorksEZ, always check the I/O signal of the drive and the internal sequence. Failure to check may result in death or serious injury.

■ Pay attention to the following points when using the Virtual I/O function.

This function virtually wires the I/O terminal of the drive internally.

Consequently, the behavior of the drive may differ from its defaults, even if there is no wiring in the I/O terminal. Before conducting a test operation, always check the setting values for the parameter of the Virtual I/O function. Failure to check may result in death or serious injury.

■ DC Injection Braking

Motor overheat can result if there is too much current used during DC Injection Braking, or if the time for DC Injection Braking is too long.

■ Acceleration/Deceleration Times

Acceleration and deceleration times are affected by how much torque the motor generates, the load torque, and the inertia moment (GD2/4). Set a longer accel/ decel time when Stall Prevention is enabled. The accel/ decel times are lengthened for as long as the Stall Prevention function is operating. For faster acceleration, increase the capacity of both the motor and the drive. For faster deceleration, use a braking resistor or a power regenerative unit.

General Handling

■ Shield Clamp Kit

An option for mounting a clamping device that fixes power cables to the bottom of the drive. Contact Yaskawa in advance for more information on installation options.

■ Electrical Shock Hazard


Failure to comply may result in death or serious injury. Do not allow unqualified personnel to perform work on the drive. Installation, maintenance, inspection, and servicing must be performed only by authorized personnel familiar with installation, adjustment, and maintenance of AC drives.

■ Wiring Check

Never short the drive output terminals or apply voltage to output terminals (U/T1, V/T2, W/T3), as this can cause serious damage to the drive. Doing so will destroy the drive. Be sure to perform a final check of all sequence wiring and other connections before turning the power on. Make sure there are no short circuits on the control terminals (+V, AC, etc.), as this could damage the drive. Retighten the screws for the wiring terminals periodically.

European Terminal

- · For European terminals, do not shake the wires excessively or pull on the wires too much.
- · When connecting uninsulated wire and when crimping wire to the solderless terminal, do not let the wire protrude past the conductor section. Pay close attention to this because it could cause a short circuit.
- · Check for any unsuitable wire size connections.
- · Tighten at the specified torque.
- · Fix the cable with shield clamp option.
- European Terminal Wiring Work Heed the following points. Follow the procedure in the manual concerning all points except the following.
 - · Use the torque driver or a torque wrench and ratchet. The tip of a straight-edge screwdriver or a hex socket tool is required for wiring the European terminal.
 - · Wiring tools can be purchased from Yaskawa. Contact Yaskawa. The torque wrench should be supplied by the customer.
 - · To replace a previous model, the wires that are used may be partially out of connection range. Contact Yaskawa beforehand about the available wire gauges.
- Wiring Using Closed-loop Crimp Terminals Wrench-type or closed-wrench type tools cannot be used with drives with catalog codes of GA70A2257 and above or 4208 and above. Make sure to always use socket-type tools. Use only sockets with a depth of 30 mm or more.

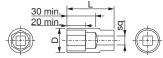

Socket Dimensions (for crimp terminals)

■ Magnetic Contactor Installation Avoid switching a magnetic contactor on the power supply side more frequently than once every 30 minutes. Frequent switching can cause damage to the drive.

■ Keypad

[microSD card]

- · The SD card supports microSD, and microSD HC with a capacity of up to 32 GB.
- · Plug in and remove the microSD card after turning off the power supply for the drive. Do not remove the microSD card or de-energize the keypad when accessing the microSD card. This may cause data loss and failure.
- · If there are many files and folders on the SD card or if the free space on the microSD card is low, the SD card may not run properly.

[Connection via USB]

- · Use a miniUSB cable. The USB connection between the PC and keypad is not possible while the drive and keypad are connected. First remove the keypad from the drive and then connect with the PC.
- · While connected to the USB, it is not possible from a PC to access the files on a microSD card that is inserted.

■ Inspection and Maintenance

After shutting off the drive, make sure the CHARGE light has gone out completely before preforming any inspection or maintenance. Residual voltage in drive capacitors can cause serious electric shock. The heatsink can become quite hot during operation, and proper precautions should be taken to prevent burns. When replacing the cooling fan, shut off the power and wait at least 15 minutes to be sure that the heatsink has cooled down.

■ Wiring on UL- and cUL-certified drives When performing wiring work on UL/cUL-certified drives, wire the drives at their recommended tightening torques using UL/cUL-compliant wires. For drives that require connection with closed-loop crimp terminals, use closed-loop crimp terminals and perform closedloop crimping work using the crimping tools specified by the terminal manufacturer.

■ Replacing an existing model

- · Wires used in existing models may be out of connection range. Contact Yaskawa beforehand for the available wire gauges.
- · If replacing an existing model with drives with catalog codes of GA70A2211 and lower or 4168 and lower, the wire connection method should be changed. Cut off the crimp terminal and remove the covering to expose

the wires. If an uninsulated wire is already connected to it, check the condition of the tip of the wire. After peeling of the dressing as necessary, wire again.

■ Transporting the Drive

Never steam clean the drive. During transport, keep the drive from coming into contact with salts, fluorine, bromine and other such harmful chemicals.

Storage

The drive contains electrolytic capacitors and fine electronic components that undergo chemical changes. Observe the following precautions to help maintain the expected performance life and reliability during long-term storage.

■ Storage Location

- Temperature and humidity Storage temperatures between -20 to +70°C are allowed when storing the drive for approximately one month. During transport, store and pack the drive so that it is isolated from as much vibration and shock as possible. Store the drive in a location with a relative humidity of 95% or less. Do not store the drive in direct sunlight or where condensation or ice will form.
- · Dust and oil mist Do not store the drive in dusty locations or locations that are susceptible to oil mist, such as the site of a cement factory or cotton mill.
- · Corrosive gas Do not store the drive in an area that may contain corrosive gas or in a location like a chemical plant, refinery, or sewage facility.
- · Salt-air damage Do not store the drive in locations that are subject to salt damage, such as near the ocean, and salt damage-designated zones, in particular.

Do not store the drive in adverse environments. Store all drives in storage rooms that are not subjected to adverse environmental elements.

■ Periodic Power Application

Try to apply power to the drive once per year for at least 30 minutes to prevent the capacitors from deteriorating.

When applying power after power has not been applied for more than two years, Yaskawa recommends using a variable power source and gradually increasing the power over a period of 2 to 3 minutes. Apply power for

at least 1 hour with no load to age the main circuit electrolytic capacitor.

Wire the drive normally and check for drive faults, overcurrents, motor vibration, speed fluctuations, and other abnormalities during operation after performing the above procedure.

■ Environmental Specifications

The drive must not be used in the above mentioned environments. However, if it is difficult to avoid running the drive in these environments, Yaskawa offers special drives that are resistant to moisture, gas, vibrations, and salt. Contact Yaskawa for details.

Be aware that drives with these specifications do not guarantee complete protection for the environmental conditions indicated.

■ Contact Yaskawa when running an isolation test with a drive.

Peripheral Devices

- Installing an ELCB or an MCCB
 - · Be sure to install an ELCB or an MCCB that is recommended by Yaskawa at the power supply side of the drive to protect internal circuitry.
 - · The type of MCCB is selected depending on the power supply power factor (power supply voltage, output frequency, load characteristics, etc.). Sometimes a fairly large MCCB may be required due to the affects of harmonic current on operating characteristics. If you do not use a recommended ELCB, use one fitted for harmonic suppression measures and designed specifically for drives. A malfunction may occur due to high-frequency leakage current, so the rated current of the ELCB must be 30 mA or higher per drive unit. If a malfunction occurs in an ELCB without any countermeasures, reduce the carrier frequency of the drive, replace the ELCB with one that has countermeasures against high frequency, or use an ELCB which has a rated current of 200 mA or higher per drive unit.

Select an ELCB or an MCCB with a rated capacity greater than the short-circuit current for the power supply. For a fairly large power supply transformer, a fuse can be added to the ELCB or MCCB in order to handle the short-circuit current level.

■ Magnetic Contactor for Input Power

Use a magnetic contactor (MC) to ensure that power to the drive can be completely shut off when necessary. The MC should be wired so that it opens when a fault output terminal is triggered.

Even though an MC is designed to switch to a momentary power loss, frequent MC use can damage other components.

Avoid switching the MC more than once every 30 minutes. The MC will not be activated after a momentary power loss if using the LCD keypad to run the drive. This is because the drive is unable to restart automatically when set for LOCAL.

Although the drive can be stopped by using an MC installed on the power supply side, the drive cannot stop the motor in a controlled fashion, and it will simply coast to stop. If a braking resistor or dynamic braking unit has been installed, be sure to set up a sequence that opens the MC with a thermal protector switch connected to the braking resistor device.

Magnetic Contactor for Motor

As a general principle, the user should avoid opening and closing the magnetic contactor during run when the contactor is installed between the motor and the drive. Doing so can cause high peak currents and overcurrent faults. If magnetic contactors are used to bypass the drive by connecting the motor to the power supply directly, make sure to close the bypass only after the drive is stopped and fully disconnected from the motor. The Speed Search function can be used to start a coasting motor.

Use an MC with delayed release if momentary power loss is a concern.

■ Motor Thermal Over Load Relay Installation
Although the drive comes with built in electrothermal protection to prevent damage from overheat, a thermal relay should be connected between the drive and each motor if running several motors from the same drive.

For a multi-pole motor or some other type of nonstandard motor, Yaskawa recommends using an external thermal relay appropriate for the motor. Be sure to disable the motor protection selection parameter (L1-01 = 0), and set the thermal relay or thermal protection value to 1.1 times the motor rated current listed on the motor nameplate.

When long motor cables and high carrier frequency are used, nuisance tripping of the thermal relay may occur due to increased leakage current. Therefore, reduce the carrier frequency or increase the tripping level of the thermal overload relay.

■ Improving the Power Factor

Install a DC reactor, AC reactor, or Power Regenerative Converter D1000 to the drive input side to improve the power factor. The DC reactor is built in for models of catalog codes GA70A2110 and above, GA70A4060 and above.


Refrain from using a capacitor or surge absorber on the output side as a way of improving the power factor, because high-frequency contents on the output side can lead to damage from overheat. This can also lead to problems with overcurrent.

■ Radio Frequency Interference

Drive output contains high-frequency contents that can affect the performance of surrounding electronic instruments such as an AM radio. These problems can be prevented by installing a noise filter, as well as by using a properly grounded metal conduit to separate wiring between the drive and motor.

■ Wire Gauges and Wiring Distance


Motor torque can suffer as a result of voltage loss across a long cable running between the drive and motor, especially when there is low frequency output. Make sure that a large enough wire gauge is used. The LCD keypad requires an extensional cable for remote operation. If an analog signal is used to operate the drive via the input terminals, make sure that the wire between the analog operator and the drive is no longer than 50 m, and that it is properly separated from the main circuit wiring. Use reinforced circuitry (main circuit and relay sequence circuitry) to prevent inductance from surrounding devices. To run the drive with a frequency potentiometer via the external terminals, use twisted shielded pair cables and ground the shield.

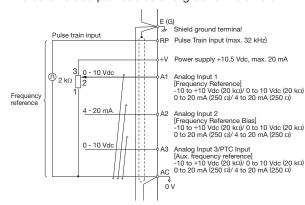

Counteracting Noise

Because GA700 is designed with PWM control, a low carrier frequency tends to create more motor flux noise than using a higher carrier frequency. Keep the following points in mind when considering how to reduce motor

- · Lowering the carrier frequency (C6-02) minimizes the effects of noise.
- · A line noise filter can reduce the affects on AM radio frequencies and poor sensor performance. See "Peripheral Devices and Options" on page 52.
- · Make sure the distance between signal and power lines is at least 10 cm (up to 30 cm is preferable), and use twisted pair cable to prevent induction noise from the drive power lines.

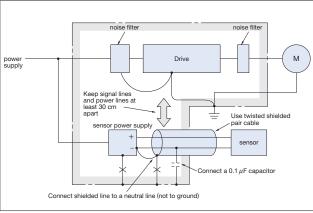

<Provided by JEMA>

■ Leakage Current

High-frequency leakage current passes through stray capacitance that exists between the power lines to the drive, ground, and the motor lines. Consider using the following peripheral devices to prevent problems with leakage current.

	Problem	Solution
Ground Leakage Current	MCCB is mistakenly triggered	Lower the carrier frequency set to parameter C6-02. Try using a component designed to minimize harmonic distortion for the MCCB such as the NV series by Mitsubishi.
Current Leakage Between Lines	Thermal relay connected to the external terminals is mistakenly triggered by harmonics in the leakage current	Lower the carrier frequency set to parameter C6-02. Use the drive's built-in thermal motor protection function.

The following table shows the guidelines for the set value of the carrier frequency relative to the wiring distance between the drive and the motor when using V/f control.

Wiring Distance* C6-02:		50 m or less	100 m or less	100 m or more
		1 to A	1, 2, 7 to A	1, 7 to A
	Carrier Frequency Selection	(15 kHz or less)	(5 kHz or less)	(2 kHz or less)

*: When a single drive is used to run multiple motors, the length of the motor cable should be calculated as the total distance between the drive and each motor.

When the wiring distance exceeds 100 m, use the drive observing the following conditions.

- · Select V/f control mode (A1-02=0)
- · To start a coasting motor
- a) Use the current detection type (b3-24=0) when using the speed search function, or
- b) Set the DC injection braking time at start (b2-03=0.01 to 10.00 sec) to stop a coasting motor and restart it. More than one PM motor cannot be connected to a single drive. The maximum wiring distance between the drive and the PM motor must be 100 m.

Notes on Motor Operation


■ Motor Bearing Life

In applications involving constant speed over long periods, such as fans, pumps, extruders, and textile machinery, the life of the motor bearing may be shortened. This is called bearing electrolytic corrosion. The installation of a zero-phase reactor between the drive and motor, and the utilization of a motor with insulated bearings are effective countermeasures. Details can be found in the technical documentation. Contact your Yaskawa or nearest sales representative for more information.

Using a Standard Motor

■ Low Speed Range

There is a greater amount of loss when operating a motor using an drive than when running directly from line power. With a drive, the motor can become quite hot due to the poor ability to cool the motor at low speeds. The load torque should be reduced

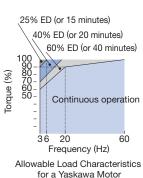

accordingly at low speeds. The figure above shows the allowable load characteristics for a Yaskawa standard motor. A motor designed specifically for operation with a drive should be used when 100% continuous torque is needed at low speeds.

■ Insulation Tolerance

Consider voltage tolerance levels and insulation in applications with an input voltage of over 440 V or particularly long wiring distances. Use a drive motor that has been equipped with isolation countermeasures.

■ High Speed Operation

Problems may occur with the motor bearings and dynamic balance in applications operating at over 60 Hz. Contact Yaskawa for consultation.

■ Torque Characteristics

Torque characteristics differ when operating directly from line power. The user should have a full understanding of the load torque characteristics for the application.

■ Vibration and Shock

The motor may generate vibrations in the following circumstances.

(1) Resonance

Take particular caution when using a variable speed drive for an application that is conventionally run from line power at a constant speed. Shockabsorbing rubber should be installed around the base of the motor and the Jump Frequency selection should be enabled to prevent resonance.

- (2) Any imperfection on a rotating body increases vibration with speed. Caution should be taken when operating above the motor rated speed.
- (3) Subsynchronous Resonance Subsynchronous resonance may occur in fans, blowers, turbines, and other applications with high load inertia, as well as in motors with a relatively long shaft. Yaskawa recommends using Closed Loop Vector Control for such applications.

■ Audible Noise

Noise created during run varies by the carrier frequency setting. Using a high carrier frequency creates about as much noise as running from line power. Operating above the rated speed (i.e., above 60 Hz), however, can create unpleasant motor noise.

Using a Highly Efficient Motor

■ IE3 Motor

The IE3 motor has superior features compared to the standard IE1 motors. Contact Yaskawa for technical documents.

Refer to Using a PM Motor below for more information on highly efficient motor using PM motors.

Using a PM Motor

- If using a motor other than the Yaskawa PM motor, contact your Yaskawa or nearest sales representative.
- If the motor must be run using commercial power supply, use an IM motor.
- A single drive is not capable of running multiple PM motors at the same time. Use a standard induction motor for such setups.
- When starting in Open Loop Vector Control for PM, the half rotation angle (electrical angle) of the motor may rotate reverse.
- The starting torque varies depending on the control mode and motor being used. Set up the motor with the drive after verifying the starting torque, allowable load characteristics, impact load tolerance, and speed control range. To use the device beyond these ranges, contact a Yaskawa representative or salesperson.
- Even with a braking resistor, braking torque is less than 125% when running between 20% to 100% speed, and falls to less than half the braking torque when running at less than 20% speed in Open Loop Vector Control for PM.
- In Open Loop Vector Control for PM, the allowable load inertia moment is 50 times less than the motor inertia moment. Use Closed Loop Vector Control for PM for applications exceeding this value.
- When using a holding brake in Open Loop Vector Control for PM, release the brake prior to starting the motor. Failure to set the proper timing can result in speed loss. Conveyor, transport, and hoist applications using a holding brake should run an IPM motor in Closed Loop Vector Control for PM. Do not use this for conveyor machines and gravity load applications such as elevators in particular.

■ In Open Loop Vector Control, use the Short Circuit Braking function to stop the motor so that the motor coasting at a speed of at least 200 Hz can be started. A specialized braking resistor is required to use the Short Circuit Braking function. Contact a Yaskawa representative or salesperson for more information. Speed Search can be used to restart a coasting motor rotating slower than 200 Hz. If the motor cable is relatively long, however, the motor should instead be stopped using Short Circuit Braking function and then restarted.

Note: Short Circuit Braking creates a short-circuit in the motor windings to forcibly stop a coasting motor.

- EZ Open Loop Vector Control is also able to drive SynRM (synchronous reluctance motor). Contact Yaskawa or your nearest sales representative for details.
- If PG fails using a PM motor with PG and is replaced, maintain the state where the motor can be rotated and perform Z Pulse Offset Tuning (Rotational Auto-Tuning) and PM Rotational Auto-Tuning.
- If oC (Overcurrent), STPo (Pull-Out Detection) or LSo (LSo Fault) is displayed on the keypad when restarting the motor, use search retry and Short Circuit Braking when starting the motor, and adjust accordingly.

Applications with Specialized Motors

■ Multi-Pole Motor

Because the rated current will differ from a standard motor, be sure to check the maximum current when selecting a drive. Always stop the motor before switching between the number of motor poles. If a regenerative overvoltage fault occurs or if overcurrent protection is triggered, the motor will coast to stop.

Submersible Motor

Because motor rated current is greater than a standard motor, select the drive capacity accordingly. Be sure to use a large enough motor cable to avoid decreasing the maximum torque level on account of voltage drop caused by a long motor cable.

■ Explosion-Proof Motor

Both the motor and drive need to be tested together to be certified as explosion-proof. The drive is not for explosion proof areas.

An explosion-proof pulse generators (PG) is used for an explosion-proof with voltage tolerance. Use a specially designed pulse coupler between the drive and the PG when wiring.

■ Geared Motor

Continuous operation specifications differ by the manufacturer of the lubricant. Due to potential problems of gear damage when operating at low speeds, be sure to select the proper lubricant. Consult with the manufacturer for applications that require frequencies in excess of the rated frequency.

■ Single-Phase Motor

Variable speed drives are not designed for operating single phase motors. Using a capacitor to start the motor causes high-frequency current to flow into the capacitors, potentially causing damage. A split-phase start or a repulsion start can end up burning out the starter coils because the internal centrifugal switch is not activated. GA700 is for use only with 3-phase motors.

■ Motor with Brake

Caution should be taken when using a drive to operate a motor with a built-in holding brake. If the brake is connected to the output side of the drive, it may not release at start due to low voltage levels. A separate power supply should be installed for the motor brake. Motors with a built-in brake tend to generate a fair amount of noise when running at low speeds.

Power Driven Machinery

Continuous operation at low speeds wears on the lubricating material used in gear box type systems to accelerate and decelerate power driven machinery. Note also that operation at a frequency exceeding the rated frequency can cause problems with the power transmission mechanism, including audible noise, performance life, and durability due to centrifugal force.

Warranty

Warranty Information

■ Warranty Period

The period is 12 months from the date the product is first used by the buyer, or 18 months from the date of shipment, whichever occurs first.

■ Post-Warranty Repair Period

The post-warranty repair period applies to products that are not in the standard warranty period.

During the post-warranty repair period, Yaskawa will repair or replace damaged parts for a fee.

There is a limit to the period during which Yaskawa will repair or replace damaged parts.

Contact Yaskawa or your nearest sales representative for more information.

Warranty Scope

Failure diagnosis

The primary failure diagnosis shall be performed by your company as a rule.

By your company's request, however, we or our service sector can execute the work for your company for pay. In such a case, if the cause of the failure is in our side, the work is free.

Repair

When a failure occurred, repairs, replacement, and trip to the site for repairing the product shall be free of charge. However, the following cases have to be paid.

- · Cases of failure caused by inappropriate storing, handling, careless negligence, or system design errors performed by you or your customers.
- · Cases of failure caused by a modification performed by your company without our approval.
- · Cases of failure caused by using the product beyond the specification range.
- · Cases of failure caused by force majeure such as natural disaster and fire.
- · Cases in which the warranty period has expired.
- · Cases of replacement of consumables and other parts with limited service life.
- · Cases of product defects caused by packaging or fumigation processing.
- · Cases of malfunction or errors caused by programs created by you using DriveWorksEZ.
- · Other failures caused by reasons for which Yaskawa is not liable.

The services described above are available in Japan only. Please understand that failure diagnosis is not available outside of Japan. If overseas after-sales service is desired, consider registering for the optional overseas after-sales service contract.

Exception of Guaranteed Duty

Lost business opportunities and damage to your property, including your customers and other compensation for work, is not covered by the warranty regardless of warranty eligibility, except when caused by product failure of Yaskawa products.

Definition of Delivery

For standard products that are not set or adjusted for a specified application, Yaskawa considers the product delivered when it arrives at your company and Yaskawa is not responsible for on-site adjustments or test runs.

General Safety

Exclusion of Liability

- · This product has been manufactured for variable speed applications of three-phase AC motors for general industry.
- · Contact a Yaskawa representative or your Yaskawa sales representative if you are considering the application of this product for special purposes where its failure or malfunction could cause a loss of human life or physical injury, such as machines or systems used for nuclear power, airplanes and aerospace, traffic, medicine, or safety devices.
- · Yaskawa has manufactured this product with strict quality-control guidelines. Install applicable safety devices to minimize the risk of accidents when you install the product where its failure could cause a loss of human life, physical injury, or a serious accident.
- · Only approved personnel should install, wire, maintain, inspect, replace parts, and repair the drive.
- · Use this product only for loads with three-phase AC motors.

■ Export Controls

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply.

MEMO

Global Service Network



Region	Service Area	Service Location	Service Agency	Telephone/Fax
North America	U.S.A.	Chicago (HQ) Los Angeles San Francisco New Jersey Boston Ohio North Carolina	①YASKAWA AMERICA INC.	Headquarters +1-847-887-7000 FAX +1-847-887-7370
	Mexico	Mexico City	❷PILLAR MEXICANA. S.A. DE C.V.	+52-555-660-5553 FAX +52-555-651-5573
South	Brazil	São Paulo	€YASKAWA ELÉTRICO DO BRASIL LTDA.	+55-11-3585-1100 FAX +55-11-3585-1187
America	Colombia	Bogota	OVARIADORES LTD.A.	☎ +57-1-795-8250
Europe	Europe, South Africa	Frankfurt	9YASKAWA EUROPE GmbH	+49-6196-569-300 FAX +49-6196-569-398
	Japan o	Tokyo, offices nationwide	SYASKAWA ELECTRIC CORPORATION (Manufacturing, sales)	+81-3-5402-4502 FAX +81-3-5402-4580
			YASKAWA ELECTRIC CORPORATION (After-sales service)	+81-3-6759-9967 FAX +81-4-2965-3632
	South Korea	Seoul	③YASKAWA ELECTRIC KOREA CO., LTD. (Sales)	+82-2-784-7844 FAX +82-2-784-8495
	Anyang		+82-1522-7344 FAX +82-31-379-6280	
	China	Beijing, Guangzhou, Shanghai	●YASKAWA ELECTRIC (CHINA) CO., LTD.	+86-21-5385-2200 FAX +86-21-5385-3299
	Taiwan	Taipei	19 YASKAWA ELECTRIC TAIWAN CORPORATION	+886-2-8913-1333 FAX +886-2-8913-1513
Asia	Singapore Singapore -	②YASKAWA ASIA PACIFIC PTE.LTD. (Sales)	+65-6282-3003 FAX +65-6289-3003	
		®YASKAWA ASIA PACIFIC PTE. LTD. (After-sales service)	+65-6282-1601 FAX +65-6282-3668	
	Thailand	Bangkok	OYASKAWA ELECTRIC (THAILAND) CO., LTD.	+66-2-017-0099 FAX +66-2-017-0090
	Ho Chi Minh Vietnam Hanoi	⊕YASKAWA ELECTRIC VIETNAM CO., LTD.	+84-28-3822-8680 FAX +84-28-3822-8780	
			+84-24-3634-3953 FAX +84-24-3654-3954	
	India	Bengaluru	®YASKAWA INDIA PRIVATE LIMITED	+91-80-4244-1900 FAX +91-80-4244-1901
	Indonesia	Jakarta	ØPT. YASKAWA ELECTRIC INDONESIA	☎ +62-21-2982-6470 FAX +62-21-2982-6471
Oceania	Australia New Zealand		Contact to service agency in Singapore (1918).	

DRIVE CENTER (INVERTER PLANT)

2-13-1, Nishimiyaichi, Yukuhashi, Fukuoka, 824-8511, Japan Phone +81-930-25-2548 Fax +81-930-25-3431 http://www.yaskawa.co.jp

YASKAWA ELECTRIC CORPORATION

New Pier Takeshiba South Tower, 1-16-1, Kaigan, Minatoku, Tokyo, 105-6891, Japan Phone +81-3-5402-4502 Fax +81-3-5402-4580 http://www.yaskawa.co.jp

YASKAWA AMERICA, INC.

2121, Norman Drive South, Waukegan, IL 60085, U.S.A. Phone +1-800-YASKAWA (927-5292) or +1-847-887-7000 Fax +1-847-887-7310 http://www.yaskawa.com

YASKAWA ELÉTRICO DO BRASIL LTDA.

777, Avenida Piraporinha, Diadema, São Paulo, 09950-000, Brasil Phone +55-11-3585-1100 Fax +55-11-3585-1187 http://www.yaskawa.com.br

YASKAWA EUROPE GmbH

Hauptstraβe 185, 65760 Eschborn, Germany Phone +49-6196-569-300 Fax +49-6196-569-398 http://www.yaskawa.eu.com E-mail: info@yaskawa.eu.com

YASKAWA ELECTRIC KOREA CORPORATION

35F, Three IFC, 10 Gukjegeumyung-ro, Yeongdeungpo-gu, Seoul, 07326, Korea Phone +82-2-784-7844 Fax +82-2-784-8495 http://www.yaskawa.co.kr

YASKAWA ASIA PACIFIC PTE. LTD.

30A Kallang Place, #06-01 Singapore 339213 Phone +65-6282-3003 Fax +65-6289-3003 http://www.yaskawa.com.sg

YASKAWA ELECTRIC (THAILAND) CO., LTD.

59, 1st-5th Floor, Flourish Building, Soi Ratchadapisek 18, Ratchadapisek Road, Huaykwang, Bangkok 10310, Thailand Phone +66-2-017-0099 Fax +66-2-017-0799 http://www.yaskawa.co.th

PT. YASKAWA ELECTRIC INDONESIA

Secure Building-Gedung B Lantai Dasar & Lantai 1 Jl. Raya Protokol Halim Perdanakusuma, Jakarta 13610, Indonesia Phone +62-21-2982-6470 Fax +62-21-2982-6471 http://www.yaskawa.co.id/

YASKAWA ELETRIC VIETNAM CO., LTD HO CHI MINH OFFICE Suite 1904A, 19th Floor Centec Tower, 72-74 Nguyen Thi Minh Khai Street, Ward 6, District 3, Ho Chi Minh City, Vietnam Phone +84-28-3822-8680 Fax +84-28-3822-8780

YASKAWA ELETRIC VIETNAM CO., LTD HA NOI OFFICE

2nd Floor, Somerset Hoa Binh Hanoi, No. 106, Hoang Quoc Viet Street, Cau Giay District, Hanoi, Vietnam Phone +84-24-3634-3953 Fax +84-24-3654-3954

YASKAWA ELECTRIC (CHINA) CO., LTD.

22F, Link Square 1, No.222, Hubin Road, Shanghai, 200021, China Phone +86-21-5385-2200 Fax +86-21-5385-3299 http://www.yaskawa.com.cn

YASKAWA ELECTRIC (CHINA) CO., LTD. BEIJING OFFICE

Room 1011, Tower W3 Oriental Plaza, No.1 East Chang An Ave., Dong Cheng District, Beijing, 100738, China Phone +86-10-8518-4086 Fax +86-10-8518-4082

YASKAWA ELECTRIC TAIWAN CORPORATION

12F, No. 207, Sec. 3, Beishin Rd., Shindian Dist., New Taipei City 23143, Taiwan Phone: +886-2-8913-1333 Fax: +886-2-8913-1513 or +886-2-8913-1519 http://www.yaskawa.com.tw

YASKAWA INDIA PRIVATE LIMITED

#17/A, 2nd Main, Electronic City, Phase-I, Hosur Road, Bengaluru 560 100, India Phone +91-80-4244-1900 Fax +91-80-4244-1901 http://www.yaskawaindia.in

Certified for ISO9001 and ISO14001





JQA-QMA14913 JQA-EM0202

YASKAWA ELECTRIC CORPORATION

Specifications are subject to change without notice for ongoing product modifications

© 2016 YASKAWA ELECTRIC CORPORATION

